

– 7871 - 7872 - 7875 - 7876 –



7871-7872-7875-7876

EXPERT TV METERS

USER MANUAL

This product contains one or more programs protected under international and US copyright laws as unpublished works. They are confidential and proprietary to Dolby laboratories. Their reproduction or disclosure, in whole or in part, or the production of derivative works there from without the express permission of Dolby Laboratories is prohibited. Copyright 2003-2005 by Dolby Laboratories. All rights reserved.

Thank you for purchasing this SEFRAM product and therefore trusting our company. Our different teams (research department, production, sales department, after-sales service...) are aiming at satisfying your wishes by designing and updating very advanced appliances.

To obtain the best performance from this product please read this manual carefully.

For more information please contact our different services



E-mail Sales department: sales@sefram.fr

E-mail After-sales: sav@sefram.fr

E-mail Technical support: support@sefram.fr

Fax: +33 (0)4 77 57 23 23

Web: www.sefram.fr



Copyright Sefram, 2013. All rights reserved.

Any total or partial reproduction of this document must be submitted for Sefram written authorisation.

GUARANTEE

Your instrument is guaranteed for two years for labor and parts against any manufacturing defect and/or functioning hazard. This guarantee extends from the delivery date and ends 730 calendar days later.

In case of guarantee contract, this will cancel or replace these guarantee conditions hereabove.

The guarantee conditions by SEFRAM are available on the website www.sefram.com. The general guarantee conditions should prevail on the following conditions that they sum up.

This guarantee does not cover the result of any abnormal use, handling mistake or mistake in the storage conditions outside the defined range.

In case of application of the guarantee, the user shall return, at its own expenses, the relevant appliance to our factory:

SEFRAM Instruments & Systèmes
Service Après-Vente
32, Rue Edouard MARTEL
BP 55
42009 SAINT-ETIENNE CEDEX 2

And add a description of the observed breakdown to the appliance.

The standard supplies provided with the appliance (cables, outlets...), the consumables (batteries ...) and the optional supplies (suitcases...) are guaranteed for 3 months against any manufacturing defect.

Such items as a suitcase, a LCD screen or a touchpad are guaranteed only for a normal use.

The guarantee does not cover wearing, accidental breaks or consecutive to a shock or any abnormal use.

The factory options integrated to the appliance are guaranteed for the same duration as the appliance itself.

In case of replacement or repair of the product, the remaining guarantee duration shall be:

- The remaining duration of the guarantee if the appliance is still under guarantee
- If the guarantee duration is less than 90 days, the replaced part is guaranteed for 90 days

Any replacement part becomes the property of the user and the exchanged parts become the property of SEFRAM.

In case of intervention by an insurance company, the product becomes the property of the insurance company upon its exclusive request. Else, it shall remain property of the user.

The guarantee covers exclusively the materials manufactured and provided by SEFRAM.

Any intervention by the user or any third party without prior authorization by the company voids the guarantee.

The user shall be responsible for the return of its appliance to our site. Hence, it shall provide for a conditioning that shall correctly protect the appliance while shipping. It shall subscribe, at its own expenses, any insurance required for the transport.

The SEFRAM company reserves the right to refuse any product wrongly conditioned and not to take in charge any break consecutive to the transport.

Particular case of the battery: There is a Li-ion battery as a standard equipment of this appliance. It shall not be transported outside the appliance. In no case shall the user replace it. Its replacement in the factory is necessary to check the charge system and the protective securities.

What to do in case of malfunction?

In case of malfunction or for any advice for use, please contact the technical support by SEFRAM Instruments & Systèmes: 0825 56 50 50 / 2

A technician shall answer you and give you any information required to solve your problem.

What to do in case of failure?

In case of failure of your appliance, please contact the technical support: 0825 56 50 50 / 2

Some advice!

Some technical help!

SEFRAM Instruments & Systèmes commits itself to help you on the phone about the use of your appliance.
Please call or Technical Support:



Or e-mail:

support@sefram.fr

We thank you for your trust.

METROLOGY

The meteorological conditions of your measurement instrument are defined in the specifications of this notice. Climate and environmental conditions restrict the specifications of your Field Strength Measurer (MDC). SEFRAM checks the characteristics of each appliance one by one on an automatic bench during its manufacture. The adjustment and control are guaranteed under conditions of the ISO9001 certification by facilities in connection with the COFRAC (or equivalent in the context of ILAC reciprocity).

The specified characteristics are considered stable for a period of 12 months from the first use under normal conditions of use.

We recommend a check after 12 months and max. 24 months of use, then every 12 months after 24 months.

For any check of the characteristics, the following average climate conditions shall be maintained ($23^{\circ}\text{C} \pm 3^{\circ}\text{C}$ – $50(\pm 20)\% \text{RH}$). The MDC should have been working for 0,5 hour before check.

We recommend that you have this control made by our after-sales service (Service Après-Vente) for the best service and preservation of the measuring quality of your instrument.

When a MDC returns to SEFRAM, maximum service is provided with internal updating according to the required adjustments and software updates. In case of shift in the characteristics, your instrument shall be adjusted to recover its original characteristics.

PACKAGING

The packaging of this product is fully recyclable. Its design allows the transport of your instrument under the best possible conditions. Please note that the original packaging should be additionally wrapped in case of transport by air, road or postal.

TABLE OF CONTENTS

1	Important information.....	10
1.1	Particular precautions.....	10
1.2	Security instructions	10
1.3	Symbols and definitions	10
1.4	Conformity and restrictions of the appliance	11
2	Quick start-up.....	12
2.1	Presentation of the appliance.....	12
2.2	Signal spotting.....	13
2.2.1	Checking a ground antenna.....	13
2.2.2	Installation of a ground antenna.....	15
2.2.3	Installation of a satellite dish	16
3	Presentation	19
3.1	General.....	19
3.2	Description of the appliance.....	20
4	Power-up.....	22
4.1	Battery	22
4.2	Loading of the battery.....	22
4.3	External power supply	23
4.4	Turning the appliance on and off.....	23
5	Man-machine interface	24
5.1	Content of the screen.....	24
5.2	Changing a name or a value	26
5.2.1	Change inside a table	26
5.2.2	Change with selection.....	27
5.2.3	Change with virtual keyboard.....	27
5.3	Lists of measurements and setup library	28
6	AUTOSET mode	31
6.1	Terrestrial mode	32
6.2	Satellite mode.....	32
6.3	Cable mode (not available on 7871)	33
6.4	«START » menu key.....	33
7	Measurement lists.....	35
7.1	The List page.....	35
7.2	Modification of a list.....	36
8	Setup library	39
8.1	The Library page	39
8.2	Creation or modification of setups in the library.....	39
9	Check Sat.....	42
9.1	Updating satellites	43
9.2	Check Sat function	44
9.3	Checking the aligned satellite	45

9.4	Double Check Sat	46
9.5	Alignment of the satellite dish	46
9.5.1	Electronic compass	47
9.5.2	Recall	48
10	The Measures-TV-Spectrum page	49
11	Measures	50
11.1	Autolock function	50
11.2	Modification of parameters	51
11.3	Level measurements	52
11.4	Satellite band	52
11.5	Terrestrial band.....	53
11.6	Thresholds	53
11.7	Digital measurements	54
11.8	DVB-T/H	55
11.9	DVB-T2	56
11.10	DVB-C (not available on 7871).....	57
11.11	DVB-S and DSS	58
11.12	DVB-S2	59
12	Spectrum analyser	60
12.1	Simplified Spectrum.....	60
12.2	Additional functions for satellite:	61
12.3	LTE mode:	61
12.4	Fill mode	61
12.5	NIT/TV mode	62
12.6	Expert spectrum (not available for 7871 and 7872)	63
12.6.1	Mode key.....	63
12.6.1.1	Display mode	63
12.6.1.2	Measures	64
12.6.1.3	Frequency	65
12.6.1.4	Cursor	65
13	Image and Sound	66
13.1	Digital TV	66
13.2	Full screen mode	66
13.3	Audio	67
13.4	Table of services.....	67
13.5	PID function	67
	The various PID are described under this function.	67
13.6	NIT function	68
13.7	ASI function (not available on 7871 and 7872)	68
13.8	Record function PVR (not available on 7871 and 7872)	69
13.9	Rights of access / Access card (not available on 7871).....	69
14	Remote power supply / LNB – DiSEqC	70
14.1	Terrestrial band.....	70
14.2	Satellite band	71

14.2.1	Launching.....	71
14.2.2	Switches.....	72
14.2.3	Positioner	73
14.2.4	SatCR mode.....	74
14.2.4.1	Automatic research of the slot frequencies	75
14.2.4.2	Influence of the SatCR mode on the spectrum analyzer	76
15	Constellation	77
16	Echo Guard interval	78
17	Measurement map.....	80
17.1	Values beyond tolerance	81
17.2	Graphics	82
18	MER/Carrier (not available for 7871).....	84
19	Configuration	85
19.1	Language.....	85
19.2	Expert mode (not available on 7871 and 7872)	85
19.3	Measurement unit	86
19.4	Frequency map.....	86
19.5	Saves	86
19.5.1	Visu	87
19.5.2	Save	88
19.5.3	Delete	89
19.6	Adjustment.....	89
19.6.1	Beep	89
19.6.2	Password	90
19.6.3	Background	90
19.6.4	Active USB port.....	91
19.6.5	Configuration	91
19.6.6	Import INI files	93
19.6.7	Update.....	95
19.7	LCD.....	95
19.8	Factory recovery	95
20	Software update	97
21	Save.....	98
22	Connection of the appliance to a PC.....	99
22.1	Required configuration	99
22.2	USB mini B interface.....	99
22.3	Ethernet interface	100
23	Multistream capability (7876 only).....	102
24	GPS option (7876 only).....	103
24.1	VIEW function	103
24.2	LOG function.....	103
24.3	MODE function	104
24.4	Recording a file.....	105

24.5	XFER2000 transfer software	106
24.6	GIS mapping software	108
25	Optical Power Measurement option (not available for 7871)	109
26	WIFI option (not available for 7871).....	110
27	HDMI Connection (not available for 7871)	111
28	Displayed messages.....	112
28.1	Alert messages	112
28.2	Error messages	113
29	Maintenance	114
30	Technical specifications.....	116
30.1	Common specifications	116
30.2	Accessories	119
30.3	V, dB μ V, dBmV et dBm conversion.....	119
30.4	Typical values for measurements.....	120
31	CE Declaration	121

1 Important information

Please read carefully the following instructions before using your appliance.

1.1 Particular precautions

- Do not use the product for any other use than specified.
- Use the provided charger unit to prevent any deterioration of the appliance and guarantee its measurement characteristics.
- Do not use in a wet environment.
- Do not use in an explosive environment.
- In case of failure or for the maintenance of the appliance, only a qualified personal shall be entitled to work on it. In such a case, it is required to use Sefram spare parts.
- Do not open the appliance: risk of electric shock.
- You should use the F/F or BNC/F adaptor provided with your measuring instrument. Any other adaptor could damage your appliance and jeopardizes the guarantee.
- Do not use gloves, stylus or any other object on to the touchscreen. Handle the screen carefully.

1.2 Security instructions

For a correct use of the appliance, it is necessary that users abide by the security and use instructions described in this manual.

Specific warnings appear all along this manual.

In case of need, warning symbols are displayed on the appliance:



1.3 Symbols and definitions

Symbols in this manual:



Remark: Shows important information



Key or press zone



Window or display zone showing up after the operation achieved

Symbols on the appliance:



Attention: Refer to the manual. Shows a risk of damage for the material connected to the instrument or to the instrument itself.



Ground: Grounded accessible parts.




Product for recycling.

1.4 Conformity and restrictions of the appliance

See chapter [EC Declaration of conformity](#).


2 Quick start-up

2.1 Presentation of the appliance

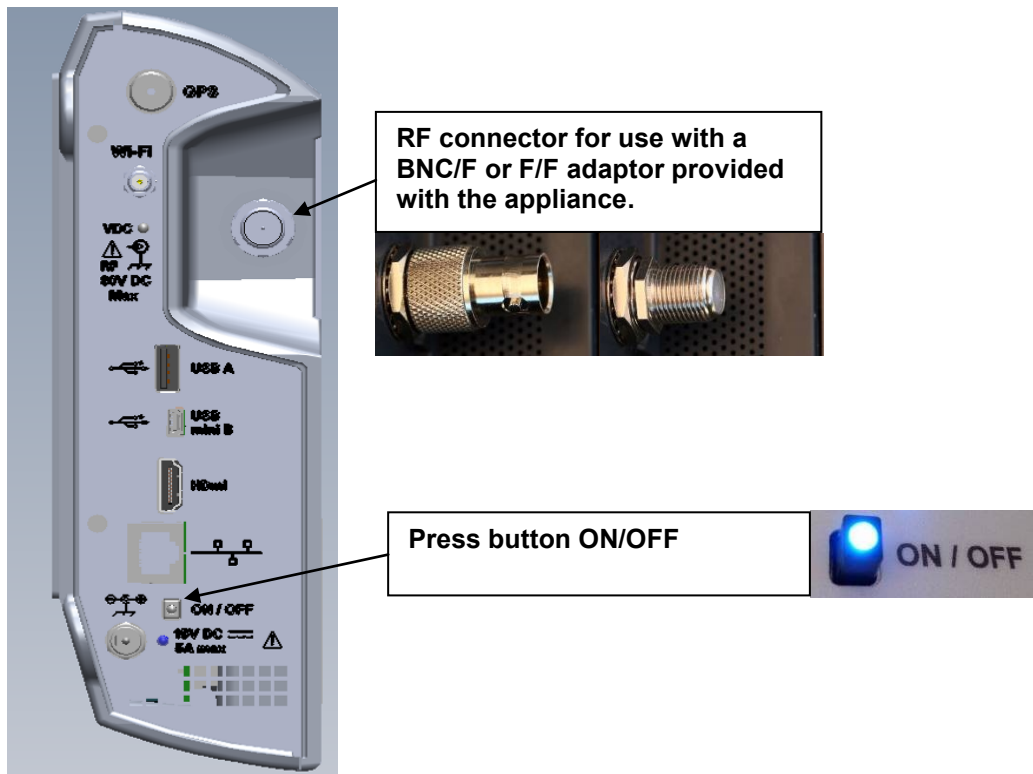

Important keys:

787X is an appliance with a capacitive touchscreen. This requires a soft handling. No glove and no stylus should be used, so that the triggering should be taken into account.


You will recognize the « keys » by their dark grey color (example: the home key: )


You may also access tables by pressing lines (on white or yellow)

375	TNT-HD
-	---
377	FR INTER
378	EUROPE 1


The Measurements/TV/Spectrum page is divided in four zones (TV with current service, Spectrum and Measurements). Pressing a zone displays this zone « full screen » or a selection among the services of the displayed channel.


Welcoming page:

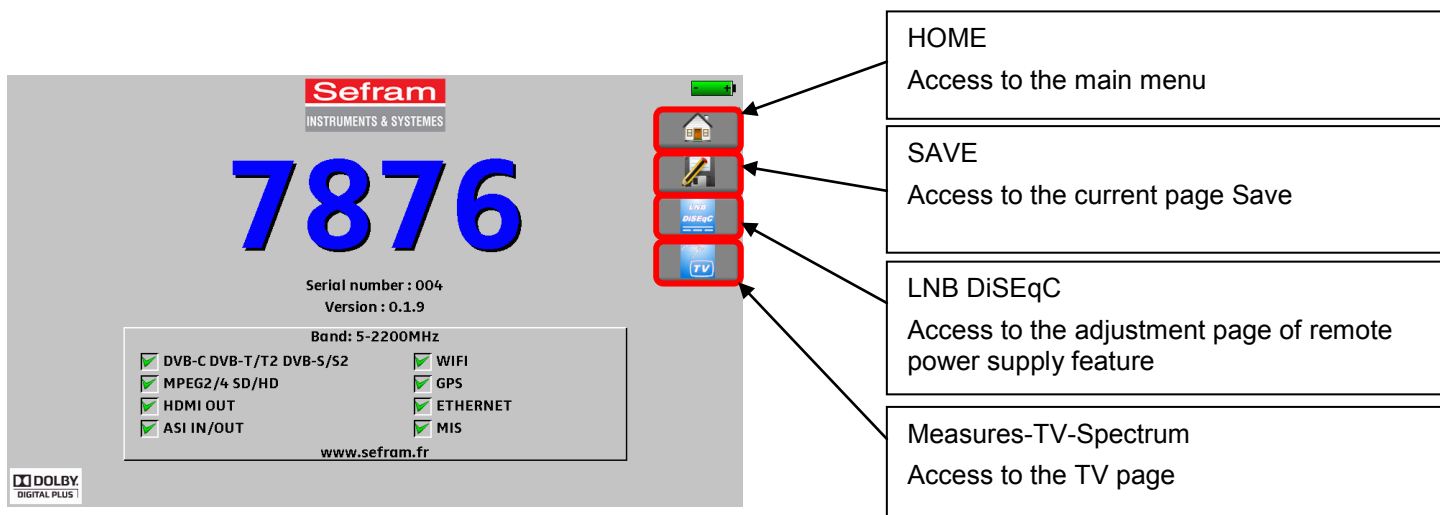



Attention: To exit a window like in this example below, press the key:



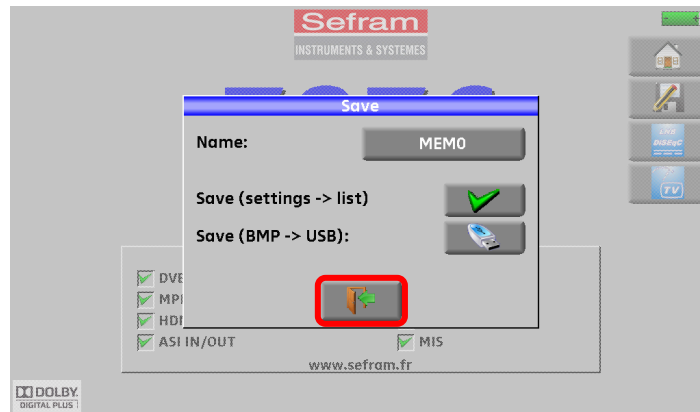

2.2 Signal spotting

The 787X allows spotting signals in ground or very quick satellite mode.

In the following chapter, we will see how to spot a signal on three types of installation:

- Checking of a ground antenna (the installation has already been made).
- Installation of a ground antenna.
- Installation of a satellite dish.

2.2.1 Checking a ground antenna

In this case, the Autotest function allows a scan of the channels that the antenna detects.

Plug the cable of your antenna to the 787X (take care to use an adequate adaptor)


Turn your appliance on. Press the Home key



The Home page appears on screen. Press Autotest





On this page, press Mode, Terrestrial, then select DVB-T and 8MHz (as here below)

The scan should range from the E2 to the E69 channels, frequency range Europe (you may reduce the number of channels to scan if you know the range of the emitter where the antenna points at: the scan will be faster)

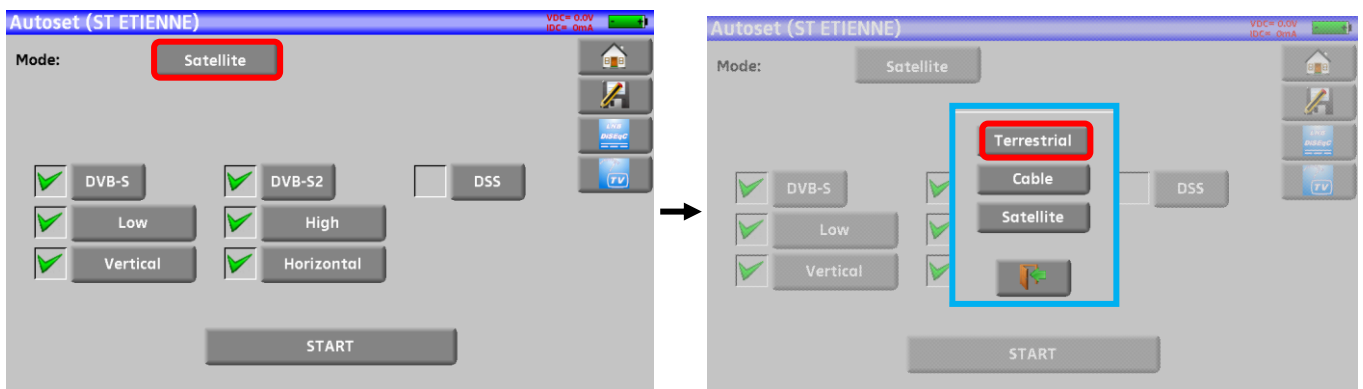

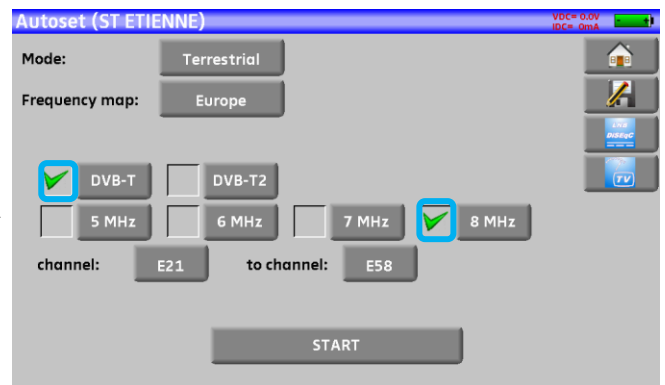
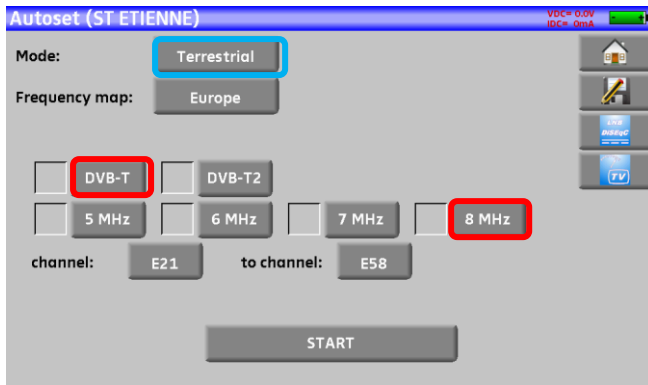


Press START. The appliance searches until the end of the scan and turns directly to the Measurement plan mode. If channels were found, the appliance makes measurements continuously (C/N-level, then BER/MER) on the detected channels. If no channel has been found, see the next chapter.

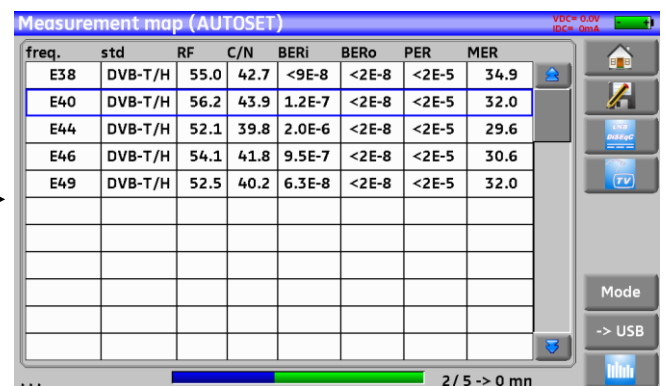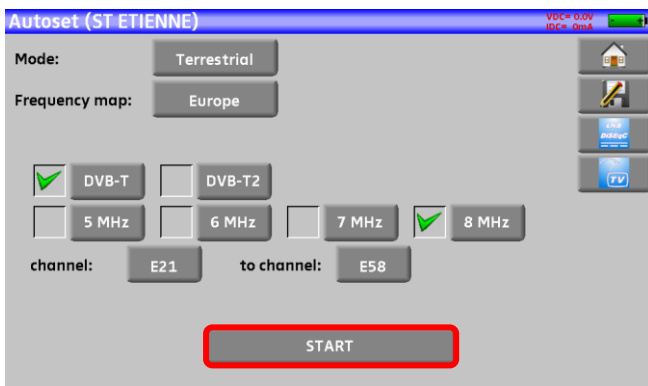

Eventually, press the TV measurement key. On this new page, press Prog, select the channel that you want to display.

Check the level, the BER/MER, the TV detection and the spectrum of the signal on this page...

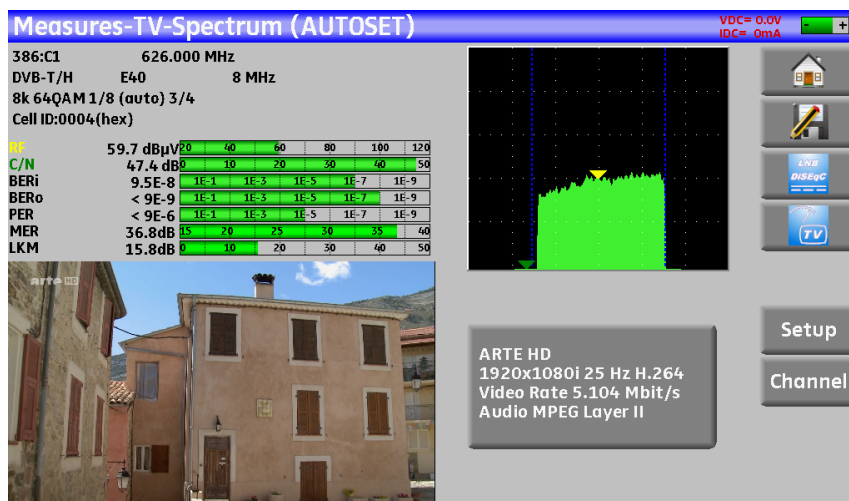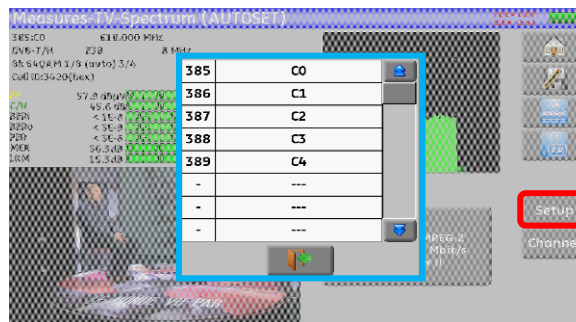

2.2.2 Installation of a ground antenna




Plug the cable of your antenna to the 787X (take care to use an adequate adaptor)

Turn your appliance on. Press the Measures-TV-Spectrum key





Press the Spectrum zone



Access to terrestrial mode if needed

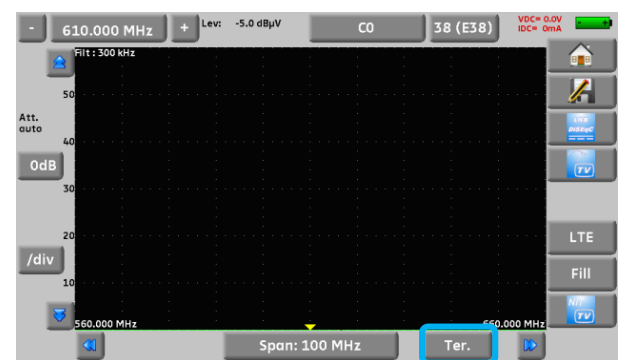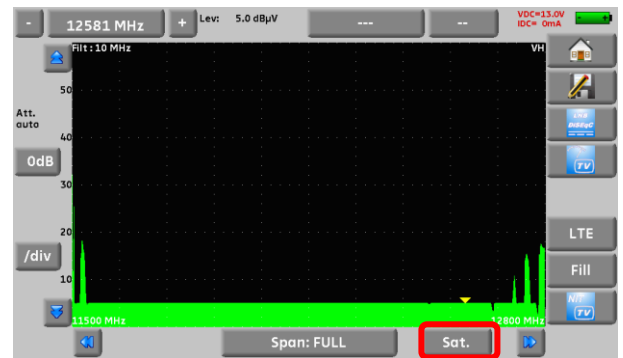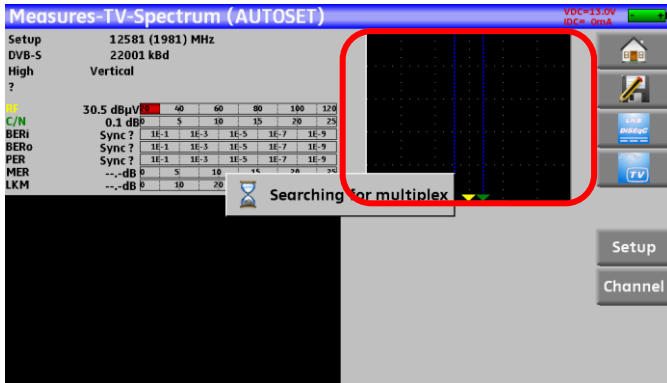


Access to full SPAN mode

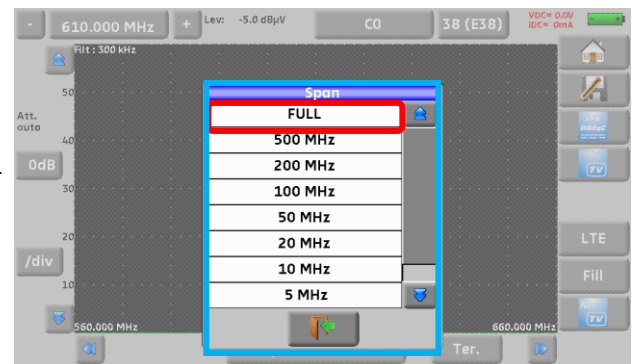
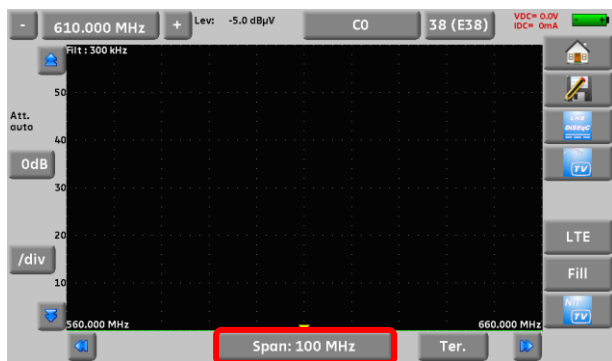


Adjust the antenna to get the most powerful signal possible

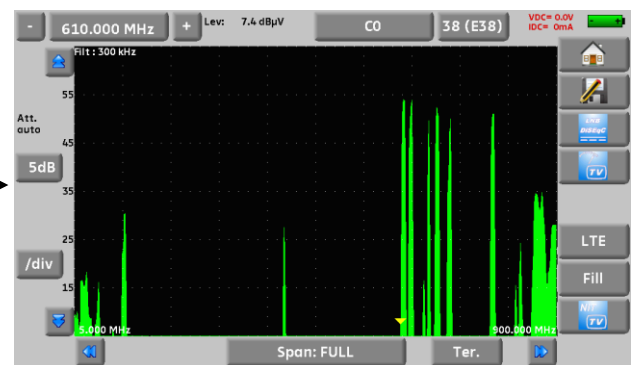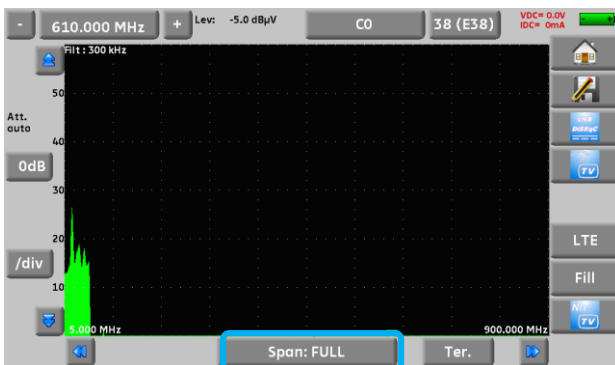


Press directly the signal you want in the spectrum (the cursor moves to where you press)

Press the NIT/TV key , the device find automatically all the parameters of the signal.

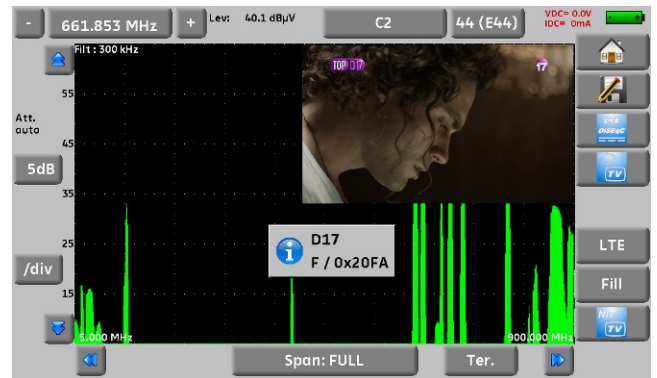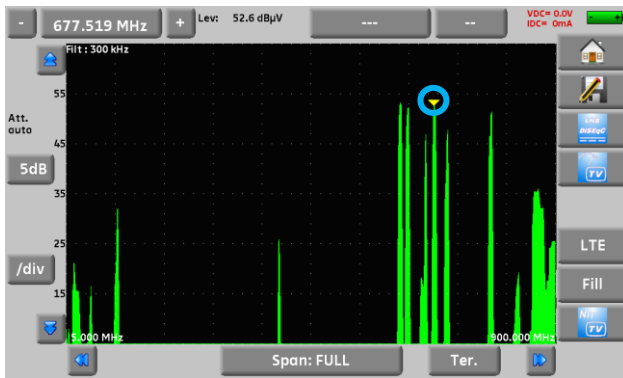

Press the Measures-TV-Spectrum key. You can now display the level, the BER/MER, the TV detection (with information about the current service) and the spectrum of the signal selected on the same page...

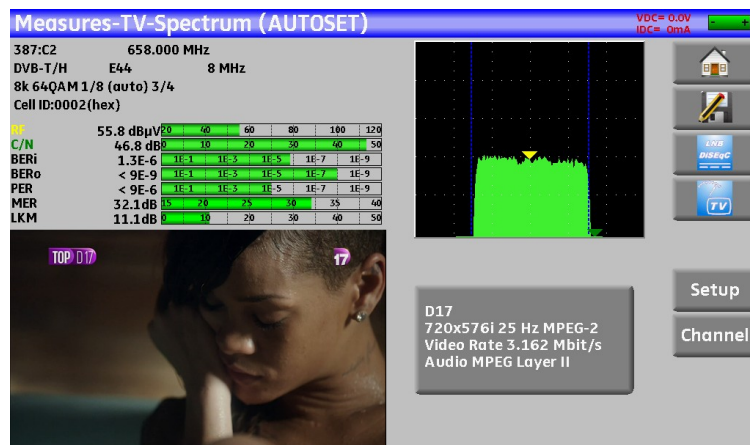

2.2.3 Installation of a satellite dish

Connect the satellite dish to the appliance.

Activate the remote power supply

To access to the Remote power supply page, press

To launch the remote power supply en route, press


launch the remote power supply:



Sat=Off ; Ter=Off



then select **ON** in the page to

A green check appears in front of what you validated


Press  and  to access the Check Sat mode

(the appliance already includes a list of satellites).

Select a satellite like in the example below (here Astra1):

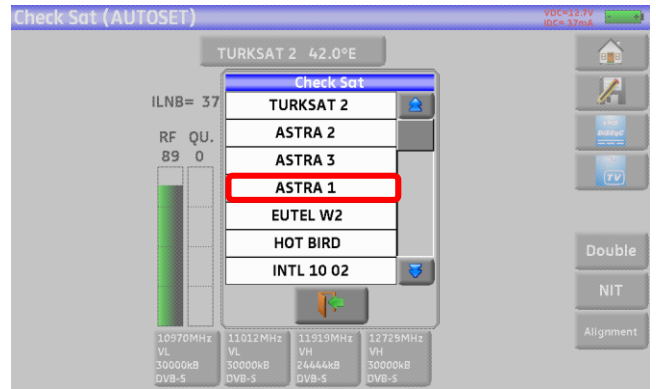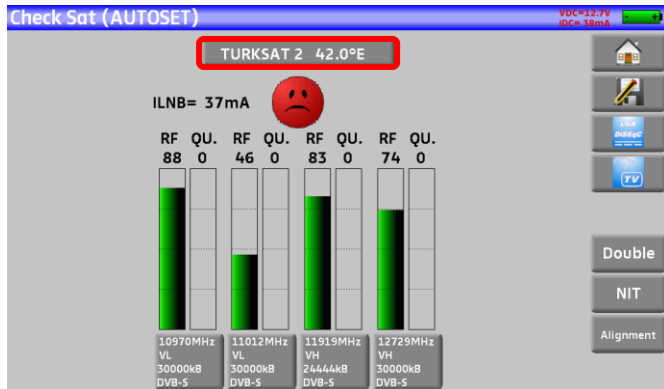

Slowly orientate the satellite dish until hearing the locking melody and getting the best quality

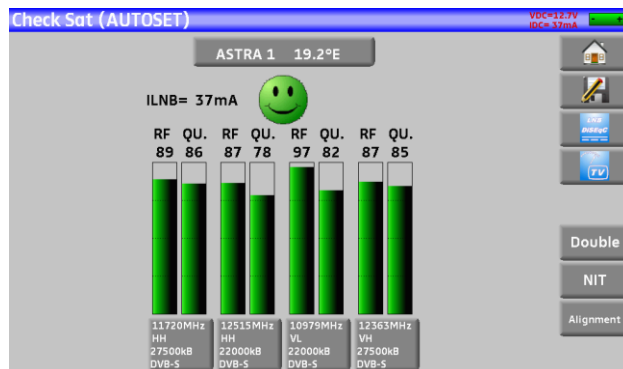

No found transponder → red smiley



Average reception quality (< 50%) → orange smiley




Good reception quality (> 50%) → green smiley

Reminder: transponder = satellite channel

To check if the aimed satellite is the right one: press the NIT key

The appliance searches the MPEG NIT table on one of the 4 transponders and displays the name of the satellite:

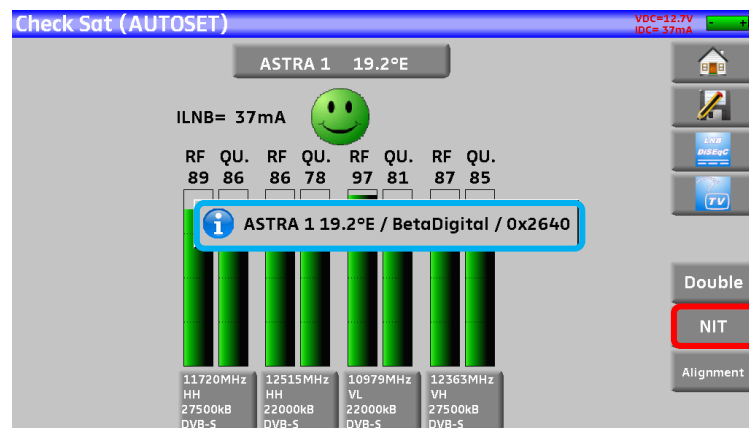



Attention: The displayed name depends on the content of the MPEG NIT table.
Some distributors provide no (or poor) such table.
The displayed information may be wrong.



Attention:
To identify a satellite, you must be « hooked » on all 4 transponders. (Quality > 0)
However, some transponders are regularly modified. See the frequency range of the satellite when a transponder does not seem to work.
Some switches or LNB work only with DiSEqC commands. In this case, position the band (OL) and the polarization on DiSEqC at the Configuration page LNB-DiSEqC.
(Attention: the Check Sat is slower when using the DiSEqC command).

For any additional information, our technical support is at your disposal:



E-mail: support@sefram.fr

3 Presentation

3.1 General

The field strength measurers **787X** are handy appliances designed for the installation and maintenance of any broadcasting and reception installations of analogical and digital terrestrial television channels, satellites or cable networks.

The band ranges between **5 MHz and 2150 MHz** (45 and 2200 MHz for the 7871); this allows accurate measurements on all analogical television standards, FM carrier waves and the various digital standards DVB-C, DVB-T/H, DVB-T2, DVB-S, DSS and DVB-S2.

They do **Level** measurements in average, peak and power according to the selected standard.

In **Measurement Plan** mode, they scan up to 50 setups at the same time and compare them to decision levels (min / max).

Equipped with an efficient **Error level** measurement (various BER, MER), they allow the full validation of digital transmissions DVB-T/H, DVB-T2, DVB-C (not available on 7871), DVB-S, DSS and DVB-S2.

Providing a **Constellation** diagram for DVB-T/H, DVB-T2, DVB-C (not available for 7871), DVB-S, DSS and DVB-S2, and the measurement and display of **Echoes and pre-echoes** in DVB-T/H et DVB-T2 to have a complete analysis of the digital signal.

You can measure and display of **MER per carrier** (not available for 7871).

The **Expert Spectrum** (7875 and 7876), analysis, quick and accurate, allows the display of the disturbances and the measurement of C/N, power...

You can display the **digital terrestrial or satellite TV** under SD or HD.

The Measures-TV-Spectrum mode allows the simultaneous display of the spectrum measurement and of the video of the one same signal.

A HDMI socket allows the transmission from HD video to TV (not available on 7871).


You can hear digital sound through integrated loudspeakers.

Designed for use on field, they are compact (less than 3 kg, battery included), autonomous (battery pack and quick charger), equipped with a LCD 10" touchscreen (capacitive).

The high memory content allows the storage of many configurations, measurements and spectrum curves.

Each appliance is fully remote-controlled through USB and ETHERNET connections via a computer.

3.2 Description of the appliance

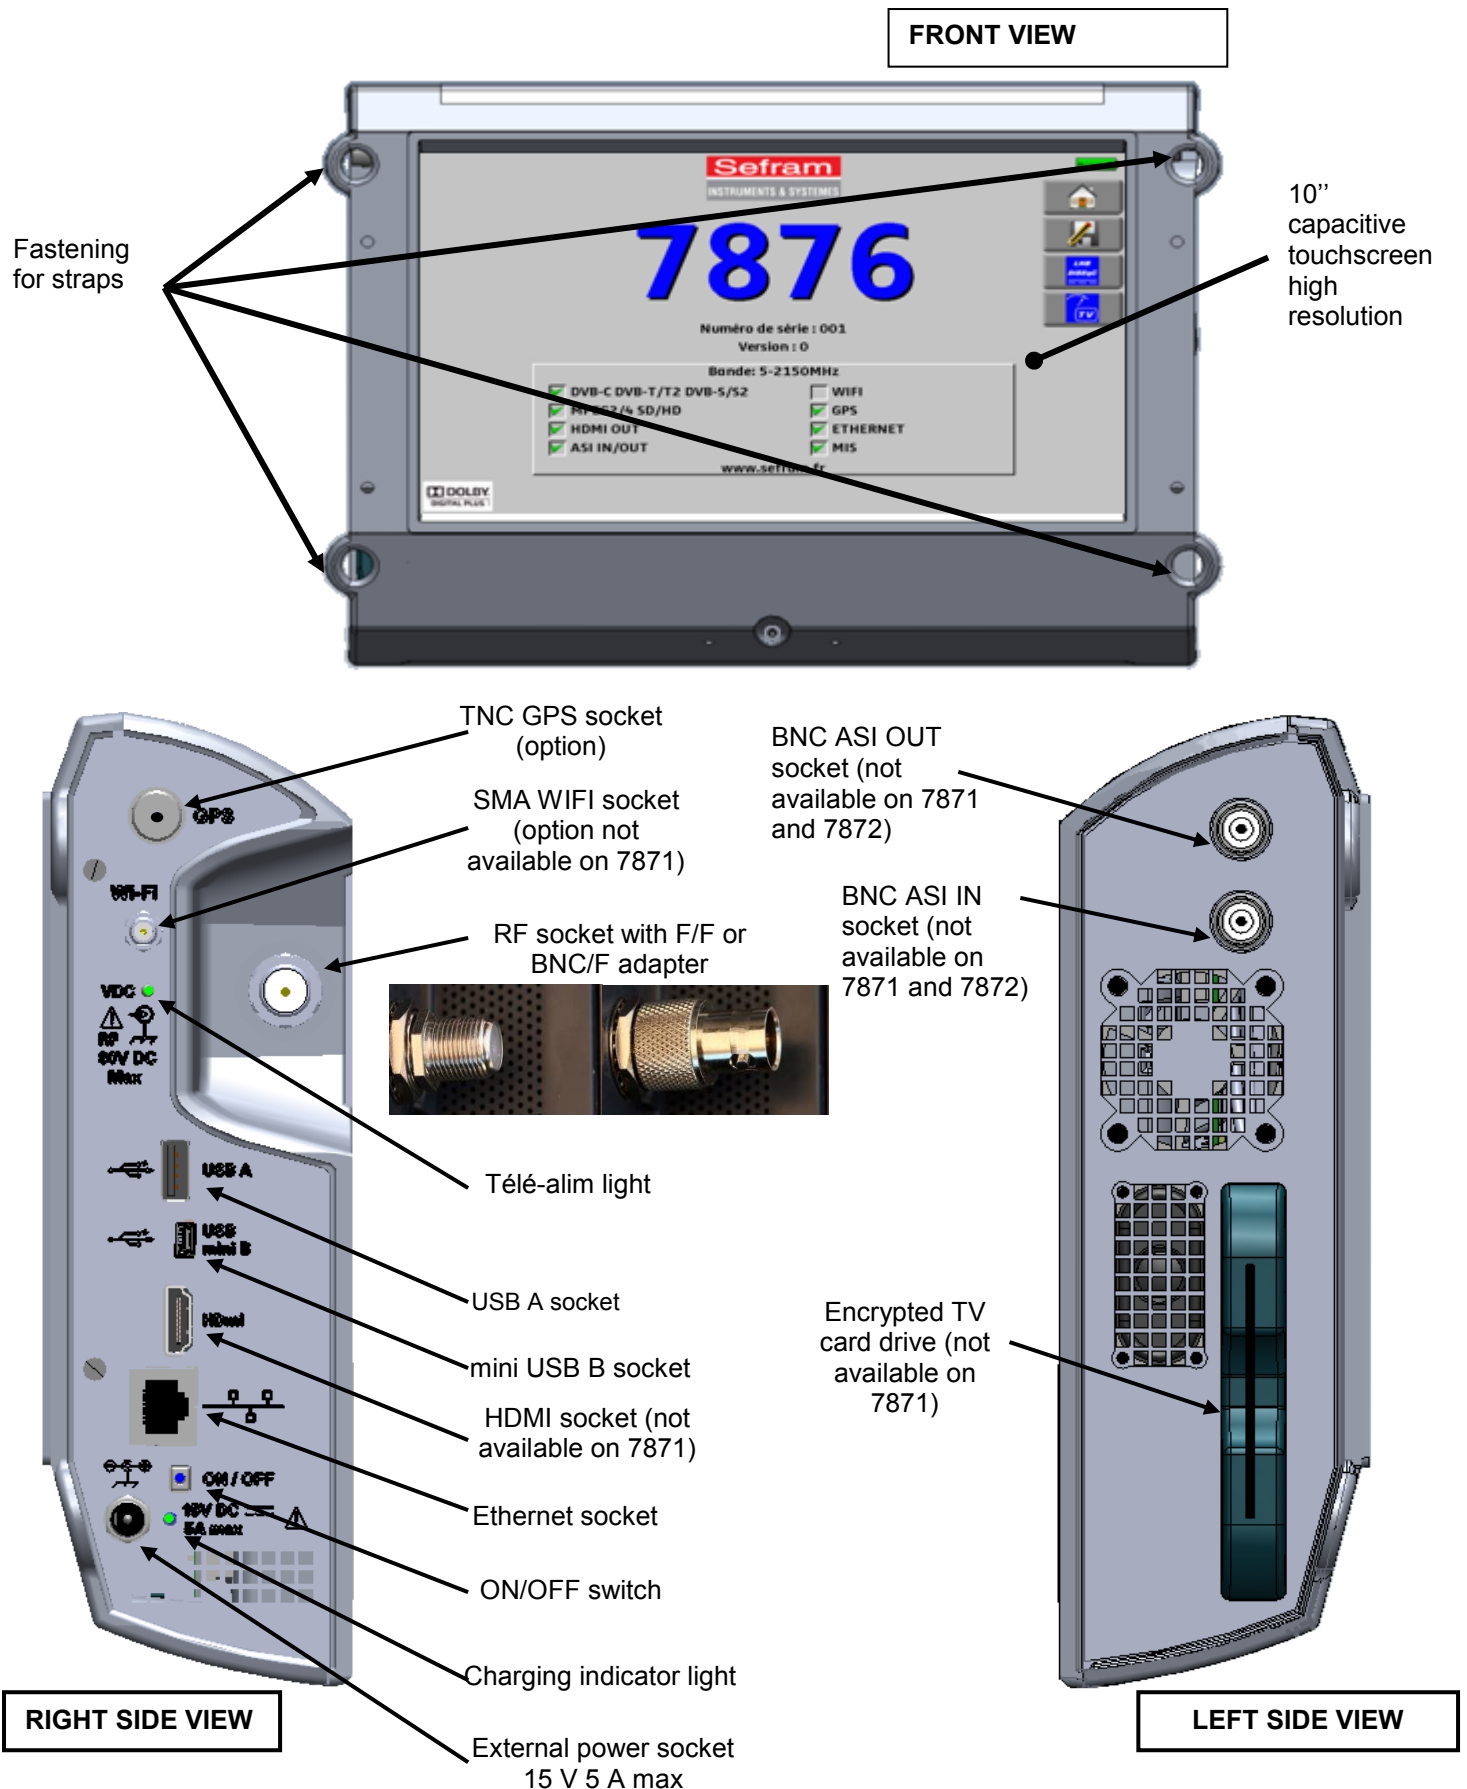

How to use the belts

For carrying properly your instrument, we suggest to set the belts as shown on the picture below (upside on the left and bottom on the right)



How to carry your instrument. A very convenient system to have your hands free.



4 Power-up

All the material is checked before shipment and delivered in an adapted packaging. There is no particular unpacking instruction.

The appliance is equipped with a Lithium-Ion (Li-ion) battery. It is shipped with the battery loaded.

However, if the appliance has remained idle more than one month long, check its charge state and reload if required.

4.1 Battery



Attention: Any intervention on the battery requires the disassembly of the appliance and should be made by a SEFRAM technician.
Use only batteries provided by SEFRAM.

Security advice:

- ➔ Do not throw into the fire or heat up the battery pack
- ➔ Do not shunt the parts of the battery: risk of explosion!
- ➔ Do not drill
- ➔ Do not disassemble the battery pack
- ➔ Do not reverse the polarities of the battery
- ➔ This battery pack includes a protective item that should not be damaged or removed
- ➔ Protect the pack from the heat while storing
- ➔ Do not damage the protective sheath of the pack
- ➔ Do not store the appliance in a vehicle under sunlight
- ➔ Used batteries are not for domestic waste; lithium batteries should be recycled.

The battery has a 200-charge-discharge cycle life or 2 years.

Advice to extend the life of your battery:

- ➔ Avoid deep discharges
- ➔ Do not store the batteries too long without using them
- ➔ Store the battery around 40% loading
- ➔ Do not fully charge or fully discharge the battery before storage.

When the battery is almost fully discharged, the appliance will warn “Low battery”, then will shut off after a few minutes.

4.2 Loading of the battery

To load the battery inside the appliance:

- Connect the external power supply provided through the jack plug of the appliance (on the right side)
- Connect the power supply on the mains
- The internal charger starts loading the battery; the green lamp lights up.



Loading will be faster if the **appliance is off** but will work if the appliance is on. Once the battery loaded, the lamp will shut off automatically.
Discharge the appliance only with the provided power supply block.

The battery is 80%-loaded after 1 hour 30 minutes. The total charge is reached after 2 hours 10 minutes.

4.3 External power supply

The appliance works under 15V (4.6 A) power supply. The power supply block provided is an external power supply too. Only use the power supply block provided with the appliance.

4.4 Turning the appliance on and off

Press the button on the right side of the appliance:

The entry page appears on screen.

The message “**Autotest: running**” is shortly displayed, then disappears.

Pressing this button turns the appliance off.



The ON/OFF button **lights up** when the appliance is working.
Pressing the ON/OFF button for a long time **forces the shut-off** of the appliance;
proceed this way only in case of necessity.

5 Man-machine interface

5.1 Content of the screen


787X is an appliance with a capacitive touchscreen. This requires a soft handling. No glove and no stylus should be used, so that the triggering should be taken into account.

You will recognize the « keys » by their dark grey color (example: the home key:




You can also select lines in tables.

In every pages (except the Home page), the appliance has four keys on top right of the screen: Home, Save, LNB DiSEqC and Measures-TV-Spectrum.

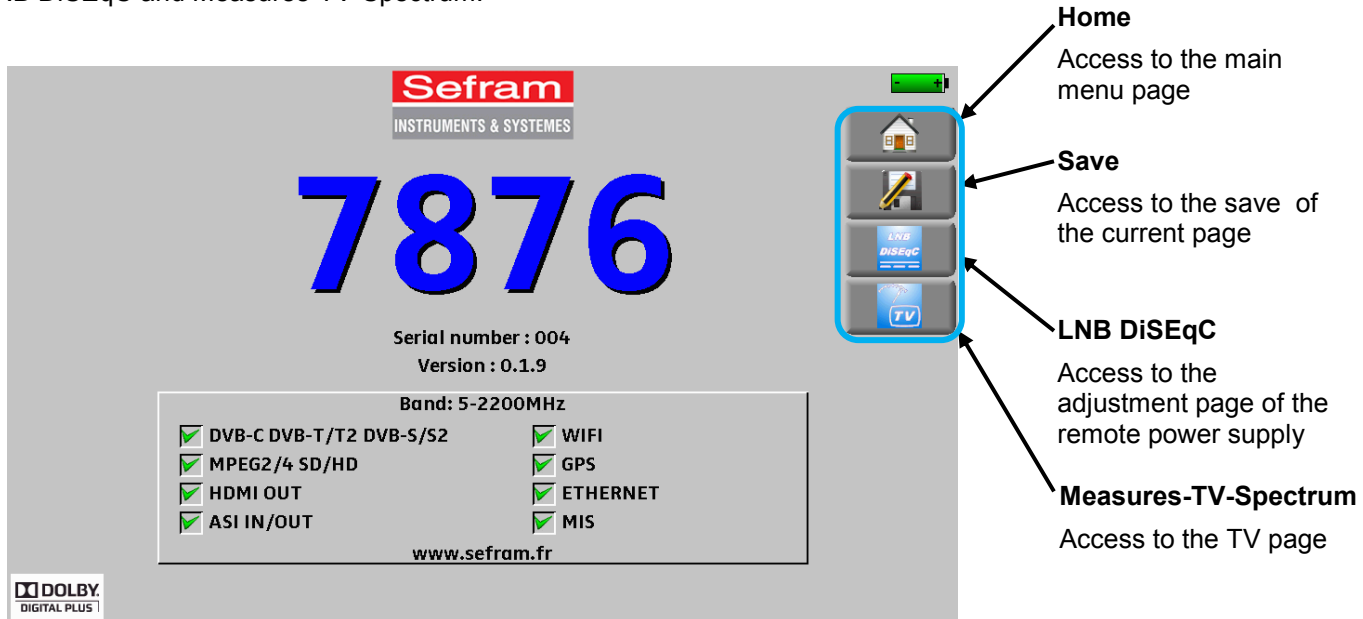

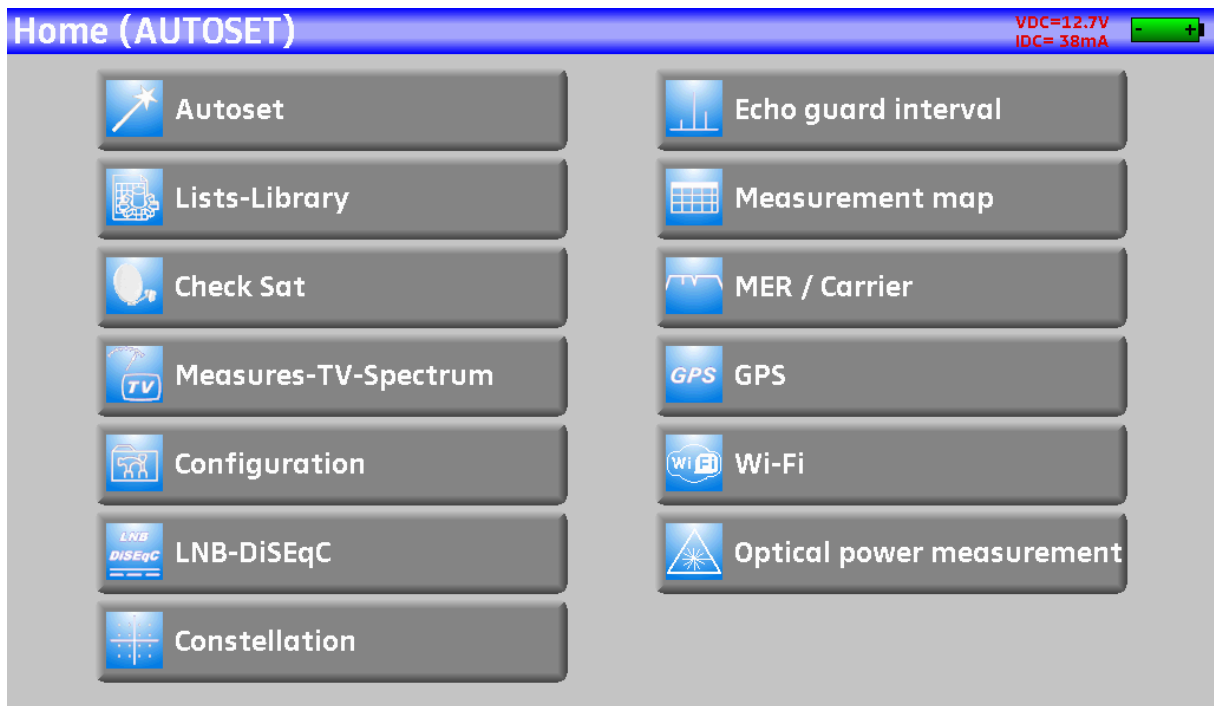

The Home page allows the navigation through all functions of the appliance. You will also find there the [LNB – DiSEqC](#) and [Measures-TV-Spectrum](#) functions, the [AUTOSET](#), [Lists](#), [Library](#), [Check Sat](#), [Configuration](#), [Constellation](#), [Echo Guard Interval](#), [Measurement map](#) and [MER/Carrier](#) (not available on 7871) keys, and the [GPS](#) (available on 7876), [WIFI](#) and [Measure of optical power](#) option (available on 7872, 7875 and 7876).



On all pages is displayed the following information:

Page title Site name Indication of the position of the switch or of the SatCR (position of the slot) Indication of the values Tension and Current of the remote power supply Indication of the state of the battery

 **Attention:** To display a window like this one below, you have to press the key 

To navigate through a table inside a page or a window, a vertical slide appears with arrows to move up and down the table.

To move faster, you can slide a cursor with your fingers.

Lists (AST+ST-ET)

List #: 9 AST+ST-ET Library

#	name	place	frequency	configuration
---	---	---	---	---
371	TNT-R1	ST-ETIENNE	E38	---
372	TNT-R2	ST-ETIENNE	E44	---
373	TNT-R3	ST-ETIENNE	E59	---
374	TNT-R4	ST-ETIENNE	E40	---
375	TNT-HD	ST-ETIENNE	E49	---
376	TNT-R6	ST-ETIENNE	E46	---
---	---	---	---	---
0	DIGITAL+	ASTRA 1	10729 VL	---
1	ARD	ASTRA 1	10743 HL	---

Annotations:

- Move up through the table (points to the up arrow)
- Cursor to navigate up or down (points to the vertical slide)
- Move down through the table (points to the down arrow)

5.2 Changing a name or a value

5.2.1 Change inside a table

You can select a setup in the table. In this case, you can validate a setup by pressing the line you want to display

In this example, you change from the TNT-R3 setup to the TNT-R4 in the Measure page:

Measures (AST+ST-ET)

371:TNT-R1 610.000 MHz

DVB-T/H E38 8 MHz

8k 64QAM 1/8 (auto) 3/4

Cell ID:3420(hex)

RF 58.1 dBμV

C/N 45.9 dB

BERi < 3E-8

BERo < 9E-9

PER < 9E-6

MER 35.9dB

LKM 14.9dB

Measures (AST+ST-ET)

371:TNT-R1 610.000 MHz

DVB-T/H E38 8 MHz

8k 64QAM 1/8 (auto) 3/4

Cell ID:3420(hex)

RF 58.1 dBμV

C/N 45.9 dB

BERi < 5E-8

BERo < 2E-9

PER < 2E-6

MER 35.9dB

LKM 14.9dB

Measures (AST+ST-ET)

374:TNT-R4 626.000 MHz

DVB-T/H E40 8 MHz

8k 64QAM 1/8 (auto) 3/4

Cell ID:0004(hex)

RF 59.8 dBμV

C/N 47.9 dB

BERi < 3E-8


BERo < 9E-9


PER < 9E-6

MER 33.6dB

LKM 12.6dB

5.2.2 Change with selection


When pressing a key, you may have a window with multiple choice. You only have to press the value you want to validate it. The  key allows you to cancel and exit this window, like in the example below. In this example, the bandwidth changes from 5 to 8 MHz:

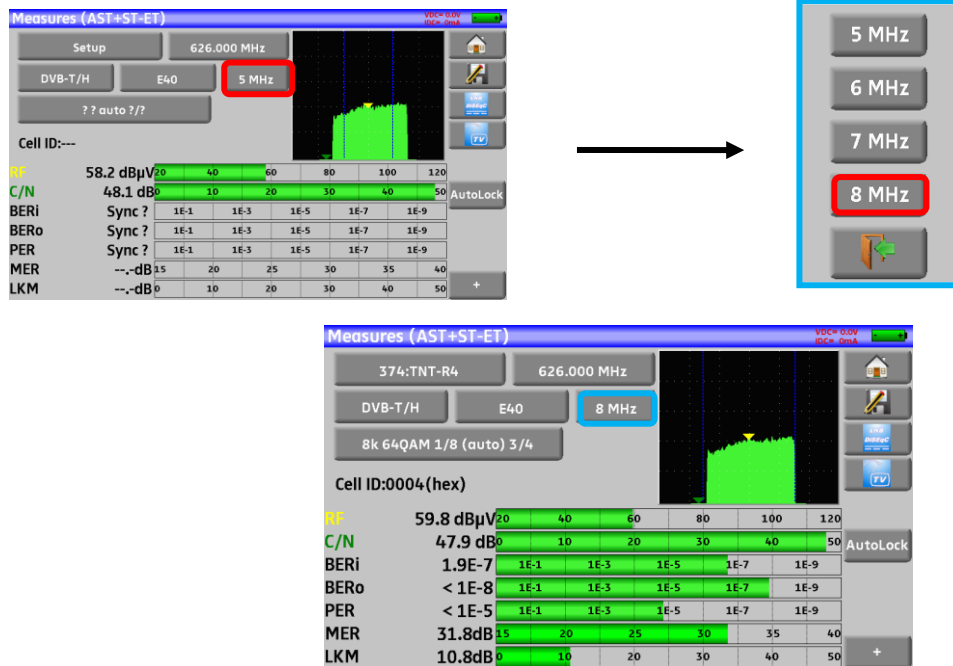

5.2.3 Change with virtual keyboard


If you want to enter a name of a number, a window appears with a numeric keypad or a virtual AZERTY keypad:


AZERTY keypad:

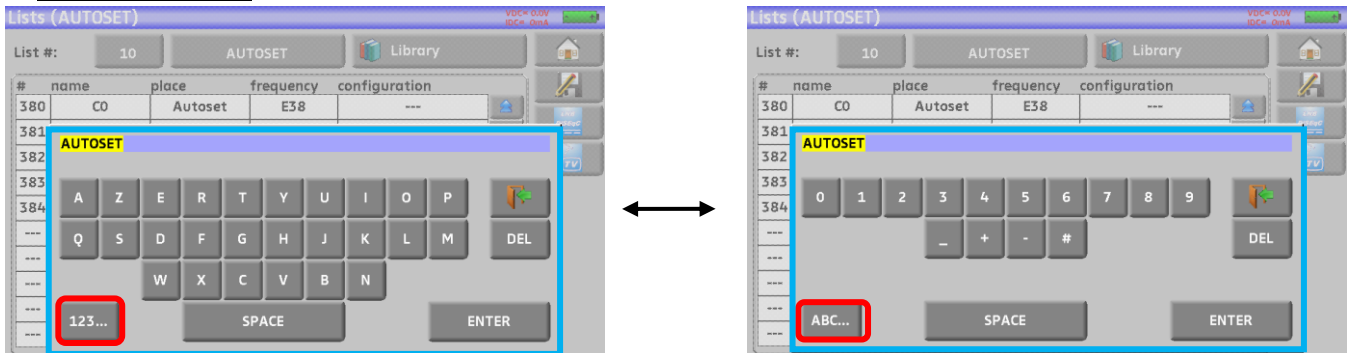

To alternate between modes: Digital/AZERTY or AZERTY/Digital

Digital keypad:

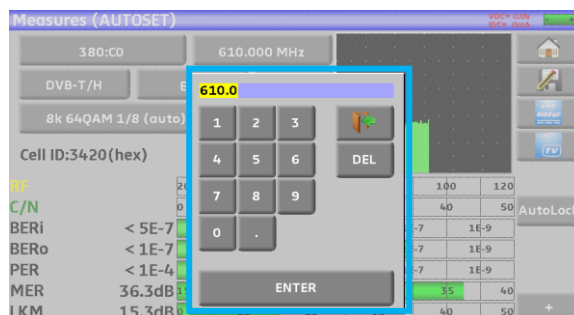

In these keypads, you have a DEL key to erase, an ENTER key to validate the selected value and the  key to cancel and exit this window.

5.3 Lists of measurements and setup library

In order to make easier the recall of data on field, the appliance uses 20 measurement lists of each 50 lines and 1000 setups.

A setup corresponds to a terrestrial, cable or satellite emission.

A list of measurements corresponds to a particular installation: presence of several satellite dishes, of various switches...

Example of list (the background of the table is white)

Lists (ST ETIENNE)				
List #:	8	ST ETIENNE	Library	
#	name	place	frequency	configuration
---	---	---	---	---
371	TNT-R1	ST-ETIENNE	E38	---
372	TNT-R2	ST-ETIENNE	E44	---
373	TNT-R3	ST-ETIENNE	E59	---
374	TNT-R4	ST-ETIENNE	E40	---
375	TNT-HD	ST-ETIENNE	E49	---
376	TNT-R6	ST-ETIENNE	E46	---
377	FR INTER	ST-ETIENNE	88.000	---
378	EUROPE 1	ST-ETIENNE	104.800	---
379	FR MUSIQ	ST-ETIENNE	97.100	---

Example of library (the background of the table is yellow)

Library setups (ST ETIENNE)				
				Lists
#	name	place	frequency	standard
0	DIGITAL+	ASTRA 1	10729 VL	DVB-S2 22000
1	ARD	ASTRA 1	10743 HL	DVB-S 22000
2	ANIXE HD	ASTRA 1	10773 HL	DVB-S2 22000
3	DIGITAL+	ASTRA 1	10788 VL	DVB-S 22000
4	DIGITAL+	ASTRA 1	10817 VL	DVB-S2 22000
5	HD+	ASTRA 1	10832 HL	DVB-S2 22000
6	DIGITAL+	ASTRA 1	10847 VL	DVB-S 22000
7	TVP HD	ASTRA 1	10861 HL	DVB-S 22000
8	DIGITAL+	ASTRA 1	10876 VL	DVB-S 22000
9	DIGITAL+	ASTRA 1	10935 VL	DVB-S2 22000

The same setup may be used in several measurement lists.

The same installation may use two satellite dishes

ASTRA 19.2 in DiSEqC position A

HOT BIRD 13 in DiSEqC position B

Another one may use three satellite dishes

ATLANTIC BIRD 3 in DiSEqC position A

ASTRA 1 in DiSEqC position B

HOT BIRD in DiSEqC position C

The same setup may be used several times in the same measurement list.

ZDF SatCR slot 0

ZDF SatCR slot 1

ZDF SatCR slot 2

ZDF SatCR slot 3...

If a parameter of a setup changes, for example a modification of rate or change from DVB-S to DVB-S2, only the setup inside the library should be updated.



These lists and setups may be created on a computer thanks to a spreadsheet and loaded to the appliance through a USB stick.

A list of measurements is made of:

- a list name in 10 characters
- the lowest frequency of the LNB (OL1)
- the highest frequency of the LNB (OL2)
- the selection mode low band / high band of the LNB
- the selection mode of the polarization

- the presence of the position number of the positioner (motorized satellite dish)
- 50 lines including each:
 - a setup number corresponding to the setup list
 - the presence and the functioning mode of the switch, committed type
 - the position of the switch, committed type
 - the presence and the functioning mode of the switch, uncommitted type
 - the position of the switch, uncommitted type
 - the presence of SatCR equipment
 - the SatCR slot number
 - the position of the SatCR switch

A few of these parameters are specific to the waveband of the satellite and have no influence in terrestrial and cable modes.

Presentation of a measurement list in a spreadsheet:

	A	B	C	D	E	F	G	H	I
1	Nom de la liste / List name	ASTRA1+HOT							
2	Fréquence OL1 / LO1 frequency	9750							
3	Fréquence OL2 / LO2 frequency	10600							
4	Sélection OL / LO setup	DiSEqC							
5	Sélection polarisation / Polarization setup	DiSEqC							
6	Positionneur / Positioner								
7									
8		Numéro de programme Setup number	Switch committed Committed switch	Position Switch committed Committed switch position	Switch uncommitted Uncommitted switch	Position switch uncommitted Uncommitted switch position	Activation SatCR SatCR enabled	Numéro de slot Slot number	Switch SatCR SatCR switch
9	0								
10	1	1	DiSEqC	Pos A					
11	2	2	DiSEqC	Pos A					
12	3	3	DiSEqC	Pos A					
13	4	4	DiSEqC	Pos A					
14	5	5	DiSEqC	Pos A					
15	6	6	DiSEqC	Pos A					
16	7	7	DiSEqC	Pos A					
17	8	8	DiSEqC	Pos A					
18	9	9	DiSEqC	Pos A					
19	10	10	DiSEqC	Pos A					
20	11	11	DiSEqC	Pos A					
21	12								
22	13	18	DiSEqC	Pos B					
23	14	19	DiSEqC	Pos B					
24	15	20	DiSEqC	Pos B					
25	16	21	DiSEqC	Pos B					
26	17	22	DiSEqC	Pos B					
27	18	23	DiSEqC	Pos B					
28	19	24	DiSEqC	Pos B					
29	20	25	DiSEqC	Pos B					

A setup is made of:


- a setup name in 8 characters
- a place name in 10 characters
- a frequency
- a channel number in terrestrial or cable mode
- a frequency map in terrestrial or cable mode
- a vertical or horizontal polarization in satellite mode
- a low or high LNB band in satellite mode
- a standard
- an analogical mono stereo or NICAM mode in terrestrial or cable mode
- a constellation type 64QAM 256QAM under DVB-C
- a bandwidth 5, 6, 7 or 8 MHz under DVB-T and DVB-T2
- a symbol rate under DVB-C, DVB-S, DVB-S2 or DSS
- a value for the guard interval under DVB-T and DVB-T2
- the inversion or not of the spectrum under DVB-T

According to the terrestrial, cable or satellite band mode and to the standard, some parameters have no influence.


The place name may distinguish two distinct emitters, example TF1 Fourvière and TF1 Chambéry.

Frequency and channel number are equivalent: a valid channel number has priority over a frequency.

The frequency map parameter associated with the setup allows frontiersmen to keep on using channel numbers.



Selecting a list in the **Lists** page automatically recalls all information associated with this list.



Selecting a **Setup** on a measurement page automatically recalls all information associated with this setup.


Presentation of a setup library in a spreadsheet:

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
		Nom du programme Setup name	Nom du site Place name	Fréquence Frequency	N° de canal Channel #	Plan de fréquences Frequencies map	Polarisation Polarization	Bande LNB LNB band	Standard	Mode audio Audio mode	Constellation	Largeur de bande Bandwidth	Débit symbole Symbol rate	Intervalle de garde Guard interval	Inversion du spectre Spectrum inversion
2	0	DIGITAL+	ASTRA 1	10729.000			V		DVB-S2				22000		
3	1	ARD	ASTRA 1	10743.000			H		DVB-S				22000		
4	2	SKY D	ASTRA 1	10773.000			H		DVB-S2				22000		
5	3	DIGITAL+	ASTRA 1	10788.000			V		DVB-S				22000		
6	4	DIGITAL+	ASTRA 1	10817.000			V		DVB-S2				22000		
7	5	ANIXE HD	ASTRA 1	10832.000			H		DVB-S2				22000		
8	6	DIGITAL+	ASTRA 1	10847.000			V		DVB-S				22000		
9	7	TVP HD	ASTRA 1	10861.000			H		DVB-S				22000		
10	8	DIGITAL+	ASTRA 1	10876.000			V		DVB-S				22000		
11	9	UPC	ASTRA 1	10920.000			H		DVB-S				22000		
12	10	DIGITAL+	ASTRA 1	10979.000			V		DVB-S				22000		
13	11	SKY D	ASTRA 1	11023.000			H		DVB-S2				22000		
14	12	DIGITAL+	ASTRA 1	11038.000			V		DVB-S				22000		
15	13	DIGITAL+	ASTRA 1	11097.000			V		DVB-S				22000		
16	14	DIGITAL+	ASTRA 1	11156.000			V		DVB-S				22000		
17	15	ORANGE	ASTRA 1	11170.000			H		DVB-S2				22000		
18	16	ORF	ASTRA 1	11302.000			H		DVB-S2				22000		
19	17	DIGITAL+	ASTRA 1	11317.000			V		DVB-S				22000		
20	18	DASERSTE	ASTRA 1	11361.000			H		DVB-S2				22000		
21	19	DIGITAL+	ASTRA 1	11435.000			V		DVB-S2				22000		
22	20	HD+	ASTRA 1	11464.000			H		DVB-S2				22000		
23	21	CANALSAT	ASTRA 1	11479.000			V		DVB-S				22000		
24	22	GLOBECAS	ASTRA 1	11508.000			V		DVB-S				22000		
25	23	GLOBECAS	ASTRA 1	11538.000			V		DVB-S				22000		
26	24	CANALSAT	ASTRA 1	11567.000			V		DVB-S2				22000		
27	25	ASTRA	ASTRA 1	11597.000			V		DVB-S				22000		
28	26	DIGITAL+	ASTRA 1	11626.000			V		DVB-S2				22000		
29	27	UPC	ASTRA 1	11670.000			H		DVB-S				22000		
30	28	DIGITAL+	ASTRA 1	11685.000			V		DVB-S				22000		
31	29	SKY D	ASTRA 1	11719.000			H		DVB-S				27500		
32	30	VIACOM	ASTRA 1	11739.000			V		DVB-S				27500		
33	31	SKY D	ASTRA 1	11758.000			H		DVB-S				27500		
34	32	CANALSAT	ASTRA 1	11778.000			V		DVB-S				27500		
35	33	SKY D	ASTRA 1	11797.000			H		DVB-S				27500		
36	34	CANALSAT	ASTRA 1	11817.000			V		DVB-S				27500		
37	35	ARD	ASTRA 1	11836.000			H		DVB-S				27500		
38	36	CANALSAT	ASTRA 1	11856.000			V		DVB-S				27500		
39	37	SKY D	ASTRA 1	11875.000			H		DVB-S				27500		
40	38	CANALSAT	ASTRA 1	11895.000			V		DVB-S				27500		
41	39	SKY D	ASTRA 1	11914.000			H		DVB-S2				27500		
42	40	CANALSAT	ASTRA 1	11934.000			V		DVB-S				27500		


6 AUTOSET mode



Attention: The Autaset channel research is only possible when at least one list is empty with enough place in the library

This mode allows an **automatic research of setups** and to provide information about the current place. You can access it through the key  on page Home.

The displayed lines on this page depend on the selected **Frequency band**. The key before the Mode line allows you to select between terrestrial, cable or satellite mode:

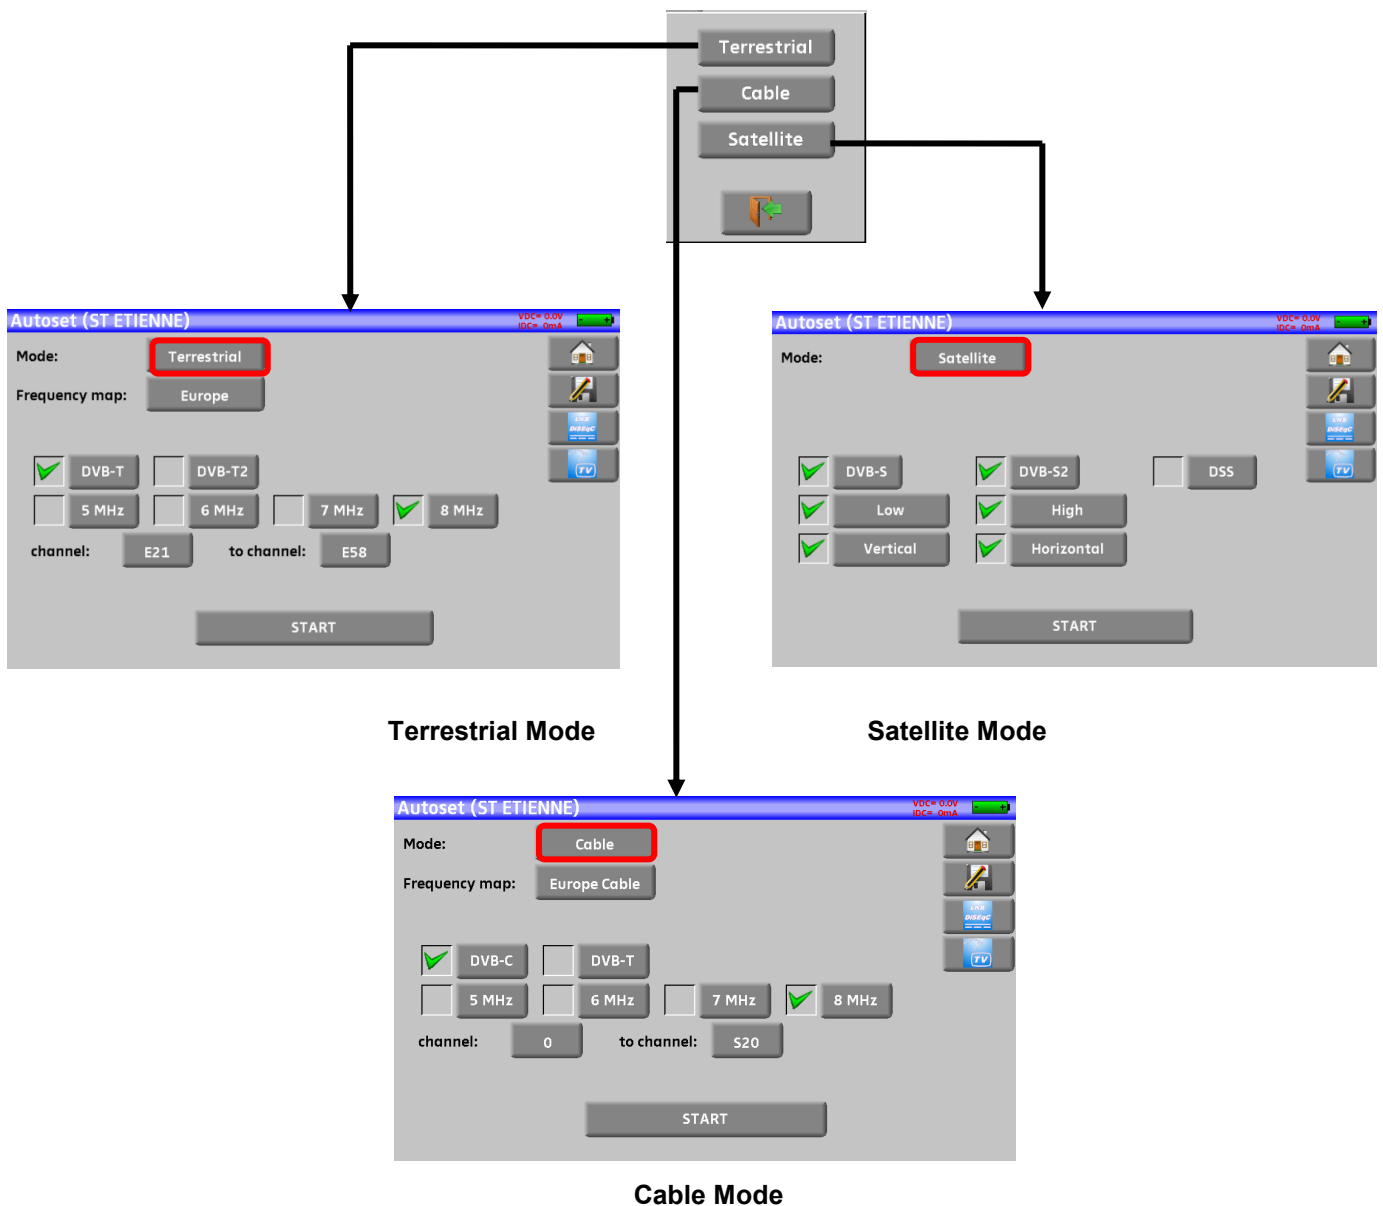

Once the mode selected, the keys of the various parameters activate or deactivate each option.

A green check shows that the parameter is included in the research. If there is no green check, the parameter will not be taken into account for the research.



Inactive research parameter



Active research parameter



Attention: The more you select options, the longer the research.


6.1 Terrestrial mode

This mode allows automatic research on the **terrestrial** frequency band.

The table allows the selection of:

- Standards
- Channel widths
- The channel range of the research (i.e. 21 to 58).

The goal is to make researches shorter.

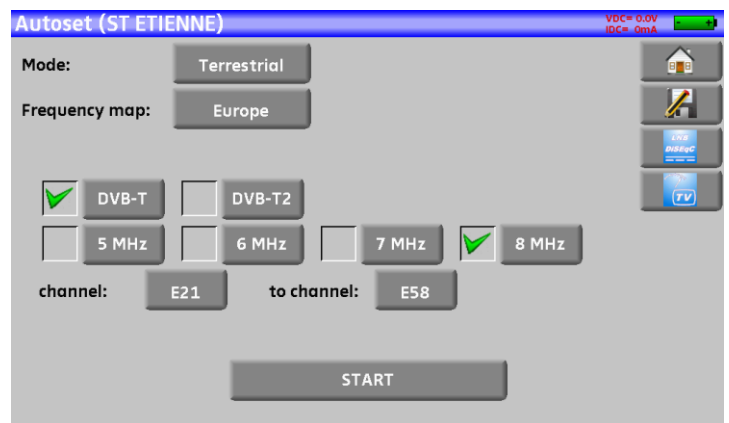


6.2 Satellite mode

This mode allows automatic research on the **satellite** frequency band.

The table allows the selection of:

- Standards
- LNB bands
- LNB polarizations.

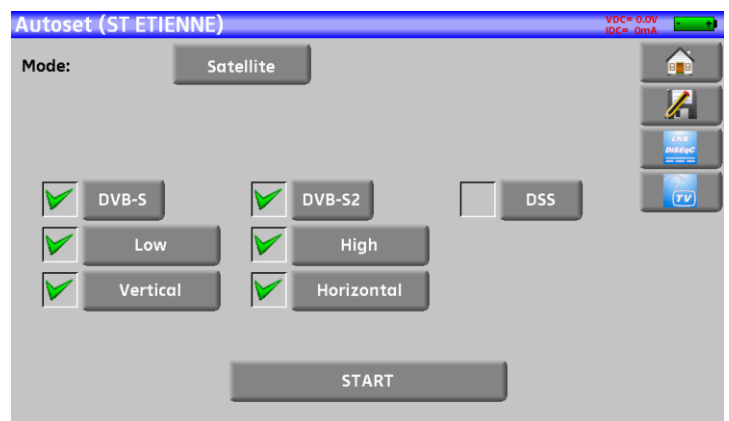

6.3 Cable mode (not available on 7871)

This mode allows automatic research on the **cable** frequency band.

6.4 «START » menu key

No matter which mode is selected, press the “**START**” key when the table is filled to launch the research. Pressing “**Stop**” will abort the research.

When the research is done or if the user aborted it, the appliance turns automatically to the **Measurement map** function.

freq.	std	RF	C/N	BERi	BERo	PER	MER
E38	DVB-T/H	58.6	46.7	<9E-8	<2E-8	<2E-5	36.0
E40	DVB-T/H	59.5	47.6	6.3E-8	<2E-8	<2E-5	31.8
E44	DVB-T/H	0.0	> 0.0				--,-
E46	DVB-T/H	0.0	> 0.0				--,-
E49	DVB-T/H	0.0	> 0.0				--,-

3 / 5 -> 0 mn

Any detected channel will be registered into the first empty list (automatically renamed AUTOSET) **and** into the first available setups of the library, starting from the end of the table.

Lists (AUTOSET)

List #: 10 AUTOSET Library

#	name	place	frequency	configuration
380	C0	Autoset	E38	---
381	C1	Autoset	E40	---
382	C2	Autoset	E44	---
383	C3	Autoset	E46	---
384	C4	Autoset	E49	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---

Lists (AUTOSET)

List #: 10 AUTOSET Library

#	name	place	Lists
380	C0	Au	4 ASTRA 3
381	C1	Au	5 ASTRA 2
382	C2	Au	6 TURKSAT
383	C3	Au	7 AST1 SATCR
384	C4	Au	8 ST ETIENNE
---	---	---	9 AST+ST-ET
---	---	---	10 AUTOSET
---	---	---	11
---	---	---	---
---	---	---	---
---	---	---	---

Library setups (AUTOSET)

Lists

#	name	place	frequency	standard
390	C0	Autoset	E38	DVB-T/H 8M GI auto
391	C1	Autoset	E40	DVB-T/H 8M GI auto
392	C2	Autoset	E44	DVB-T/H 8M GI auto
393	C3	Autoset	E46	DVB-T/H 8M GI auto
394	C4	Autoset	E49	DVB-T/H 8M GI auto
395	---	---	---	---
396	---	---	---	---
397	---	---	---	---
398	---	---	---	---
399	---	---	---	---

The new list is created in the first available list

The default name of the new list is AUTOSET

New found channels are added one by one into the new list

New found channels are added one by one into the first available setups of the library, starting from the end of the table

7 Measurement lists

7.1 The List page

In this page, you can select the list where you will work on measurements.

Pressing Home  then Lists-Library  Listes-Bibliothèque gives you access to the **Lists** function:

Lists (ASTRA 1) VOC=12.7V IDC=38mA

List #: 0 ASTRA 1 Library

#	name	place	frequency	configuration
0	DIGITAL+	ASTRA 1	10729 VL	---
1	ARD	ASTRA 1	10743 HL	---
2	ANIXE HD	ASTRA 1	10773 HL	---
3	DIGITAL+	ASTRA 1	10788 VL	---
4	DIGITAL+	ASTRA 1	10817 VL	---
5	HD+	ASTRA 1	10832 HL	---
6	DIGITAL+	ASTRA 1	10847 VL	---
7	TVP HD	ASTRA 1	10861 HL	---
8	DIGITAL+	ASTRA 1	10876 VL	---
9	DIGITAL+	ASTRA 1	10935 VL	---

Lists are ranked from 0 to 19. To select the one you want, press the following key. Lists are displayed. Press the one you want:

Lists (ST ETIENNE) VOC=0.0V IDC=0mA

List #: 8 ST ETIENNE Library

#	name	place
371	TNT-R1	ST-E
372	TNT-R2	ST-E
373	TNT-R3	ST-E
374	TNT-R4	ST-E
375	TNT-HD	ST-E
376	TNT-R6	ST-E
377	FR INTER	ST-E
378	EUROPE 1	ST-E
379	FR MUSIQ	ST-E

#	name
0	ASTRA 1
1	HOT BIRD
2	ASTRA1+HOT
3	ATLANTIC
4	ASTRA 3
5	ASTRA 2
6	TURKSAT
7	AST1 SATCR

In this example, we selected ST ETIENNE.

Lists (ST ETIENNE) VOC=0.0V IDC=0mA

List #: 8 ST ETIENNE Library

#	name	place
---	---	---
371	TNT-R1	ST-E
372	TNT-R2	ST-E
373	TNT-R3	ST-E
374	TNT-R4	ST-E
375	TNT-HD	ST-E
376	TNT-R6	ST-E
377	FR INTER	ST-E
378	EUROPE 1	ST-E
379	FR MUSIQ	ST-E

#	name
4	ASTRA 3
5	ASTRA 2
6	TURKSAT
7	AST1 SATCR
8	ST ETIENNE
9	AST+ST-ET
10	AUTOSET
11	



Lists (ST ETIENNE) VOC=0.0V IDC=0mA

List #: 8 ST ETIENNE Library



#	name	place	frequency	configuration
---	---	---	---	---
371	TNT-R1	ST-ETIENNE	E38	---
372	TNT-R2	ST-ETIENNE	E44	---
373	TNT-R3	ST-ETIENNE	E59	---
374	TNT-R4	ST-ETIENNE	E40	---
375	TNT-HD	ST-ETIENNE	E49	---
376	TNT-R6	ST-ETIENNE	E46	---
377	FR INTER	ST-ETIENNE	88.000	---
378	EUROPE 1	ST-ETIENNE	104.800	---
379	FR MUSIQ	ST-ETIENNE	97.100	---





Attention: A list may contain a Satellite and a Terrestrial setup.

7.2 Modification of a list

To change the name of a list, you must trigger its name. A virtual keypad shows up. Type the new name (SEFRAM in our example).

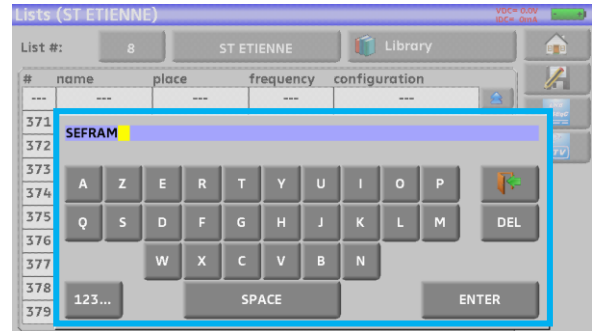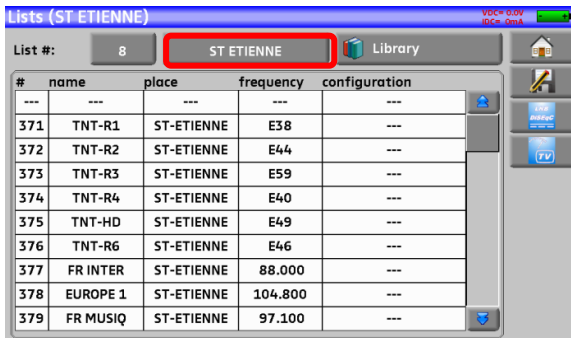



To add a setup to the list, select the line. A window shows up:

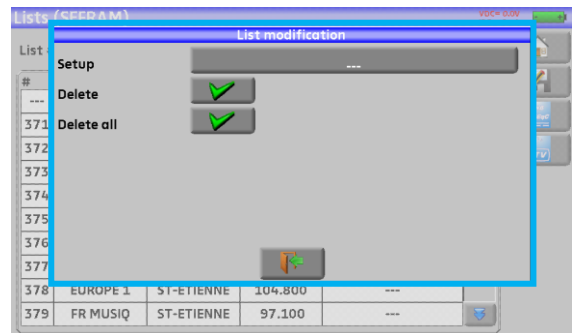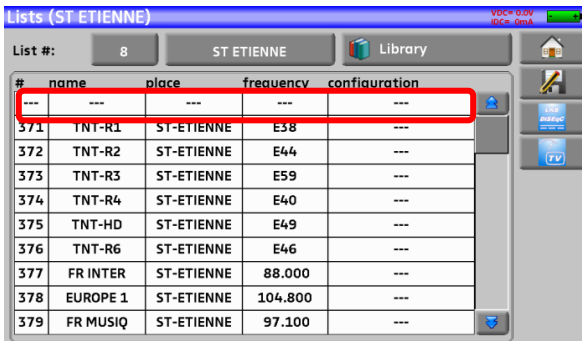


Attention: If the line contains a setup, it shall be erased. To cancel, press:



By pressing the key before Setup, you disclose the available setups from the library (you cannot create a setup from a list; to create a setup, see [Setup creation or modification in the library](#)):

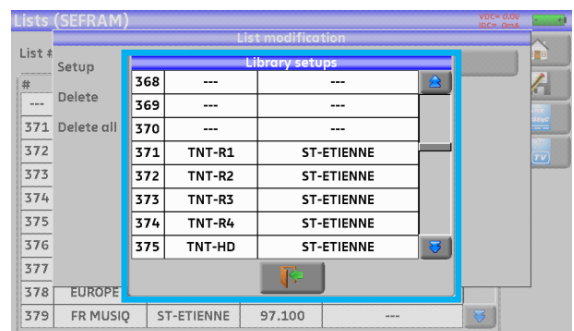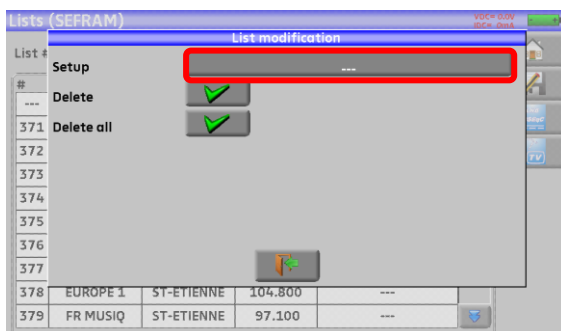

Scroll the list up or down to find the setup you want to add to your list. Press the line you want:

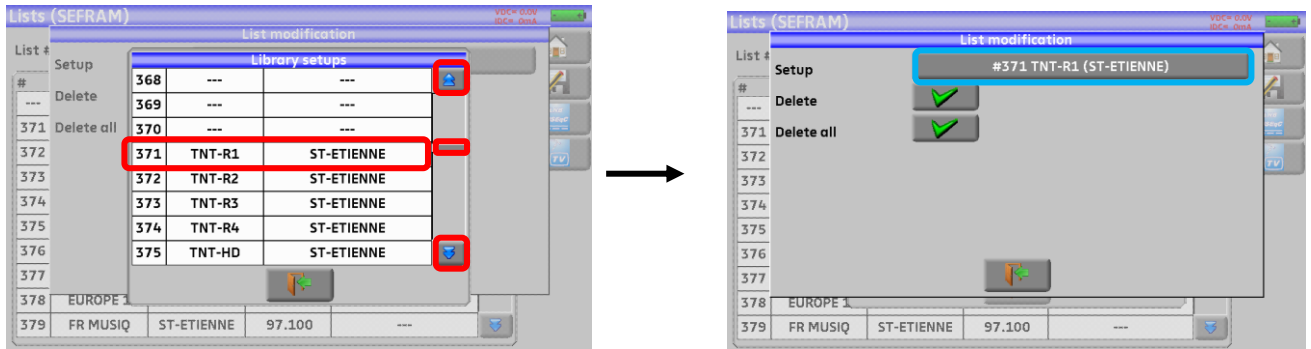


The setup is now in the list:

Lists (SEFRAM)				
List #:	8	SEFRAM	Library	
#	name	place	frequency	configuration
371	TNT-R1	ST-ETIENNE	E38	---
371	TNT-R1	ST-ETIENNE	E38	---
372	TNT-R2	ST-ETIENNE	E44	---
373	TNT-R3	ST-ETIENNE	E59	---
374	TNT-R4	ST-ETIENNE	E40	---
375	TNT-R4	ST-ETIENNE	E49	---
376	TNT-R6	ST-ETIENNE	E46	---
377	FR INTER	ST-ETIENNE	88.000	---
378	EUROPE 1	ST-ETIENNE	104.800	---
379	FR MUSIQ	ST-ETIENNE	97.100	---


You may erase the setup from the list by pressing the check before Erase when the setup is selected. You can also erase all setups from the list by pressing the check before Erase all.

In both cases, a confirmation box will pop up:

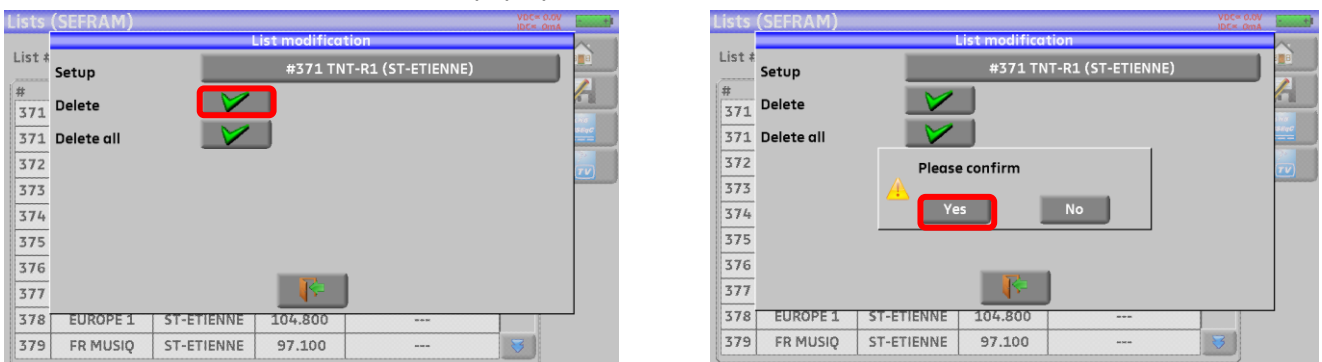




Lists (SEFRAM)				
List #:	8	SEFRAM	Library	
#	name	place	frequency	configuration
---	---	---	---	---
371	TNT-R1	ST-ETIENNE	E38	---
372	TNT-R2	ST-ETIENNE	E44	---
373	TNT-R3	ST-ETIENNE	E59	---
374	TNT-R4	ST-ETIENNE	E40	---
375	TNT-R4	ST-ETIENNE	E49	---
376	TNT-R6	ST-ETIENNE	E46	---
377	FR INTER	ST-ETIENNE	88.000	---
378	EUROPE 1	ST-ETIENNE	104.800	---
379	FR MUSIQ	ST-ETIENNE	97.100	---

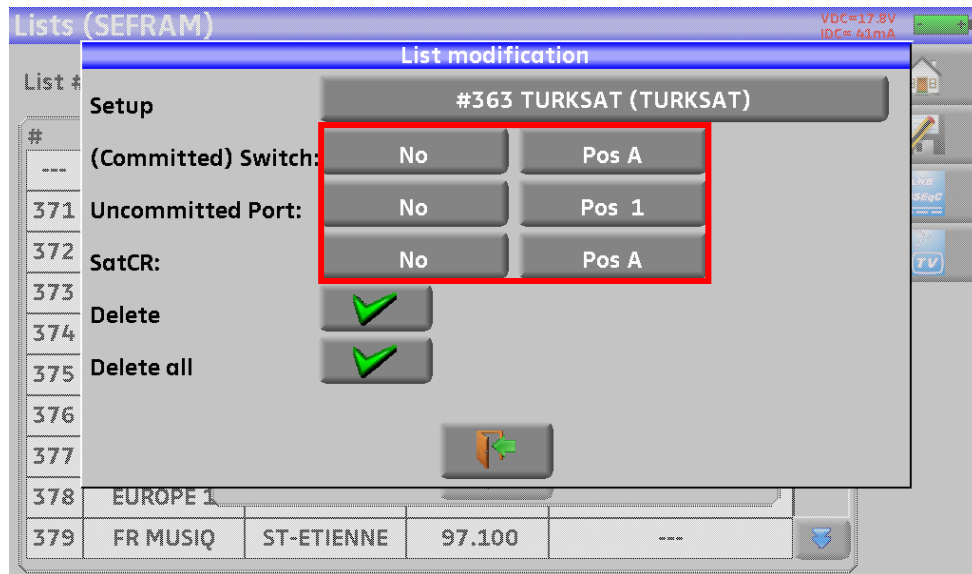In a satellite setup, you can change the switch, the Uncommitted Port and the SatCR by activating any of these keys (this change will affect only the setup in this list, not in the library):







8 Setup library

8.1 The Library page

By pressing Home  then Lists-Library , you can access the Lists function. From there, you can access the Library by pressing the key: 

Library setups (SEFRAM) VDC= 0.0V
IDC= 0mA

Lists    

#	name	place	frequency	standard
376	TNT-R6	ST-ETIENNE	E46	DVB-T/H 8M GI auto
377	FR INTER	ST-ETIENNE	88.000	FM
378	EUROPE 1	ST-ETIENNE	104.800	FM
379	FR MUSIQ	ST-ETIENNE	97.100	FM
380	---	---		
381	---	---		
382	---	---		
383	---	---		
384	---	---		
385	---	---		





8.2 Creation or modification of setups in the library

To create or change a setup in the library, you have to select a line in the table. A window pops up:



Attention: If the line contains a setup, it will be erased. To cancel, press: 

Library setups (SEFRAM) VDC= 0.0V
IDC= 0mA

Lists    

#	name	place	frequency	standard
376	TNT-R6	ST-ETIENNE	E46	DVB-T/H 8M GI auto
377	FR INTER	ST-ETIENNE	88.000	FM
378	EUROPE 1	ST-ETIENNE	104.800	FM
379	FR MUSIQ	ST-ETIENNE	97.100	FM
380	---	---		
381	---	---		
382	---	---		
383	---	---		
384	---	---		
385	---	---		



Library setups (SEFRAM) VDC= 0.0V
IDC= 0mA

Setup modification

Band: Terrestrial/Cable

Name: 380


Place: Autoset

Frequency: 610.000 MHz E38


Standard: DVB-T/H 8 MHz

Modulation: GI auto Auto

Delete
Delete all



You can also erase the setup in the library by pressing the  key.

You can also erase all setups from the library by pressing the  key.

From this window, you can create a terrestrial, satellite KU, L or C setup.

To proceed, see chapter 5 [Man-machine interface](#)

➤ **Terrestrial setup:**

Under standard DVB-T/H (DVB-T2 identical, except modulation)

To enter the name you want for the setup

To enter the frequency you want for the setup

To enter the standard you want for the setup (DVB-T/H in this case)

To enter the place name you want for the setup

To enter the channel you want for the setup

To enter the frequency band you want for the setup

To enter the type of modulation you want for the setup

Under standard DVB-C (not available on 7871)

To enter the symbol rate you want for the setup

In terrestrial analogical standard (L, BG, DK, I and MN)

To enter the type of audio configuration you want for the setup (mono, stereo or NICAM)

➤ **Setup Satellite KU, L or C:**

Ku L or C corresponds to the selected band

To enter the type of polarity
you want for the setup (high
or low, vertical or horizontal)

To enter the symbol rate you
want for the setup

Library (Setup) (SECDAM) Setup modification VDC= 0.0V IDC= 0mA

Band:	Satellite KU
Name:	380
Place:	Autoset
Frequency:	10729 (979) MHz
Standard:	DVB-S
Polar./Band:	Low Vertical
Symbol rate:	22000 kBd

✓ Delete ✓ Delete all

←


9 Check Sat



Only for satellite band.

The Check Sat mode allows you to quickly align the satellite dish by initial selection of the satellite.

Press  and  to access the Check Sat mode.

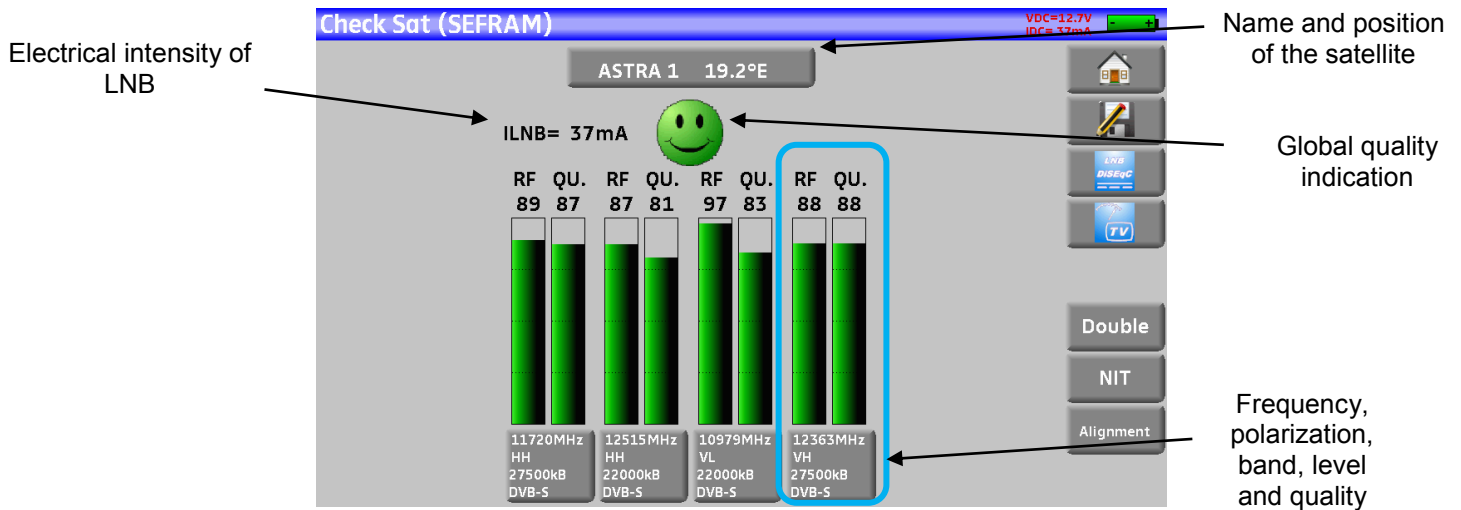


The appliance has 32 possible orbital positions for satellites. It is provided with circa ten satellites registered.

4 transponders are appended to each satellite.

You can select the satellite by pressing several times « Name and position of the satellite ».

To modify a transponder, you must press the corresponding key.

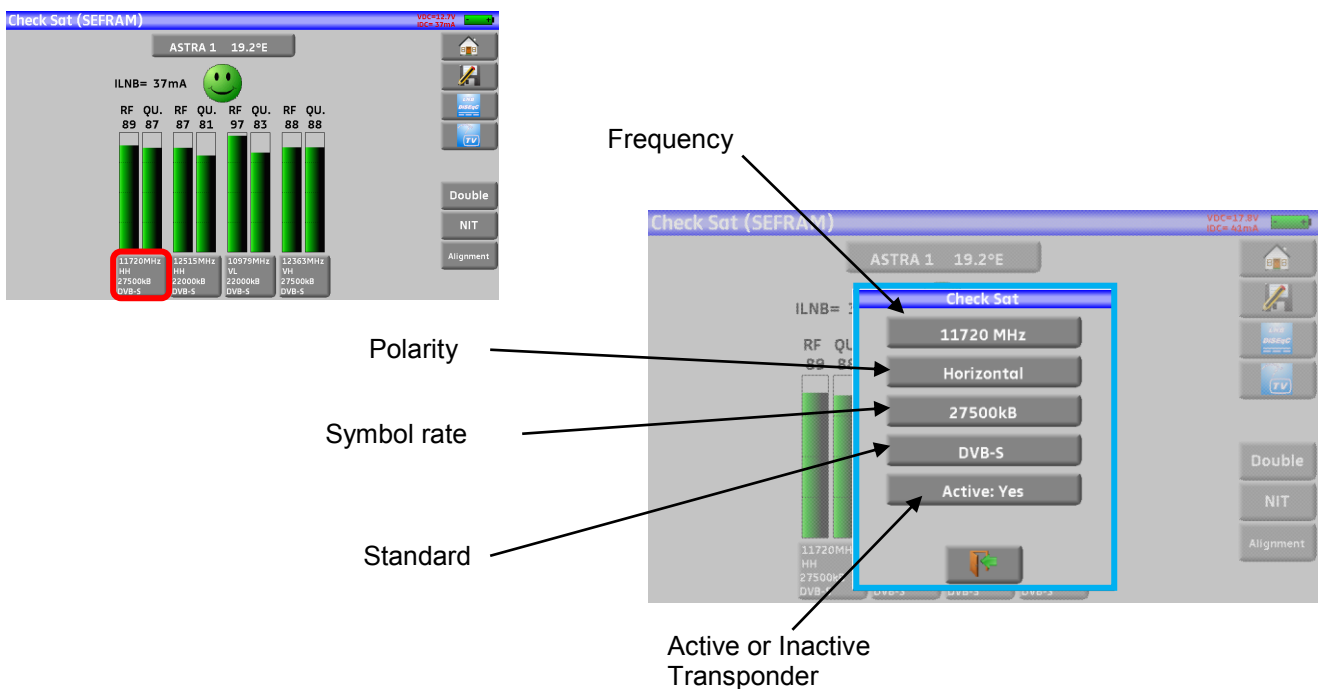

9.1 Updating satellites

You may add new satellites and update or suppress old ones thanks to a computer and an USB memory stick.

Open the Sat.xls file in the favorite spreadsheet application (the file is available in our website)

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T
		Nom du satellite Satellite name	Position orbitale Orbital position	Orientation	Fréquence Frequency	Polarisation Polarization	Standard	Débit symbole Symbol Rate	Fréquence Frequency	Polarisation Polarization	Standard	Débit symbole Symbol Rate	Fréquence Frequency	Polarisation Polarization	Standard	Débit symbole Symbol Rate	Fréquence Frequency	Polarisation Polarization	Standard	Débit symbole Symbol Rate
2	0	TURKSAT 2	42.0	E	11996	V	DVB-S	26000	12652	H	DVB-S	22500	11919	V	DVB-S	24444	11804	V	DVB-S	24444
3	1	ASTRA 2	28.2	E	10803	H	DVB-S	22000	10714	H	DVB-S	22000	10847	V	DVB-S	22000	12441	V	DVB-S	27500
4	2	ASTRA 3	23.5	E	10803	H	DVB-S	22000	12725	V	DVB-S	27500	11836	H	DVB-S	29900	11914	H	DVB-S	27500
5	3	ASTRA 1	19.2	E	11720	H	DVB-S	27500	12515	H	DVB-S	22000	10979	V	DVB-S	22000	12363	V	DVB-S	27500
6	4	EUTEL W2	16.0	E	11011	V	DVB-S	27500	11094	V	DVB-S	27900	11554	V	DVB-S	30000	12650	H	DVB-S	15000
7	5	HOT BIRD	13.0	E	10723	H	DVB-S	29900	12731	H	DVB-S	27500	10719	V	DVB-S	27500	12713	V	DVB-S	27500
8	6	INTEL 10 02	1.0	W	12563	H	DVB-S	27500	12719	V	DVB-S	18400	12735	V	DVB-S	8800	12687	H	DVB-S	27500
9	7	ATLANTIC 3	5.0	W	12711	H	DVB-S	30000	12543	H	DVB-S	27500	11591	V	DVB-S	20000	12615	H	DVB-S	8789
10	8	ATLANTIC 2	8.0	W	11067	H	DVB-S	27500	11387	H	DVB-S	24740	12566	V	DVB-S	27500	12649	V	DVB-S	27500
11	9	HISPASAT	30.0	W	11577	V	DVB-S	27500	11931	H	DVB-S	27500	11731	H	DVB-S	28126	12456	V	DVB-S	30000

Change the values as you wish.



The setting time depends on the rate of the transponder. The lower the rate, the longer the setting time.

Hence you'd better select high rate transponders to align a satellite dish.

Record the file.

Record the file once again under CSV format as Sat.csv.

There is a CSV macro-command for this operation: keyboard shortcut Ctrl + Maj. + C (under Office 2007 and 2010 only)

Copy the Sat.csv file to the root of the USB stick.

Press the Toolbox key until the Configuration page shows up.


Check that the active USB port is the USB A port and that nothing is connected to the USB mini B port.

[Active USB port](#)

Insert the memory-key into the USB connector of the appliance.

Select Import.


[Import INI files](#)

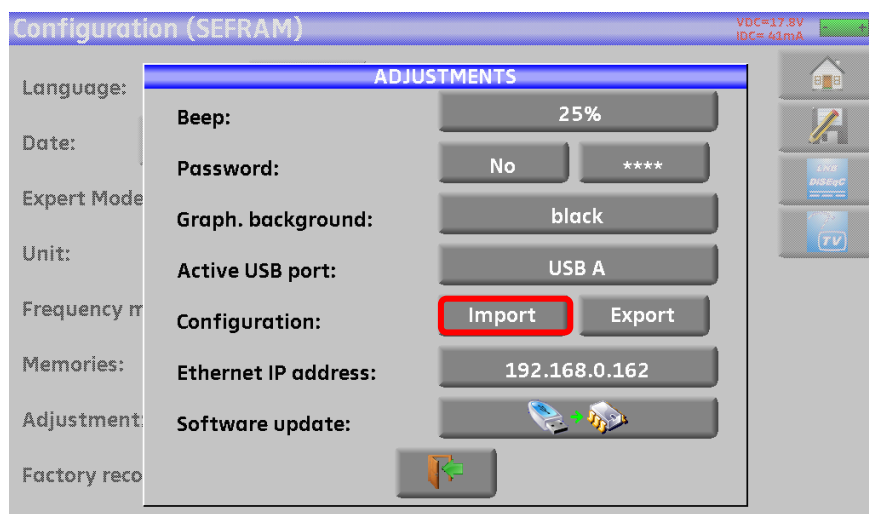

9.2 Check Sat function

Procedure:

1/ Connect the satellite dish to the appliance and start it up.

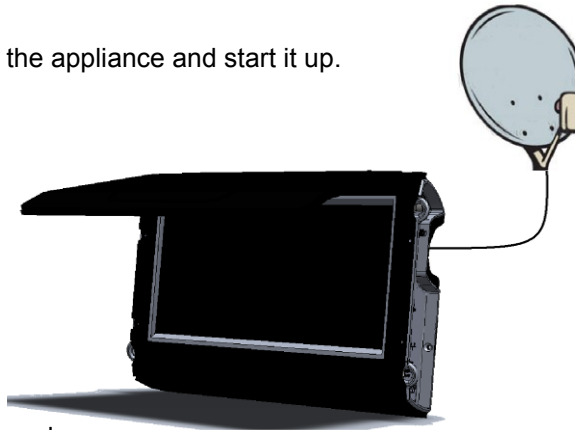


2/ Validate the remote power supply:

- VDC lights up.
- Check the power supply current of the LNB (IDC at the top right corner of the screen should be between ca. 50 and 200 mA).

See chapter [Remote power supply / LNB – DiSEqC](#)

3/ On the Home page, go to the Check Sat mode.


Select the satellite to aim at in the list (example ASTRA1)

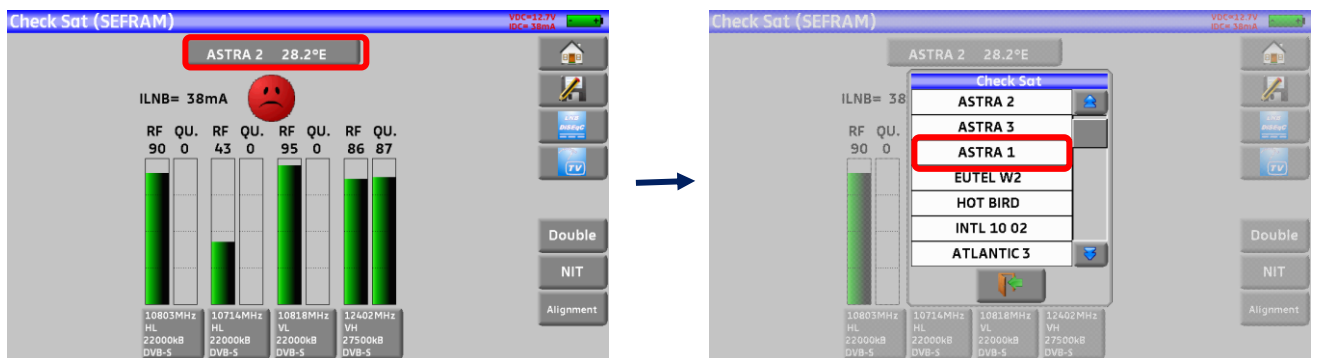

4/ Slowly orientate the satellite dish until hearing the locking melody and getting the best quality.

5/ Slightly turn the LNB to get the best quality (counter-polarization).

You will hear a melody as soon as a first transponder is detected; then, you will hear beeps. These beeps are closer and closer as the quality increases.

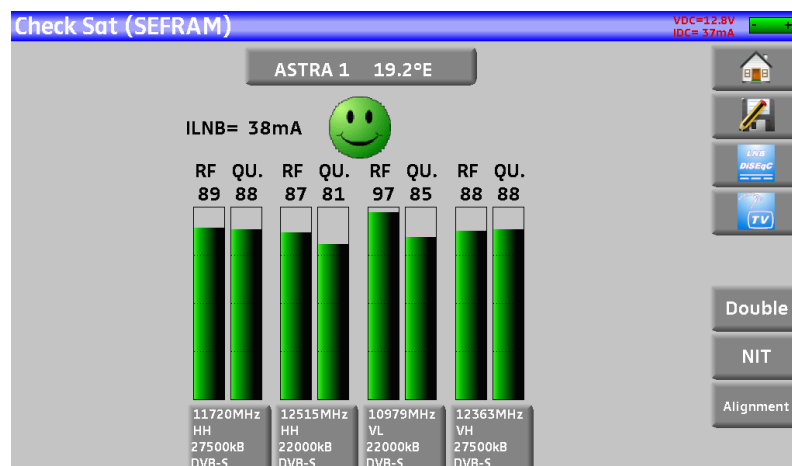

If the appliance is not synchronized on all four transponders, the quality indication is **red**.




If the appliance is synchronized on all four transponders but the reception quality is average, the quality indication is **orange**.



If the appliance is synchronized on all four transponders and the reception quality is good, the quality indication is **green**.





Attention:

To identify a satellite, it must be synchronized on all **4 transponders**.


However, some transponders are regularly modified.
See the frequency map of the satellite if a transponder does not seem to work.

Some switches or LNB work only with DiSEqC commands. In this case, position the OL and the polarization on DiSEqC in the Configuration page LNB-DiSEqC.
(Attention: the Check Sat is slower with DiSEqC commands).

9.3 Checking the aligned satellite

To check if you have aimed the right satellite, press the NIT key.

The appliance searches the MPEG NIT table on one of the 4 transponders and displays the name of the satellite:

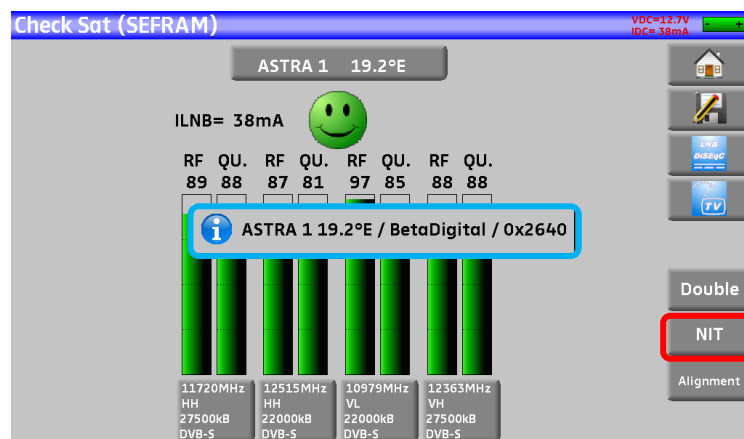




Attention: The displayed name depends on the content of the MPEG NIT table. Some distributors provide no (or poor) such table. The displayed information may be wrong.

9.4 Double Check Sat


This mode allows you to orientate a double LNB by checking 4 transponders on 2 selected satellites. This mode is identical to the simple Check Sat mode.

To access the double Check Sat mode, you have to trigger the Double key.

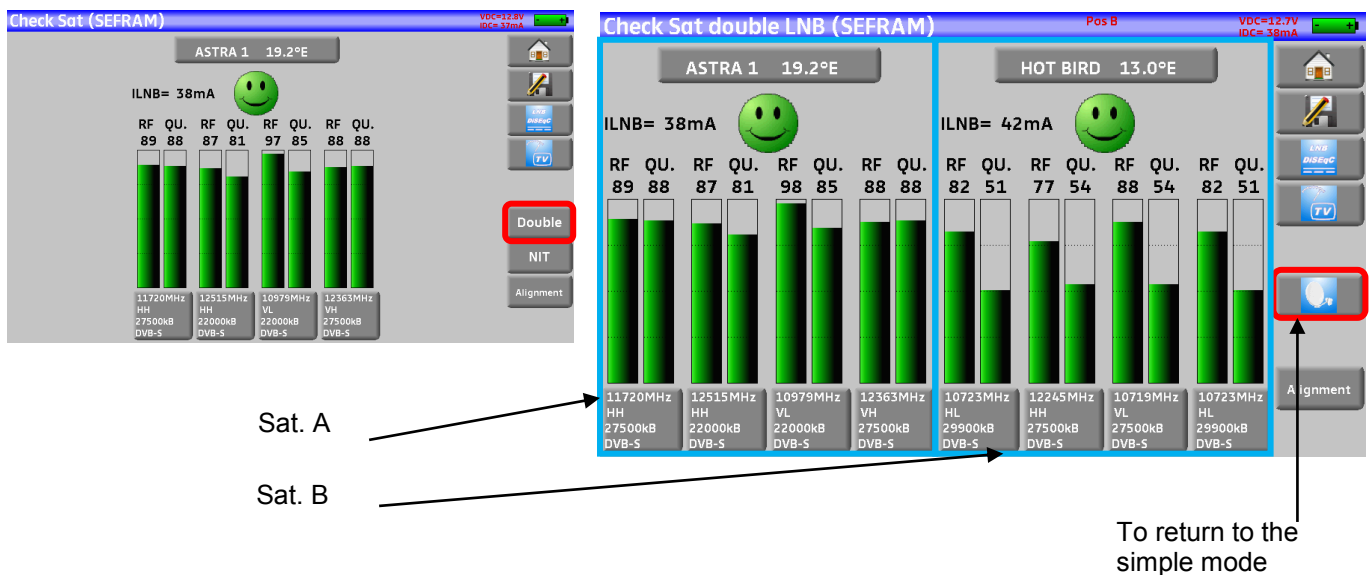

9.5 Alignment of the satellite dish

Pressing the « **Alignment** » key enables the calculation of the Altitude, Azimuth and Polarization values of your satellite dish:

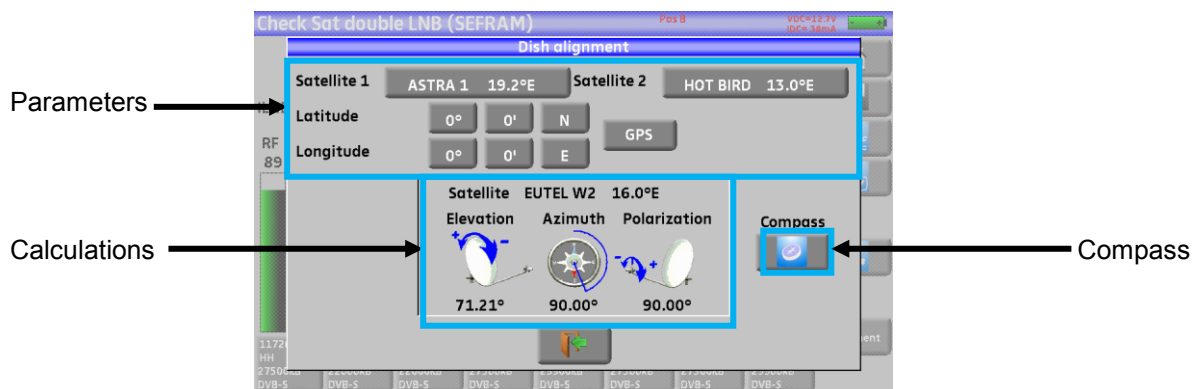

Parameters:

- Satellite 1: satellite to aim; or 1st satellite in case of multi-headed satellite dish
- Satellite 2: 2nd satellite in case of multi-headed satellite dish (else, input the same value as satellite 1)
- Latitude: latitude of your current geographical place
- Longitude: longitude of your current geographical place
- GPS: the GPS key inputs automatically the latitude and longitude fields (if the GPS option is available in the appliance)

Calculations:

- Satellite: satellite to aim, the closest to the median position between Satellite1 and Satellite2
- Altitude: tilting angle of the satellite dish
- Azimuth: horizontal angle of the satellite dish with reference to the north
- Polarization: rotation of LNB with reference to a vertical line.



9.5.1 Electronic compass

This function returns the orientation of the satellite dish in comparison with the appliance. When triggering this key, the appliance calls for calibration of the (internal) compass.



To do so, you must turn the appliance in all directions until the message disappears.

The appliance displays your azimuth **and** if you have to turn to the left or to the right to face the satellite, when the satellite is in front of you, the appliance displays your position on a green background like here:

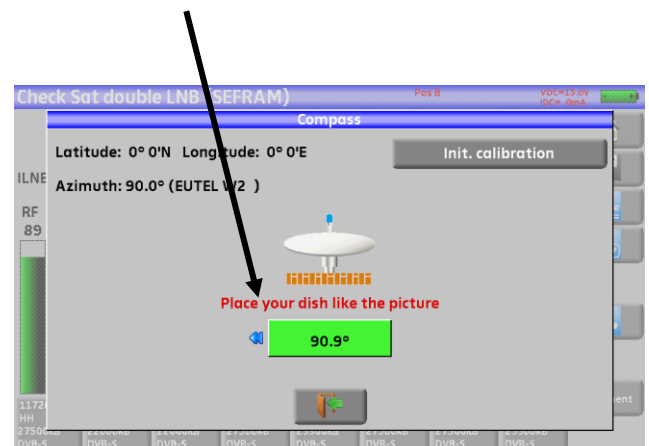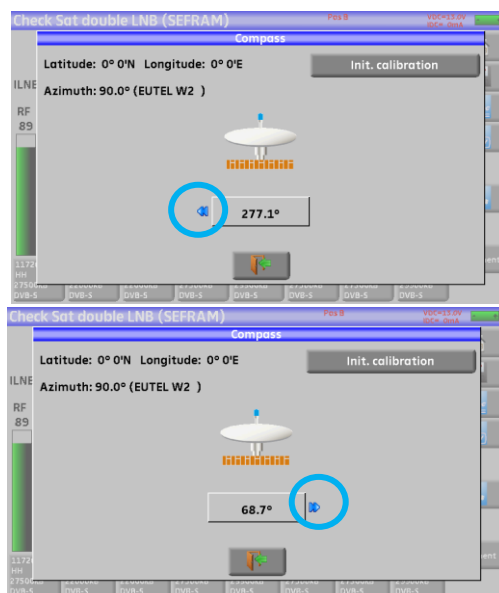

The « **init.calibration** » key relaunches the calibration of the compass.

9.5.2 Recall


Azimuth

Position of the satellite dish on the horizontal plane with reference to the north. Measured in degrees.




Altitude

Tilt angle under which the beam from the satellite reaches your antenna. Measured in degrees using what is specified on the stand of the satellite dish.

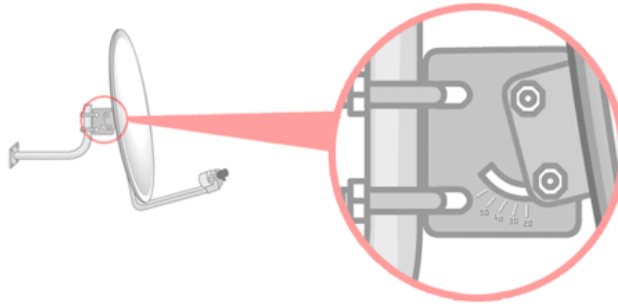

Polarization

Rotation required for the LNB from a vertical line. Measured in degrees.

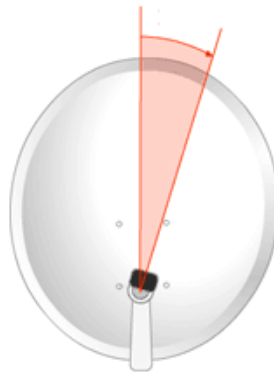

To calculate the parameters of a single-headed satellite dish, enter the same satellite for Check Sat on both parameters '**Satellite 1**' and '**Satellite 2**'.




Note: The list of the available satellites for this calculation is the same as for Check Sat.

10 The Measures-TV-Spectrum page


The Measures-TV-Spectrum page is divided in three zones that can each be displayed full screen by pressing it (the spectrum, the TV or the measurement).

It also includes a service list zone where you can watch the services of the channel and change of selection if required.


So, pressing the red-circled zones will result in:

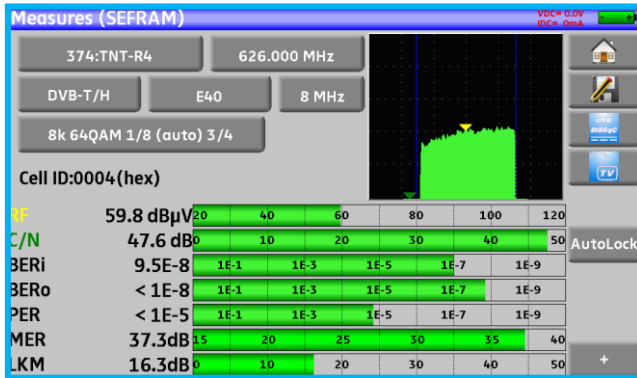

MEASURES
mode full screen

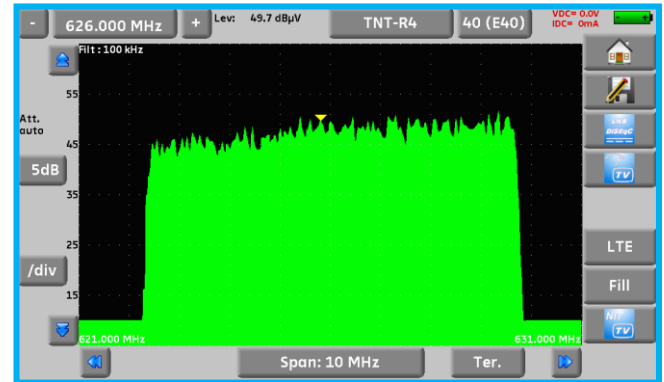


SPECTRUM
mode full screen

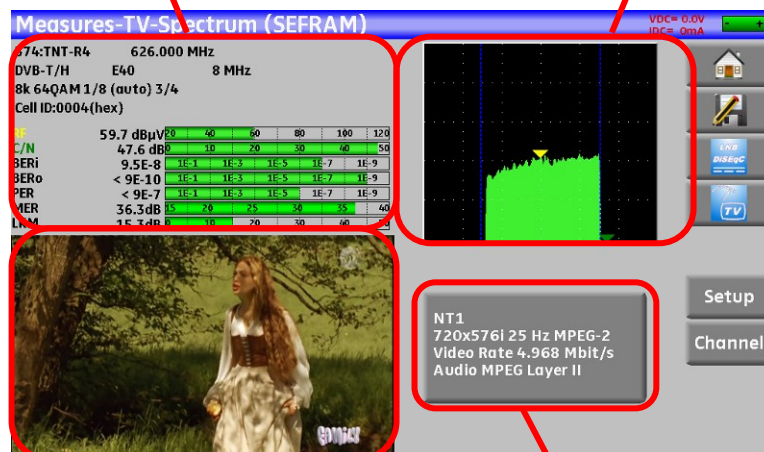

TV mode full screen

List of services

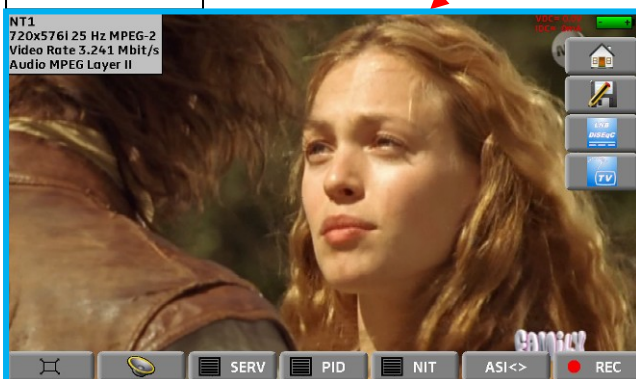

Measures-TV-Spectrum (SEFRAM)

374:TNT-R4 626.000 MHz
DVB-T/H E40 8 MHz
8k 64QAM 1/8 (auto) 3/4
Cell ID:0004(hex)

Service	Provider	SID	LCN A	Type
ARTE HD	Multi 4	1031	57	Digital TV
PARIS PREMIERE	MULTI4	1028	41	Digital TV
M6	MULTI4	1025	6	Digital TV
W9	MULTI4	1026	9	Digital TV
NT1	MULTI4	1027	11	Digital TV

11 Measures

Pressing the MEASURE zone gives access to the **MEASURES** function.


In this page, you can either perform measurements on a memorized program in the current list (see chapter « Measurement list »), or change parameters manually, or use the AutoLock function

11.1 Autolock function


This function is design to lock on a digital signal (terrestrial, cable or satellite)

You just have to enter the frequency or the channel (for terrestrial), then press AutoLock, The instrument will find automatically in few seconds the digital standard, the modulation type and all other parameters of the signal.

Example for terrestrial, channel 38 (frequency 610MHz):

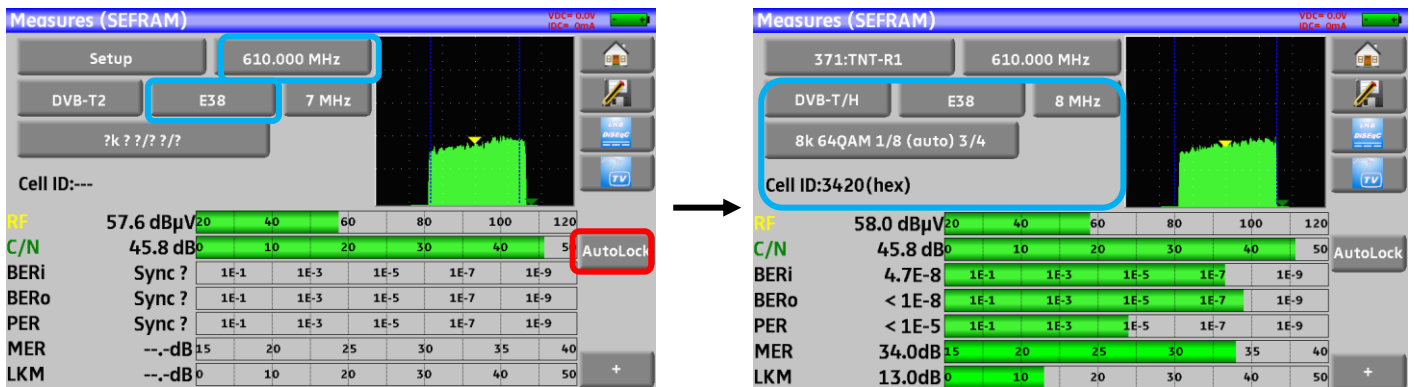


Example for satellite low vertical polarization, frequency 12581MHz:

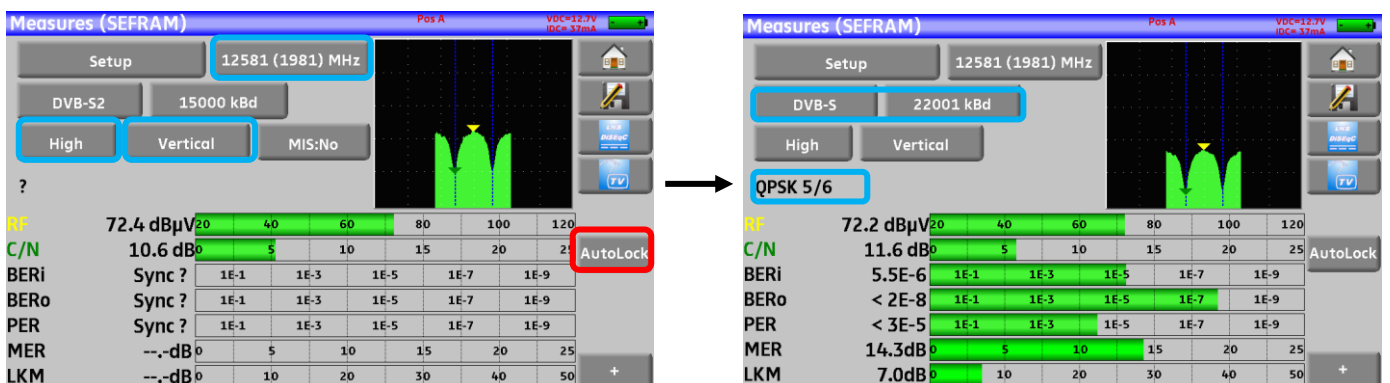

11.2 Modification of parameters

You can either do measures on a saved setup in the current list (see chapter « [Setting the parameters of the Measurement Lists](#) »), or modify manually each parameter.

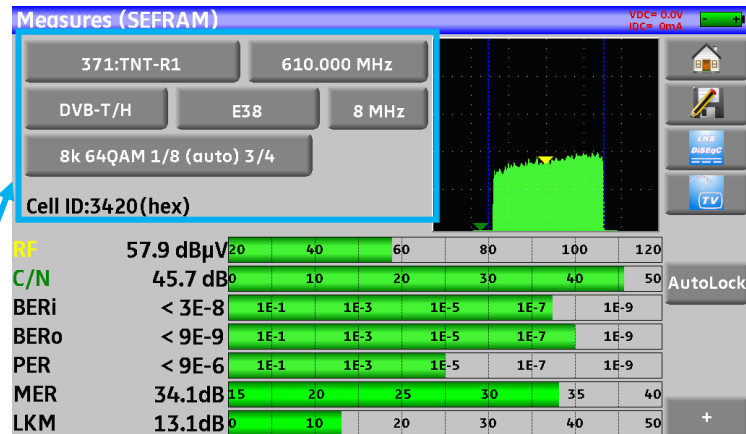

The various parameters are:

- The name of the setup (selection on the active list)
- The frequency of the emitter or transponder (and the true frequency of satellite)
- The standard and bandwidth for DVB-T/H and DVB-T2
- The corresponding channel number for terrestrial and cable mode
- The symbol rate for the satellite
- The polarization and the band for the satellite
- The audio mode for the analogical TV

The + key in the lower right corner displays (under DVB-T/H, DVB-T2, DVB-S and DVB-S2) the following information:

- The spectral inversion of the signal
- The frequency offset
- The Viterbi rate of the HP flow
- The Viterbi rate of the LP flow
- The level of the hierarchical mode
- The cell identification

See chapter [Man-machine interface](#) to make any change.





You can shift from terrestrial to satellite mode by:


- Changing the setup frequency
- Changing of standard
- Changing of setup (from a terrestrial to a satellite setup)

11.3 Level measurements

You can measure levels at a specific frequency with a detection matching the standard.

	<p>In terrestrial band, for an user socket, the level should be:</p> <ul style="list-style-type: none"> - between 50 and 66 dBμV under FM - between 35 and 70 dBμV under DVB-T/H and DVB-T2 - between 57 and 74 dBμV in any other case.
	<p>In satellite band, for an user socket, the level should be:</p> <ul style="list-style-type: none"> - between 47 and 77 dBμV.

Example in terrestrial mode:

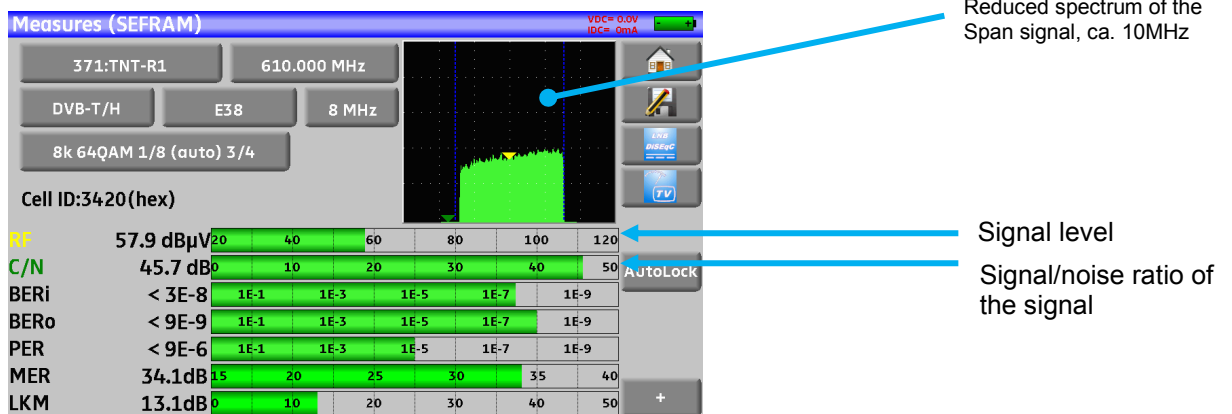

The appliance makes different measurements according to the current **standard**.

The other possible measurements are:

- **Average** measurement
- **Peak** measurement
- **Power** measurement.

11.4 Satellite band

The following table sums up the measurement types and the frequencies of the audio carrier waves for each standard:

Standard	Video carrier	Measure
PAL	FM	Peak
SECAM	FM	Peak
NTSC	FM	Peak
DVB-S	Digital	Power
DSS	Digital	Power
DVB-S2	Digital	Power

11.5 Terrestrial band

The appliance automatically makes level measurements on the **Video carrier wave** and on **1 or 2 Sound carrier waves** according to the selected audio mode.

The following table sums up the measurement types and the frequencies of the audio carrier waves for each standard:

Standard	Video carrier	Measure	Sound carrier		
			Mono	Stereo	NICAM
BG	negative, AM	peak	FM 5.5 MHz	FM 5.74 MHz	DQPSK 5.85 MHz
DK	negative, AM	peak	FM 6.5 MHz	FM 6.258 MHz	DQPSK 5.85 MHz
I	positive, AM	peak	FM 6.0 MHz		DQPSK 6.552 MHz
L	positive, AM	peak	AM 6.5 MHz		DQPSK 5.85 MHz
MN	negative, AM	peak	FM 4.5 MHz	FM 4.72 MHz	
DVB-C	digital	power			
DVB-T/H	digital	power			
DVB-T2	digital	power			
FM	FM	average			
Carrier	not modulated	average			


The appliance displays the level of the **Video** carrier wave, the ratio(s) **Video/Audio** and the **C/N** ratio.
The measurement of the **Audio** carrier waves is always an **Average** measurement.

11.6 Thresholds

Predefined thresholds are used to assess if the measurement is pertinent.

Standard	Min	Max
Analogical terrestrial TV	57	74
DVB-C	57	74
DVB-T/H, DVB-T2	35	70
FM, carrier	50	66
Analogical satellite TV	47	77
DVB-S, DSS	47	77
DVB-S2	47	77

Decision thresholds are used to display the measures « Power Level » and « Measurement Map »:

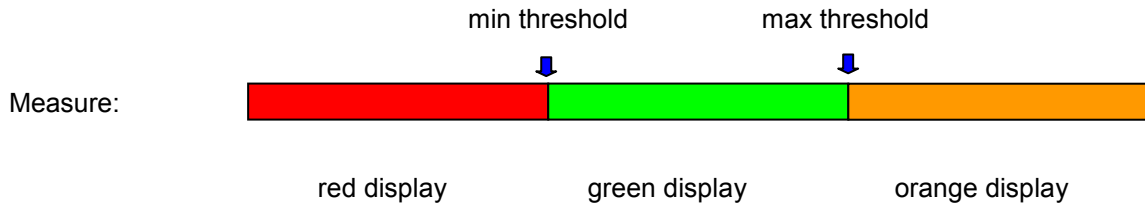





11.7 Digital measurements



In digital measurement mode, in addition to the **RF** level and to the **C/N** hereabove, the appliance also displays the various **BER** (Bit Error Rate), the **PER** (Packet Error Rate) and the **MER** (Modulation Error Ratio) under **DVB-T/H**, **DVB-T2**, **DVB-C**(not available on 7871), **DVB-S**, **DVB-S2** or **DSS**.

You also get the **LKM:x.xdB** (Link Margin) specification.

This expression in dB is the difference between the measured MER and the limit MER before disconnection of the image: **it's the security available before disconnection**.

	<p>The bargraphs are displayed with colors depending on the measured error rates:</p> <ul style="list-style-type: none"> - GREEN: good error rates - ORANGE: $BER_0 > 10^{-4}$ (QEF : Quasi Error Free) without lost packet - RED: lost packets (PER). <p>An automatic frequency check (AFC) is automatically activated in error rate measurement mode.</p>
	<p>“Sync ?” displayed on screen means that the signal is absent or unlocked; check its presence, the modulation parameters, the presence of remote power supply and the LNB and DiSEqC parameters under satellite band.</p>
	<p>The sign < before a value or error rate shows that there is no error but that 10^{-x} bits have been tested (i.e. $<10^{-8}$ means that 10^8 bits have been tested).</p>
	<p>You can shift from terrestrial to satellite mode by:</p> <ul style="list-style-type: none"> - Changing the setup frequency - Changing of standard - Changing of setup (from a terrestrial to a satellite setup)

11.8 DVB-T/H

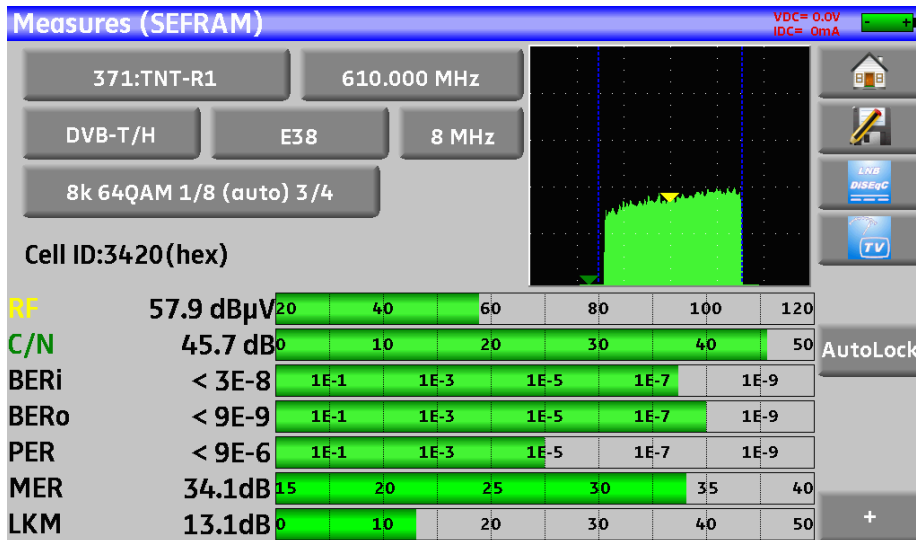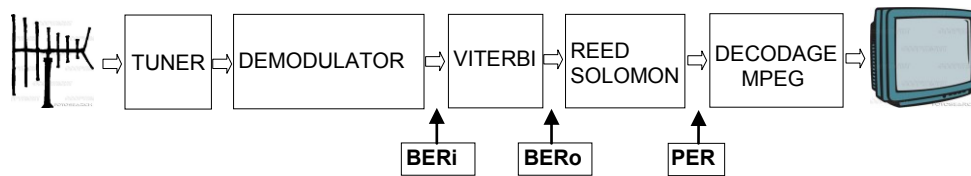

Display of the measures of:

- **BERi:** error rate before Viterbi
- **BERo:** error rate after Viterbi
- **PER:** error rate after Reed Solomon (error rate packet)
- **MER:** modulation error rate
- **LKM:** noise margin (Link Margin)

BERx: 'bits' error rate

Ratio between the number of false bits / number of transmitted bits during the measurement time

PER: 'paquets' error rate

Ratio between the number of false packets / number of transmitted packets during the measurement time

Recall: Under DVB-T/H, a packet is made of 204 octets; a packet is "false" if it includes more than 8 wrong octets (correction by Reed Solomon coding).


Display of the type of **Modulation** detected:

- number of carriers (8 K)
- constellation (64QAM)
- guard interval (1/32 auto)
- Viterbi rate (2/3)
- spectrum inversion

In case of poor signal quality or co-frequent analogical signal, it is wise to switch to the manual guard interval mode. To do so, you have to select the « Modulation » line and set the guard interval parameter to the right value.

Display of the value of Cell ID from the diffuser and specific to the emitter.

11.9 DVB-T2

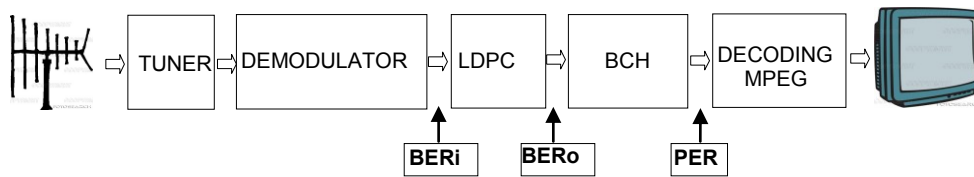

Display of the measures of:

- **BERi**: error rate before LDPC
- **BERo**: error rate after LDPC
- **PER**: error rate after BCH (lost packets)
- **MER**: modulation error rate
- **LKM**: noise margin (Link Margin)

Recall:

LDPC: Low Density Parity Check

BCH: Bose Chauhuri Houquenohem



The concatenation Viterbi + Reed Solomon of the correction of DVB-T/H has been replaced by the concatenation LDPC + BCH under DVB-T2.

Display of the type of **Modulation** detected:

- number of carriers (32 K)
- constellation (256QAM R)
- guard interval (1/8)
- Viterbi rate (3/5)

Display of the values of Network_ID, System_ID, Cell_ID from the diffuser and specific to the emitter.

11.10 DVB-C (not available on 7871)

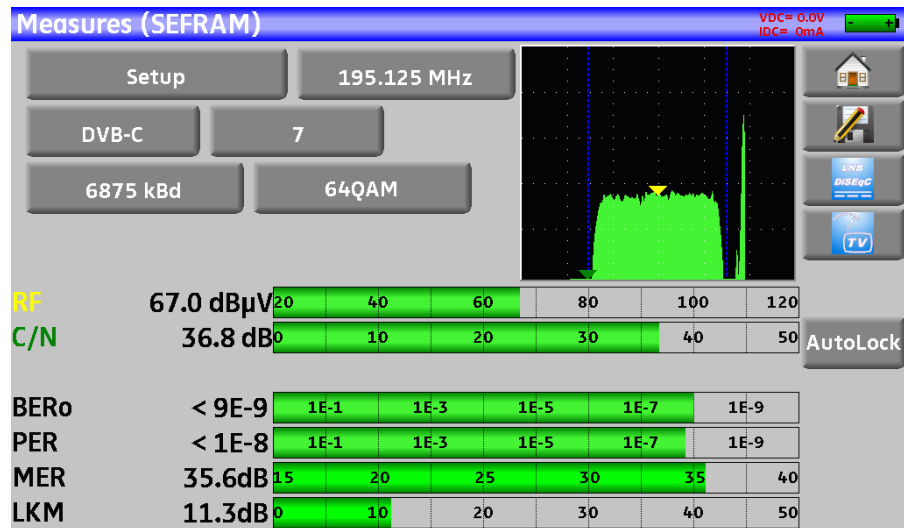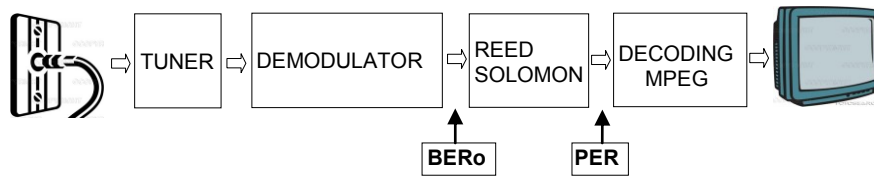

Display of the measures of:

- **BERo:** error rate before Reed Solomon
- **PER:** error rate after Reed Solomon (error rate packet)
- **MER:** modulation error rate
- **LKM:** Noise margin (Link Margin)

BERo: error rate 'bits'



Ratio between the number of false bits / number of transmitted bits during the measurement time

PER: error rate 'packets'

Ratio between the number of false packets / number of transmitted packets during the measurement time

Recall: Under DVB-C, a packet is made of 204 bites; a packet is "false" if it includes more than 8 wrong octets (correction by Reed Solomon coding).

11.11 DVB-S and DSS

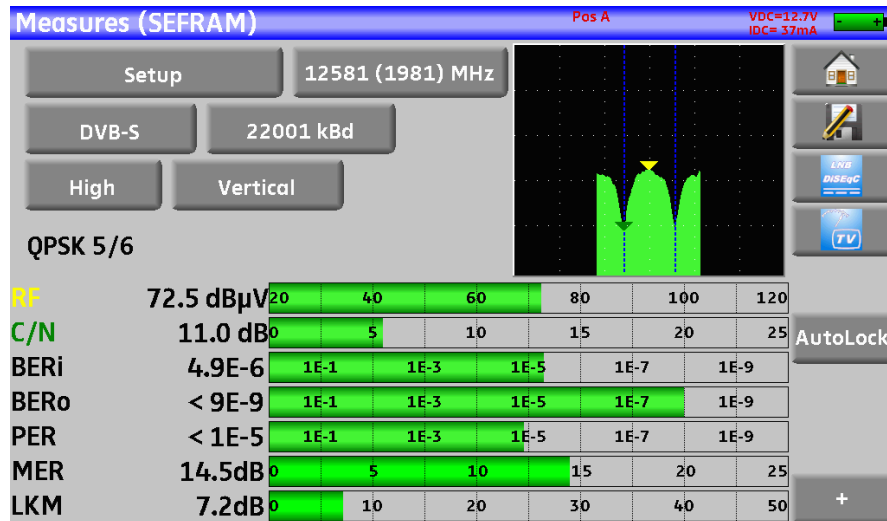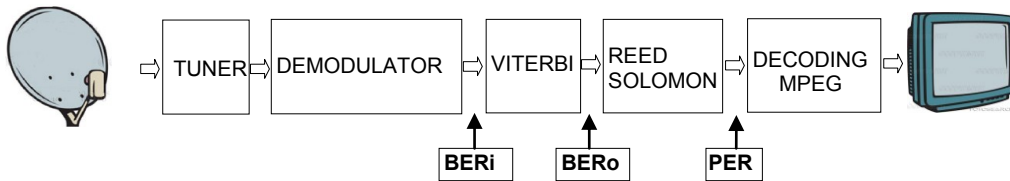

Display of the measures of:

- **BERi** : error rate before Viterbi
- **BERo** : error rate after Viterbi
- **PER** : error rate after Reed Solomon (error rate paquet)
- **MER** : modulation error rate
- **LKM** : Noise margin (Link Margin)

BERx : error rate 'bits'

Ratio between the number of false bits / number of transmitted bits during the measurement time

PER : error rate 'paquets'



Ratio between the number of false packets / number of transmitted packets during the measurement time

Recall: Under QPSK (DVB-S) a packet is made of 204 octets; a packet is "false" if it includes more than 8 wrong octets (correction by Reed Solomon coding). Under DSS, a packet is made of 146 octets.

Display of the type of **Modulation** detected:

- constellation (QPSK)
- Viterbi rate (3/4)

11.12 DVB-S2

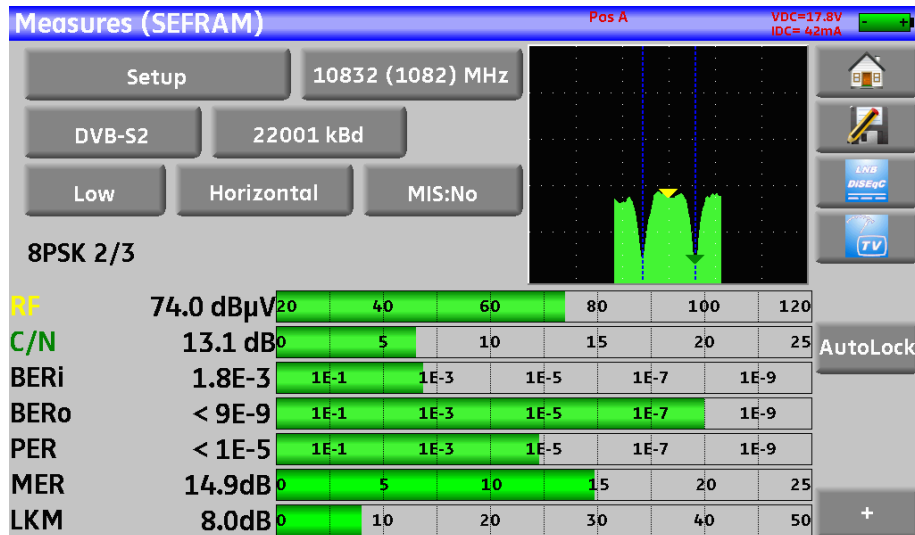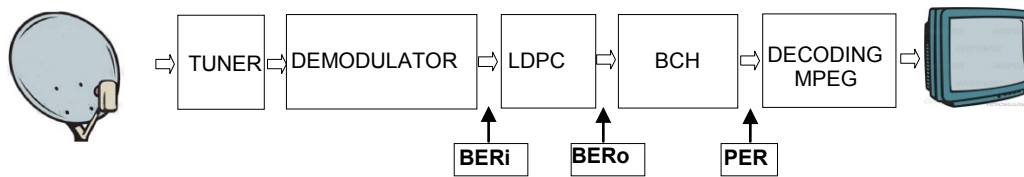

Display of the measures of:

- **BERi** : error rate before LDPC
- **BERo** : error rate after LDPC
- **PER** : error rate after BCH (lost packets)
- **MER** : modulation error rate
- **LKM** : Noise margin (Link Margin)

Recall:

LDPC: Low Density Parity Check

BCH: Bose Chauhuri Houquenohem

The concatenation Viterbi + Reed Solomon of the correction of DVB-S has been replaced by the concatenation LDPC + BCH under DVB-S2.

Display of the type of **Modulation** detected:


- constellation (8PSK)
- Viterbi rate (2/3)

12 Spectrum analyser

Pressing SPECTRUM gives access to the **SPECTRUM ANALYSER** function.

2 modes are available: **expert mode** and simplified mode. This selection is made at **Configuration** page.

12.1 Simplified Spectrum

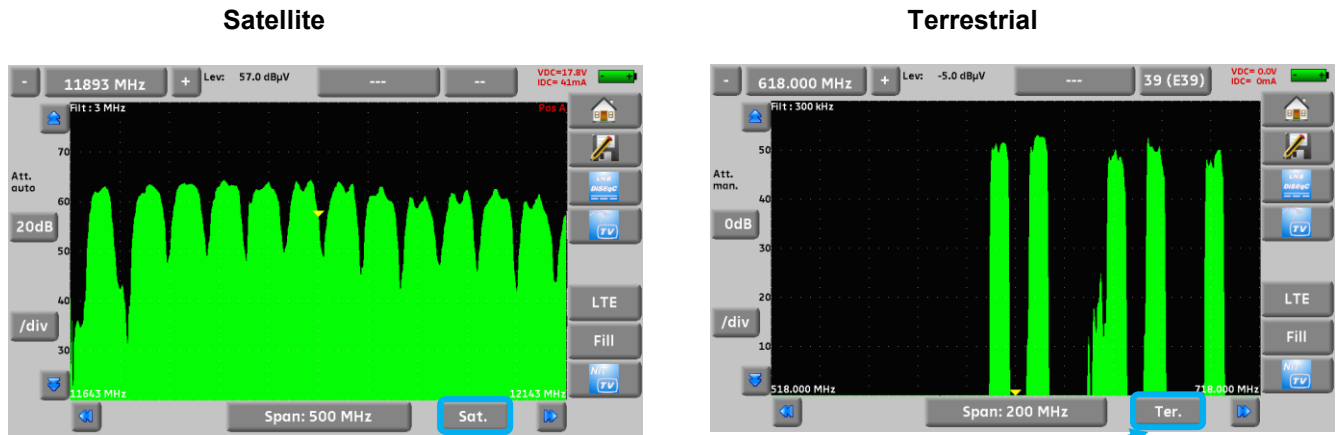

2 predefined bandwidth are available: terrestrial and satellite. To swap from satellite to terrestrial, press the key, as shown on the bottom side of the screen.

The input attenuator is automatically setup according to the level of the signals measured.

Filters are automatically selected according to the « Span ».

The filter use dis displayed on the upper left corner.

Parameters of the spectrum are :

Frequency: value of the frequency where the cursor is, user can enter a frequency value, or increase – decrease the frequency with +/- keys

Cursor: simply press the area where you want to move or set the cursor


List: you can select a Program (in the current list)

Channel: use a channel for the spectrum (in terrestrial mode).

Reference level: can be modified with up-down arrows

X dB : attenuator choice (auto, 5, 10, 15dB,...)


/div : amplitude vertical scale 2dB, 5dB or 10dB

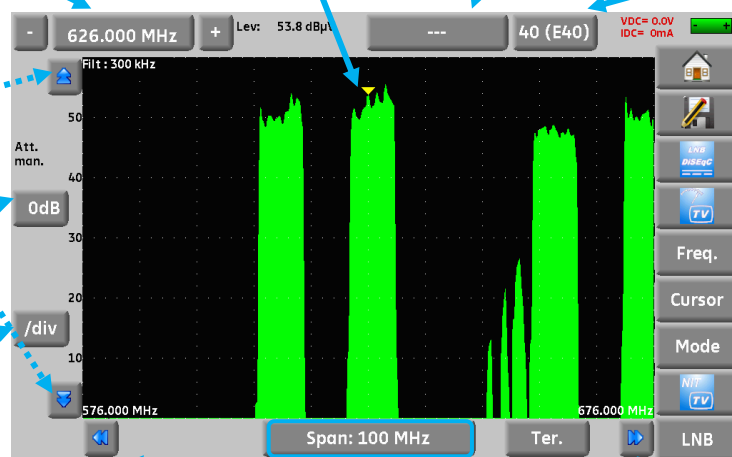

Span : frequency span around the center frequency

Frequency range: can be changed using the arrows

12.2 Additional functions for satellite:

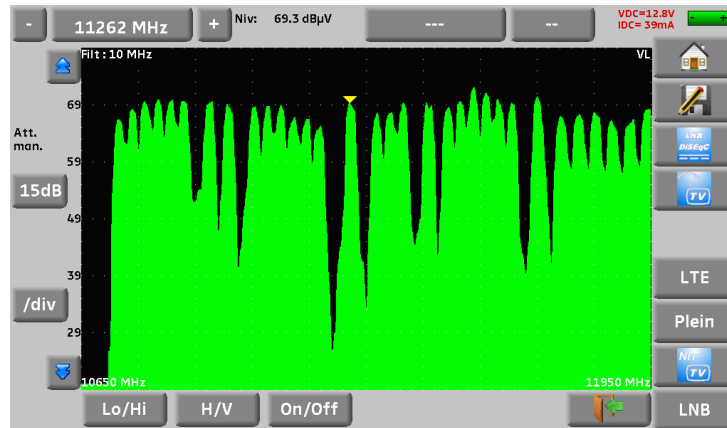


LNB function: to change the polarization (Hi/Low, horizontal/vertical, and On/Off)

12.3 LTE mode:


The LTE function simulates the effect of a filter for LTE (4G) signal. It will display the simulated signal with filter (it is used mostly for the high band, channels 61 to 69).

The red curve is the simulated spectrum using a LTE filter (you can see on the picture below that channel 59 is attenuated by the filter).

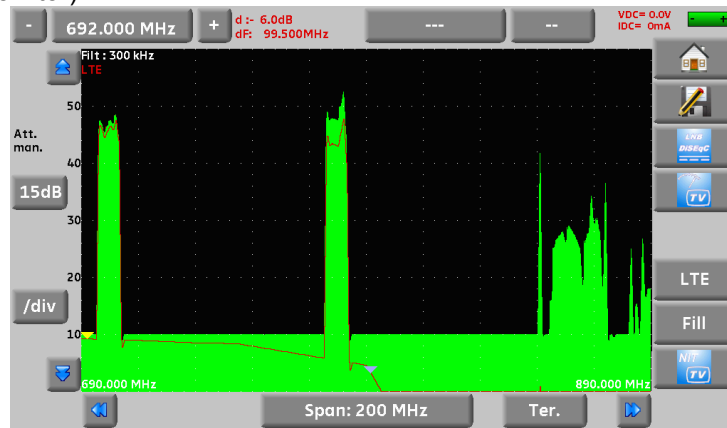

12.4 Fill mode


The Fill key changes the spectrum display as shown on the picture :

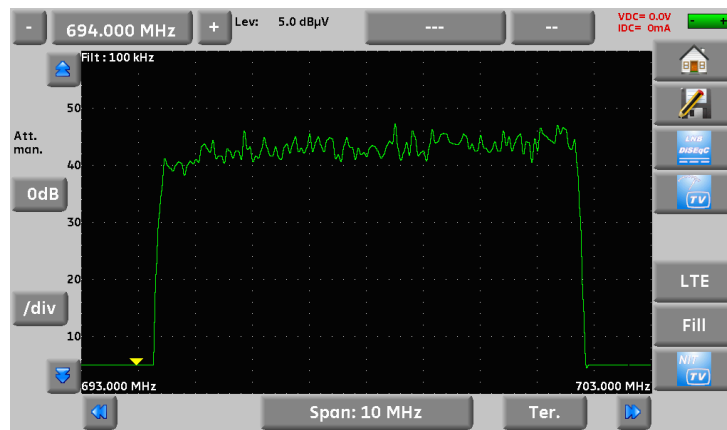


12.5 NIT/TV mode

This function will display the TV program in the upper right corner of the spectrum, for the selected channel.

The message displays « Network Name » and « Network id » informations.

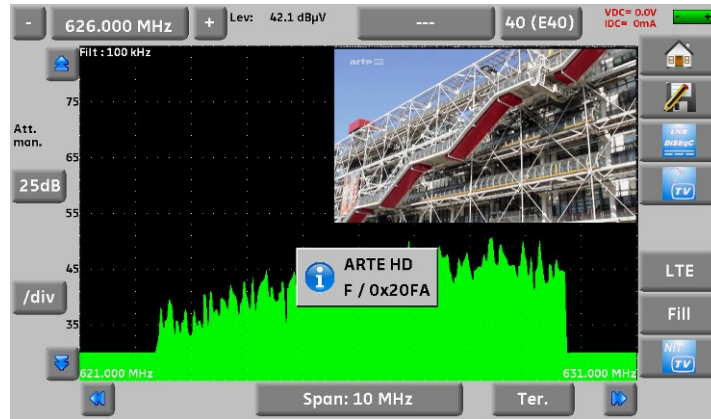

In satellite, the instrument displays the satellite information (name and position)

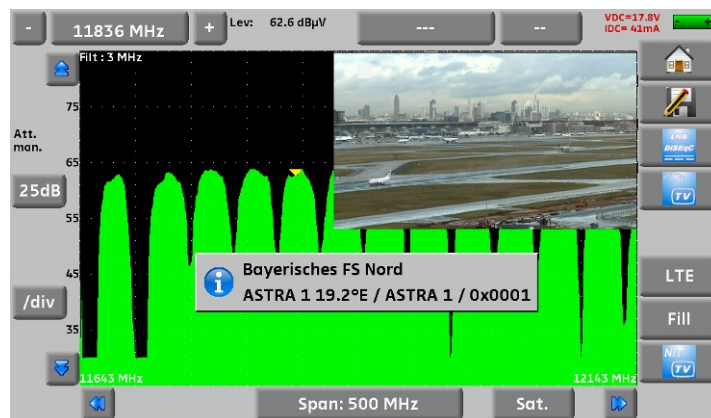

The display of a TV program is possible only for non-encrypted channels. For encrypted channels, the instrument will display « conditional access ».

Displaying TV program can take several seconds because the instrument is looking for standard and modulation of the channel before being able to decode and display the program.

Some broadcasters did not fill the MPEG NIT information.

Instrument can display only the information supplied by broadcasters in the digital signals.

12.6 Expert spectrum (not available for 7871 and 7872)


All functions of the simplified spectrum are in the expert mode, with additional capabilities.



Pay attention to the risks of saturation, use the following formula :
Input attenuator = Reference level – 50 dBμV.


12.6.1 Mode key

This keys permits to access to functions : fast spectrum, level, LTE and Fill

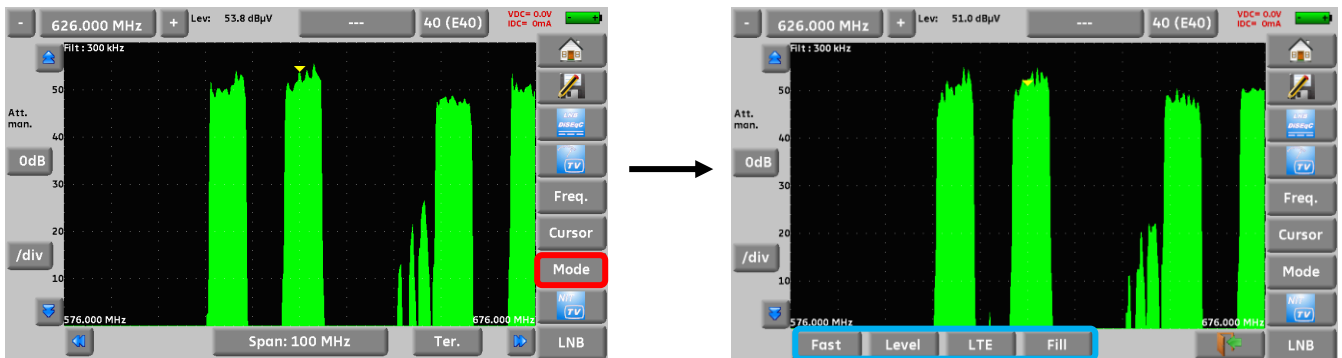

12.6.1.1 Display mode


In expert mode, it is possible to change the display mode.

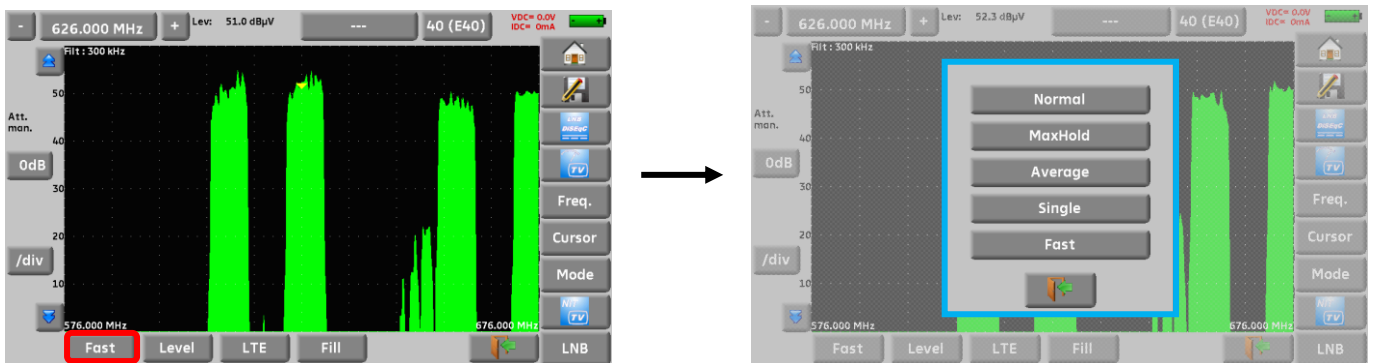

- **Normal** : normal mode, continuous measurements
- **MaxHold** : continuous measurement displaying the max level for each frequency
- **Average** : continuous measurement, displaying the average for each frequency
- **Single** : single shot spectrum analysis. New measurement when pressing Start
- **Fast** : fast time base, without level measurement

12.6.1.2 Measures

In expert mode, it is possible to display measures.

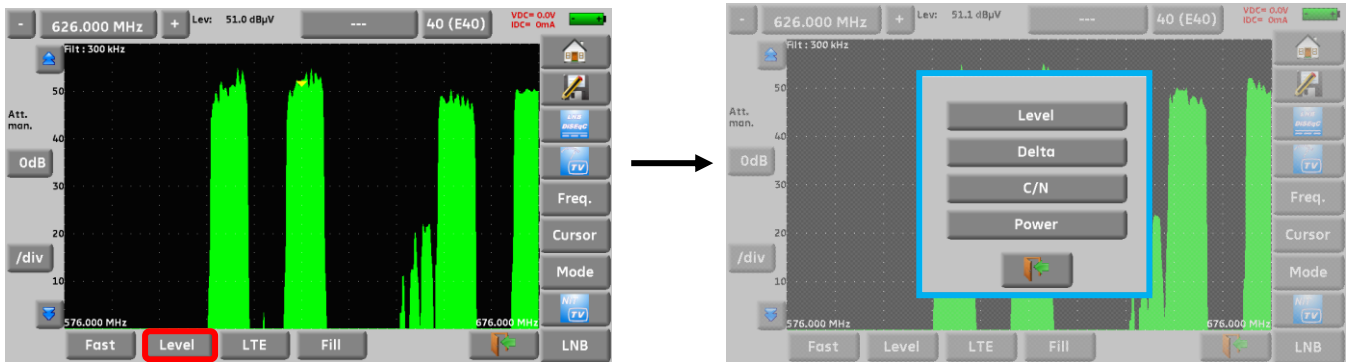

- ➔ ➔ **Level**: measurement of the signal's amplitude at the cursor.
- ➔ ☐ **Delta** : measurement of the amplitude between the two cursors
- ➔ ☐ **Power**: automatic measurement of the digital carriers' powers
- ➔ ☐ **C/N** : automatic measurement of C/N

Automatic Power measurement

- ➔ Positioning of the reference level
- ➔ Search for the noise before and after the cursor location
- ➔ Calculation of the area between these two limits
- ➔ Display of the value

Automatic C/N measurement :

- ➔ Positioning of reference level
- ➔ Search for Maximum peak level
- ➔ Search for noise level
- ➔ Display of level difference

Performing a manual C/N measurement :


To minimise the appliance's noise:

- ➔ Program a reference level as low as possible (greater dynamic range).

Measurement :

- ➔ for an AM modulated analogue video carrier, select **Max** mode
- ➔ for a digital carrier, select **MaxHold** mode
- ➔ position the cursor on the carrier (in the middle for a digital carrier)
- ➔ shift to **Delta** measurement and put the reference (☐ **Ref**) on the highest point
- ➔ shift to **MaxHold** and move the cursor to an area with no carrier (Noise)
- ➔ C/N is displayed at the top and in the middle of the screen


12.6.1.3 Frequency

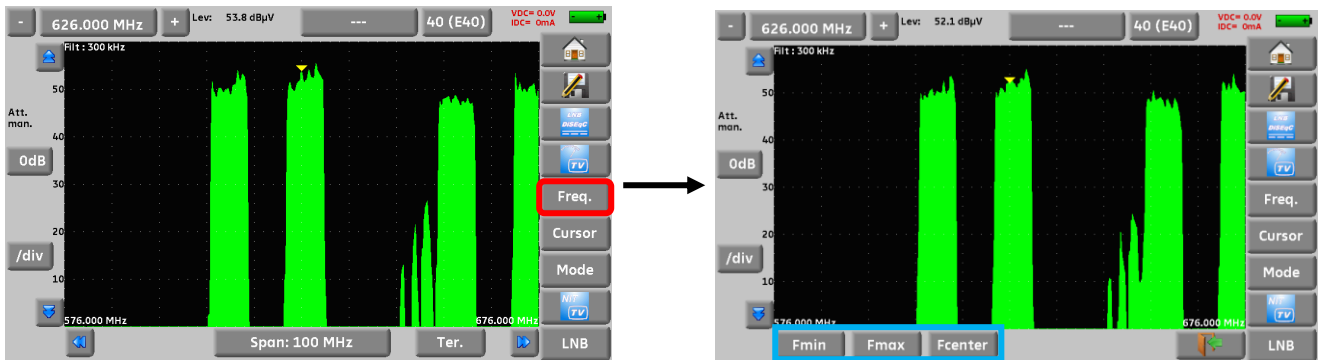



You adjust the following parameters :

- **Fmin** : start of frequency sweep
- **Fmax** : end of frequency sweep
- **Fcenter** : center frequency

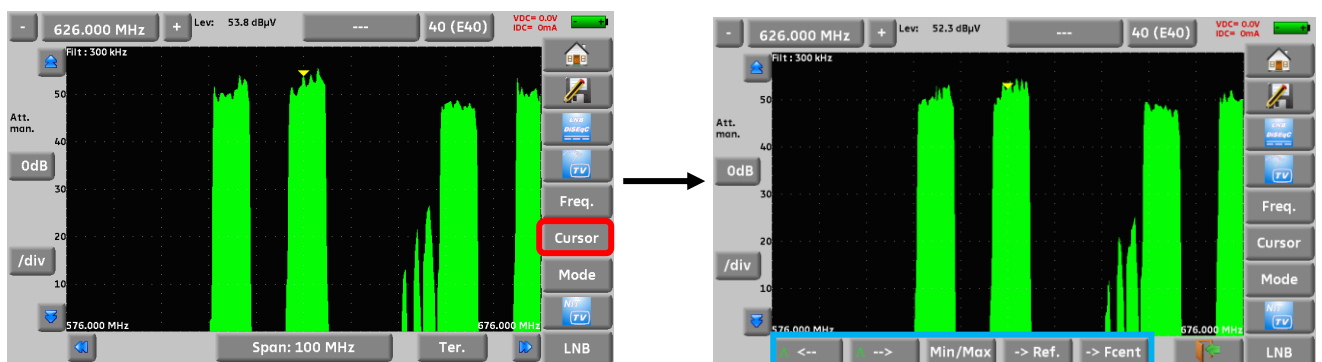12.6.1.4 Cursor



Cursor : fast positioning of cursor and peak search :

-  : on previous peak
-  : on next peak
- **Min / Max** : toggle between Min and Max on the screen
- **→ Réf.** : set a reference cursor (cross) for Delta or C/N measurements
- **→ Fcent** : cursor frequency becomes center frequency (if possible)



If attenuator is set manually, and for avoiding saturation and wrong display, the input level must stay below Attenuator value + 50 dBμV.

Example : to display a signal @ 110 dBμV, you must use a 60 dB attenuator

13 Image and Sound


Pressing the TV zone gives access to the **TV** function.

13.1 Digital TV


The name of the service and its main characteristics are displayed on top right of the screen.


- 720x576i: picture resolution 720 pixels / line, 576 lines, interlace
- 25 Hz: frame frequency
- MPEG-2: picture compression
- Video Rate 2.034 Mbits/s: instantaneous binary rate of the service
- Audio MPEG Layer II: sound compression

On this page, there are 7 keys at the bottom of the screen; they will be described in the next chapters

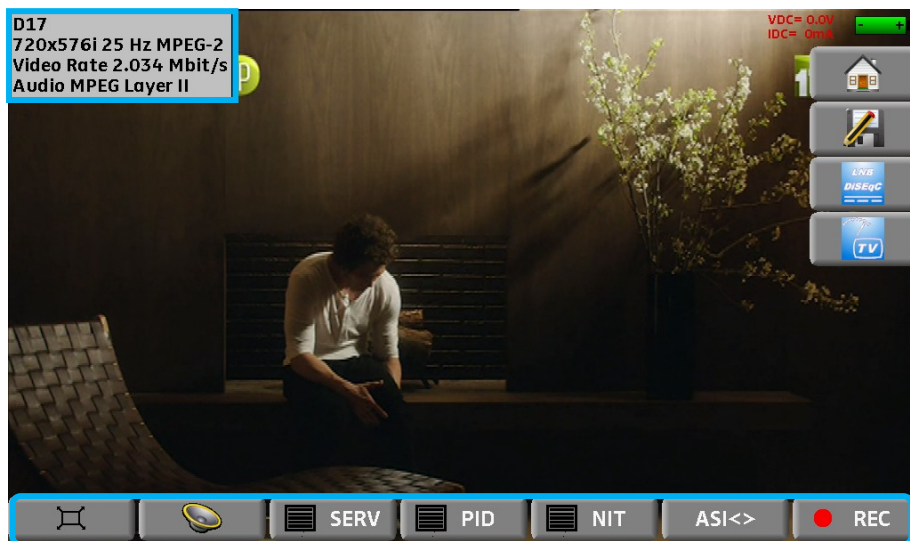

13.2 Full screen mode

Pressing the key  displays the image full screen; only remain the battery level and the intensity and tension of the remote power supply:

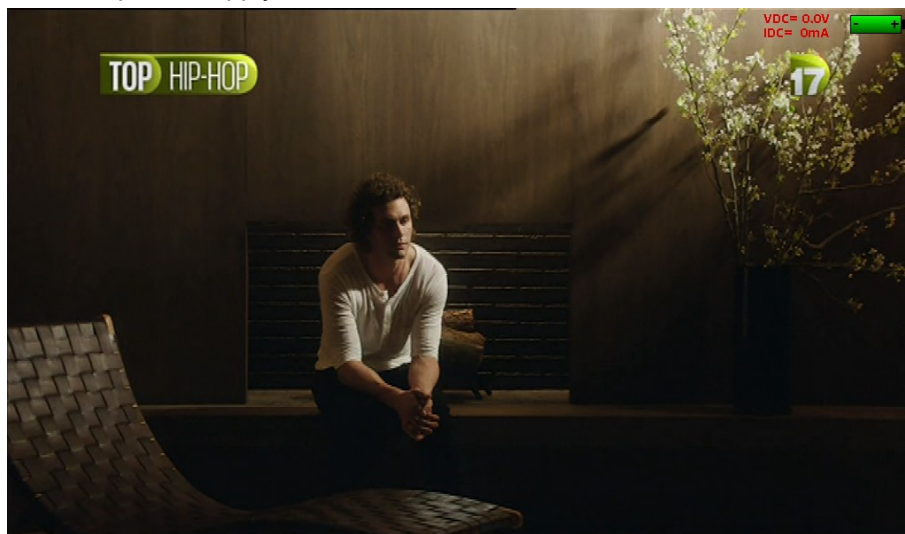

To exit, you only have to touch the screen anywhere.

13.3 Audio

To set the volume, press  an adjustment bar shows up:

The instrument can decode the following digital sound formats:

MPEG-1 L1/L2

AAC Advanced Audio Coding

License Via Licensing

HE-AAC High Efficiency AAC

License Via Licensing

Dolby Digital

License Dolby®


Dolby Digital Plus


License Dolby®

Made under **licence** by **Dolby** laboratories.

Dolby and the double-D symbol are trademarks of **Dolby Laboratories**

13.4 Table of services

Pressing  **SERV** gives access to the list of services:

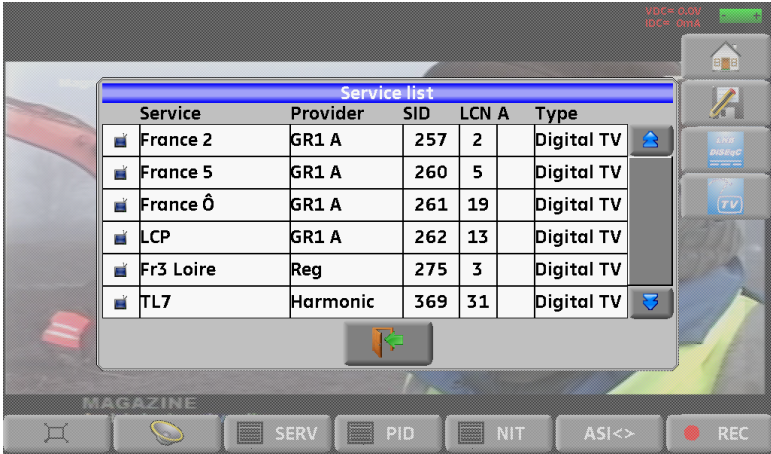


The screenshot shows a 'Service list' menu with a table of services. The table has columns for Service, Provider, SID, LCN, A, and Type. The services listed are France 2, France 5, France Ô, LCP, Fr3 Loire, and TL7. The bottom of the screen shows a navigation bar with icons for MAGAZINE, a volume icon, SERV, PID, NIT, ASI<>, and REC.

Service	Provider	SID	LCN	A	Type
France 2	GR1 A	257	2		Digital TV
France 5	GR1 A	260	5		Digital TV
France Ô	GR1 A	261	19		Digital TV
LCP	GR1 A	262	13		Digital TV
Fr3 Loire	Reg	275	3		Digital TV
TL7	Harmonic	369	31		Digital TV

This function also allows you to select the channel you want to display TV. You only have to press the line you want.


13.5 PID function

Pressing  **PID** gives you access to the PID list:

The various PID are described under this function.

In the case of a multilingual emission, you can change the language by pressing the line you want.


Example: PID 732/Audio MPEG1 for an emission in German (code deu).




The screenshot shows a 'Program Map Table' menu with a table of PIDs. The table has columns for PID and Language Code. The entries are PID 731/Audio MPEG1 with Language Code qaa, and PID 732/Audio MPEG1 with Language Code deu. The bottom of the screen shows a navigation bar with icons for MAGAZINE, a volume icon, SERV, PID, NIT, ASI<>, and REC.

PID	Language Code
PID 731/Audio MPEG1	qaa
PID 732/Audio MPEG1	deu

13.6 NIT function

Pressing  NIT gives you access to the NIT list:

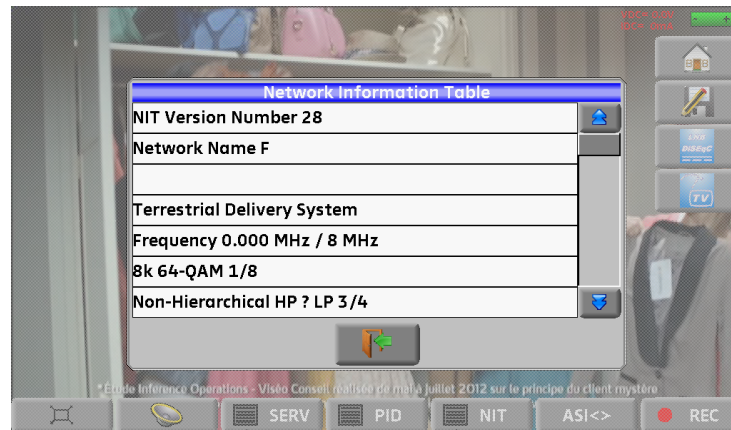


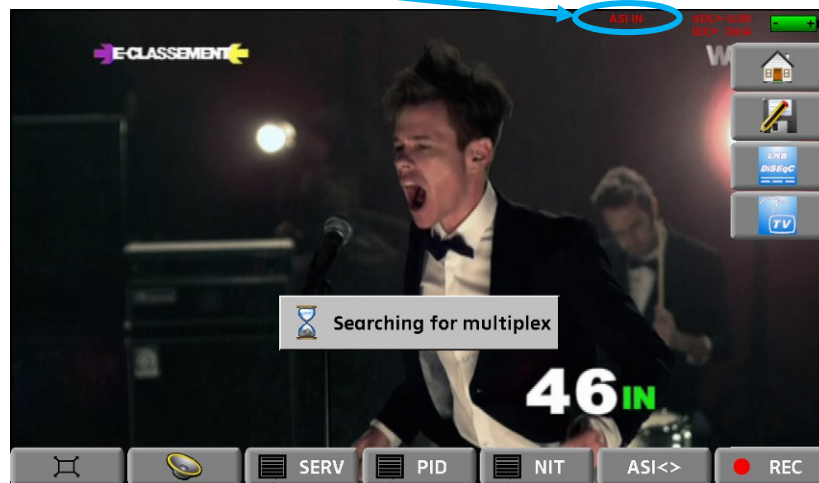
This function allows the display of the « Network Information Table » of the multiplex. The name of the network and some other helpful information are shown in this list.

13.7 ASI TS function (not available on 7871 and 7872)

The input and output of the digital video signal MPEG are made according to the ASI standard (« asynchronous serial interface »).


It is a serial asynchronous (without a clock) transmission at 270MHz on a coaxial cable to enter or exit a digital modulator or a MPEG frame analyzer, for example.

Pressing  ASI<> displays the ASI input connected to the appliance (in this mode, **ASI IN** shows up blinking red on top right of the screen).



The appliance continuously emits the displayed multiplex to the ASI OUT output.

13.8 Record function PVR (not available on 7871 and 7872)

When using  function, the instrument will record on USB memory stick the transport stream (audio and video). The stream is the one of the displayed channel. File type is *.TS

This function uses the USB-A port, and the port must be set « active » before recording (see [Active USB port](#))


The first press on Rec start recording, a second press stops recording.



Notes: it is not possible to play back the recorded stream by the instrument ; The *.TS file can be played on a computer with appropriate software. When recording an encrypted channel, the record keeps the encryption.


13.9 Rights of access / Access card (not available on 7871)


The port for an access card (subscription card) is on the left of the appliance (option according to the model).

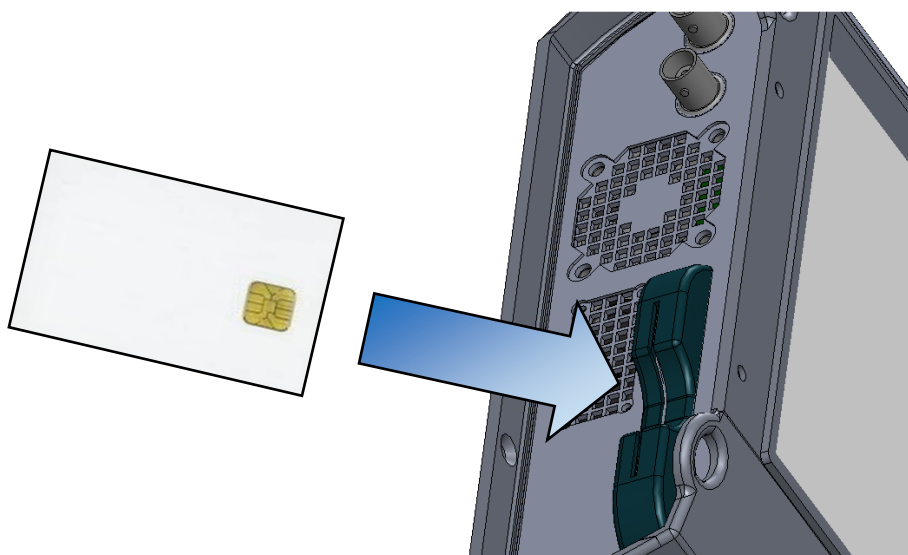

If the displayed TV channel is encrypted, the appliance automatically checks on the card interface whether a subscription card is present and whether the encryption key is compatible.

14 Remote power supply / LNB – DiSEqC


The  key gives you access to the remote power supply / LNB-DiSEqC.
To start the remote power supply, press the key before Remote power supply:

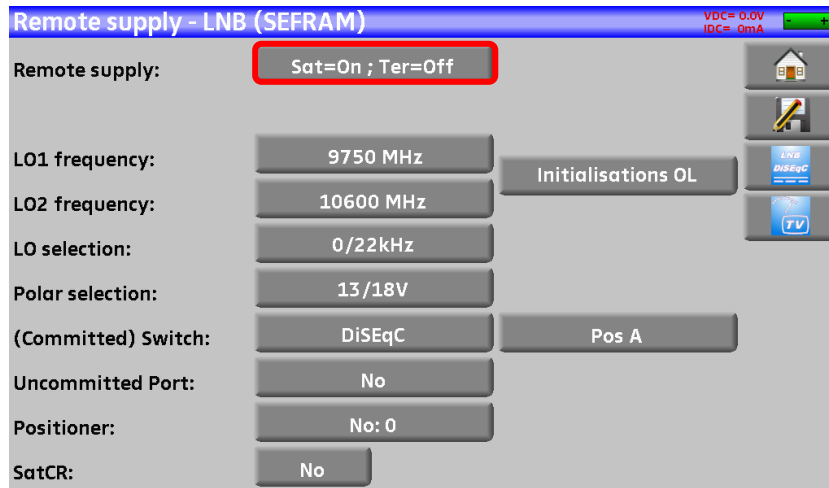

The window allows you to select the remote power supply on terrestrial and/or satellite mode.

14.1 Terrestrial band

In terrestrial mode, you can select:

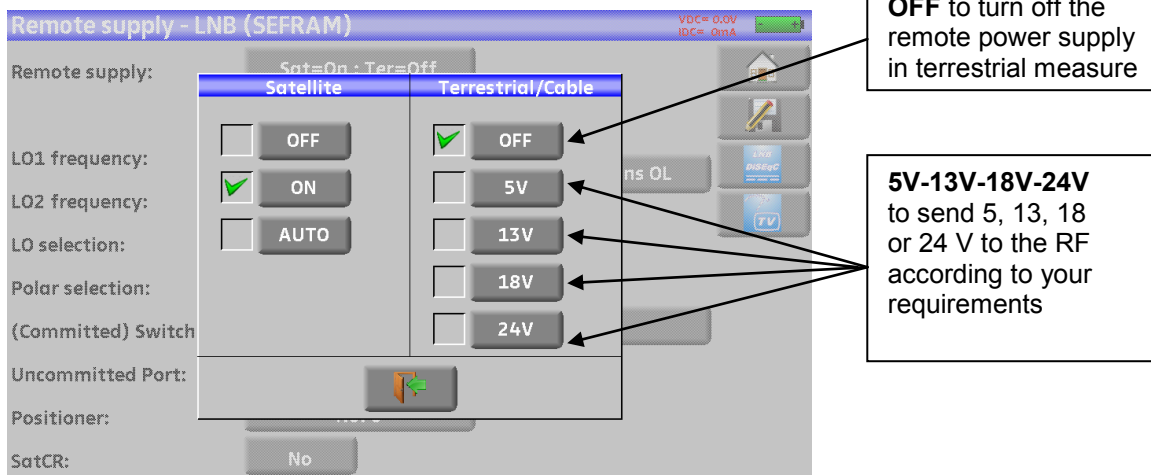

A green check shows up where you validated.

14.2 Satellite band

14.2.1 Launching

Setting the remote power supply to satellite:

OFF to turn off the remote power supply under satellite measure

ON to turn on the remote power supply under satellite measure

AUTO to launch automatically the remote power supply in satellite measure mode even after shutting off

Configuration lines:

- **OL1 frequency:** OL frequency low band of LNB

- **OL2 frequency:** OL frequency high band of LNB

- **OL selection:** band commutation on the LNB (22kHz, ToneBurst or DiSEqC)

- **Selection polar :** polarization commutation on the LNB (13/18V or DiSEqC)

- **Switch:** switch type and position (No, ToneBurst, 22kHz, DiSEqC, Pos A, B, C or D)

- **Uncommitted:** "Uncommitted" switch type and position (No, DiSEqC, Pos 1 to 16)


- **Positioner:** presence of a positioner (Yes / No)

- **SatCR:** SatCR mode (single cable distribution)

- **Initialization:** sets up the OL1 and OL2 frequencies under KU band

See chapter [Man-machine interface](#) for any change.

14.2.2 Switches

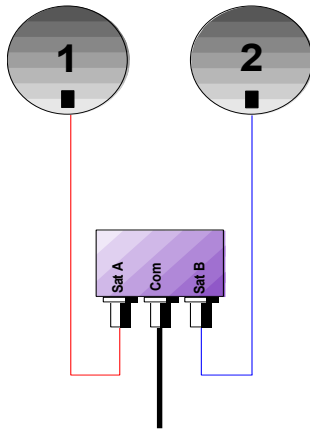


2-satellite switch

* 22 kHz


* ToneBurst (MiniDiSEqC)

*DiSEqC Committed or Uncommitted

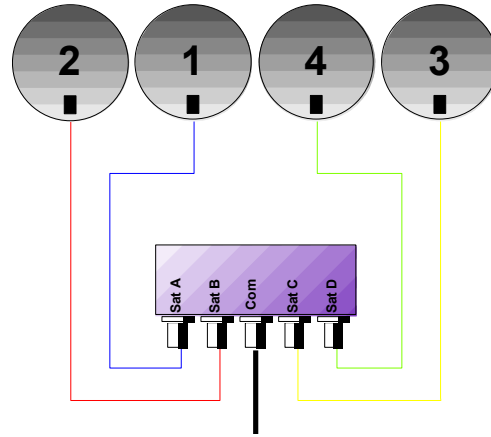

4-satellite switch

* DiSEqC Committed or Uncommitted

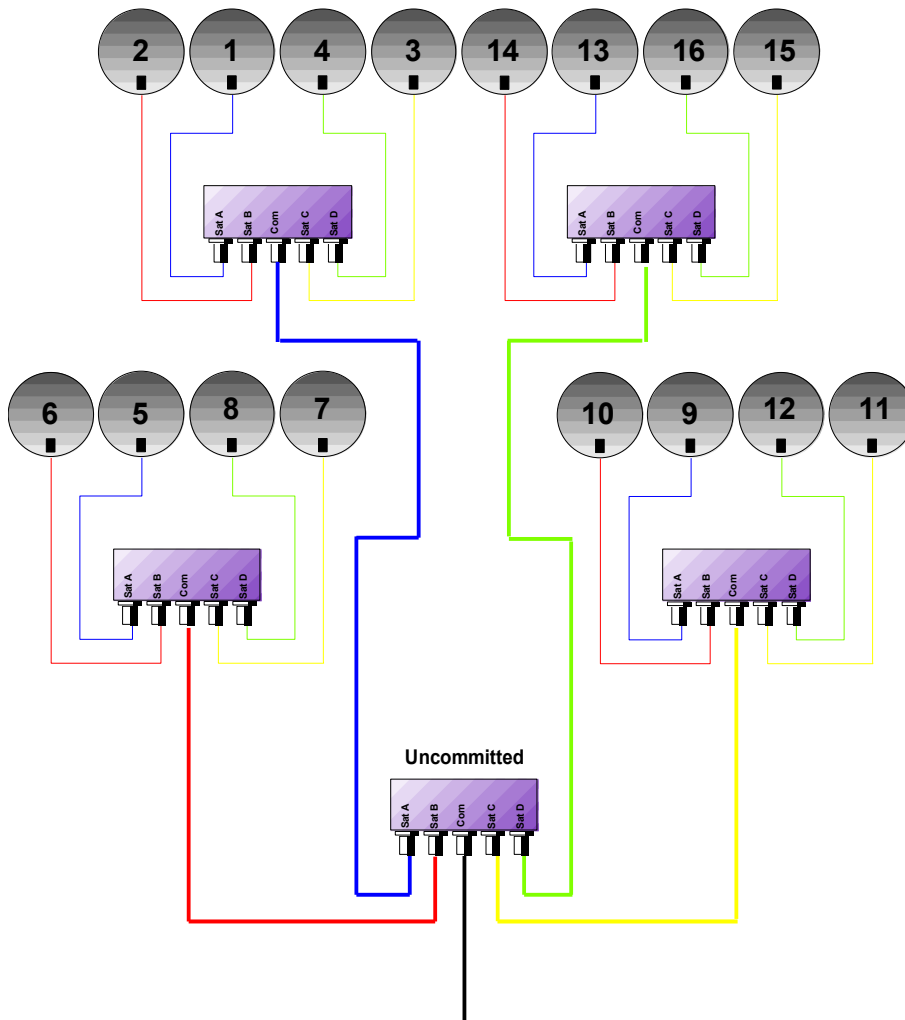

16-satellite switch

* DiSEqC Committed + Uncommitted

Switch line			Uncommitted line	
Satellite	Position	Commande DiSEqC	Position	Commande DiSEqC
1	Pos A	Option A + Position A	Pos 1	Input 1
2	Pos B	Option A + Position B	Pos 1	Input 1
3	Pos C	Option B + Position A	Pos 1	Input 1
4	Pos D	Option B + Position B	Pos 1	Input 1
5	Pos A	Option A + Position A	Pos 2	Input 2
6	Pos B	Option A + Position B	Pos 2	Input 2
7	Pos C	Option B + Position A	Pos 2	Input 2
8	Pos D	Option B + Position B	Pos 2	Input 2
9	Pos A	Option A + Position A	Pos 3	Input 3
10	Pos B	Option A + Position B	Pos 3	Input 3
11	Pos C	Option B + Position A	Pos 3	Input 3
12	Pos D	Option B + Position B	Pos 3	Input 3
13	Pos A	Option A + Position A	Pos 4	Input 4
14	Pos B	Option A + Position B	Pos 4	Input 4
15	Pos C	Option B + Position A	Pos 4	Input 4
16	Pos D	Option B + Position B	Pos 4	Input 4

14.2.3 Positioner

The appliance sends a DiSEqC command that triggers the rotation of a motorized satellite dish.

Remote supply - LNB (SEFRAM) VDC= 0.0V IDC= 0mA

Remote supply: Sat=On ; Ter=Off

LO1 frequency: 9750 MHz

LO2 frequency: 10600 MHz

LO selection: 0/22kHz

Polar selection: 13/18V

(Committed) Switch: DiSEqC

Uncommitted Port: No

Positioner: Yes: 2

SatCR: No

Initialisations OL

Pos A

In this example, the position is 2 (1 to 127 pre-loaded positions in the positioner)

If the positioner is on No, it is deactivated

See chapter [Man-machine interface](#) for any change.

14.2.4 SatCR mode

Description:

SatCR: Satellite Channel Router or Single Cable Distribution

Distribution of the satellite signal with only one coaxial cable in single-family dwelling to 2, 4 or 8 different receptors.

To give several receptors access to the whole spectrum and all polarizations, you need **one coaxial cable per receptor** and a suitable installation (multiple LNB, Quattro and multi-commuters).

The SatCR mode is an extension of the DiSEqC protocol that allows the connection of several receptors on **only one coaxial cable**, no matter the band (H/L) and the polarization (H/V).


A European industrial standard has been developed for delivering satellite signals on only one coaxial cable - **EN50494**.

Functioning:

Each satellite receptor uses a fix frequency band (**Slot** or **Port**), whose width is (more or less) equal to the width of the transponder.

The receptor requires a specific transponder frequency (frequency Ku) via a DiSEqC command.

Some equipment on the satellite dish (LNB or switch SatCR) moves the requested signal to the center of the selected band (**Slot**). Then, the mixing equipment adds each user band (**Slot**) to only one output (up to 8 user bands).

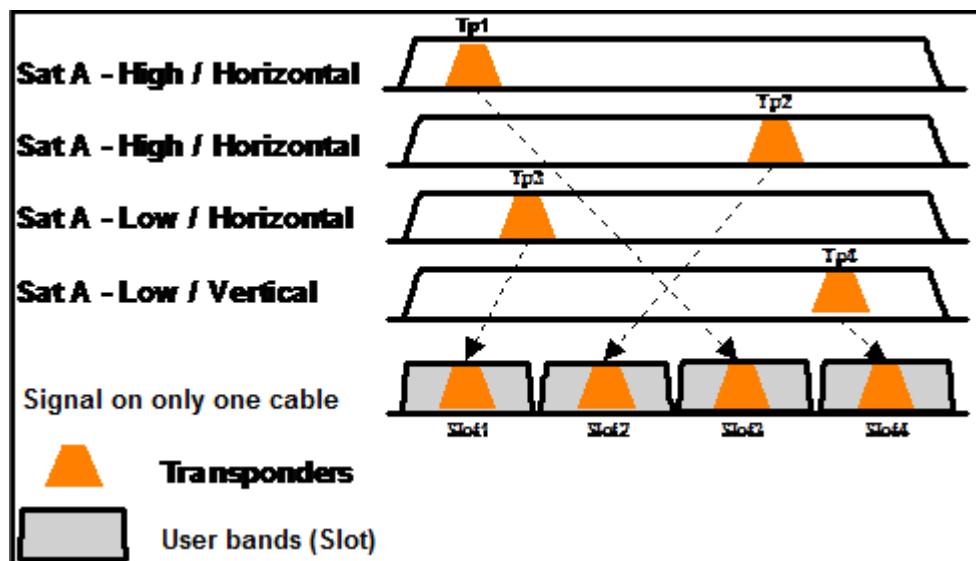

The SatCR mode has priority on all other modes: selection polarization, selection OL, switches committed and uncommitted and positioner.

Use:

SatCR line:

- Slot 1: selection of the SatCR slot; if this key is marked No, the SatCR mode is deactivated
- Freq. SatCR.: access to the setting of the slot frequency
- Pos A: selection of switch Pos A / Pos B

See chapter [Man-machine interface](#) for any change.

14.2.4.1 Automatic research of the slot frequencies

Set-up: 8-user band set-up (slots), predefined frequencies

Italy: Specific set-up for users in Italy, predefined frequencies

Detect: Automatic detection of the slots (order and frequencies)

Suppress: Suppression of a slot (on the selected line)


You can also manually settle each slot frequency by pressing the corresponding key.

14.2.4.2 Influence of the SatCR mode on the spectrum analyzer

Frequency of the transponder visible at the center of the active slot


SatCR mode and active slot

Current polarization and band in the active slot

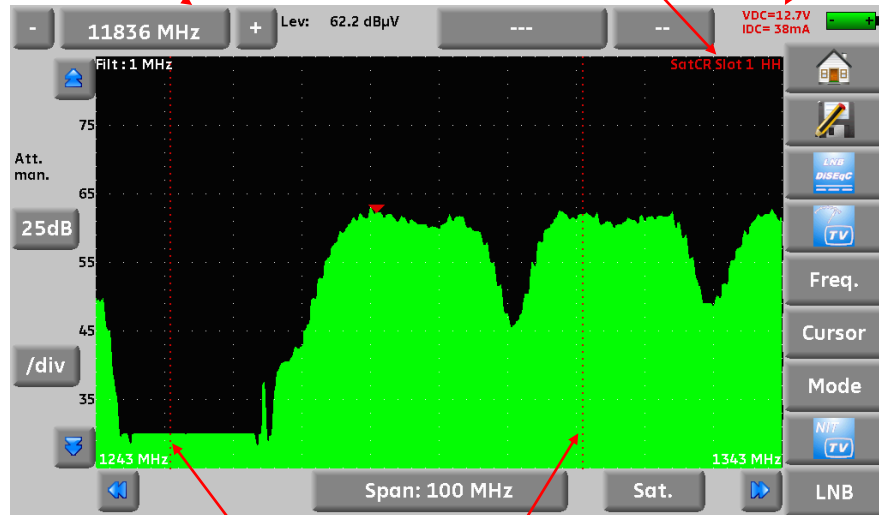

Landmarks of the user band (slot)


15 Constellation


The  Constellation key gives you access to the **CONSTELLATION** function.


These measures are available if one of these standards is running in the **LEVEL MEASUREMENT** page.

- DVB-T/H
- DVB-T2
- DVB-C (not available on 7871)
- DVB-S, DSS, DVB-S2

The appliance displays the **Constellation** of the current signal.

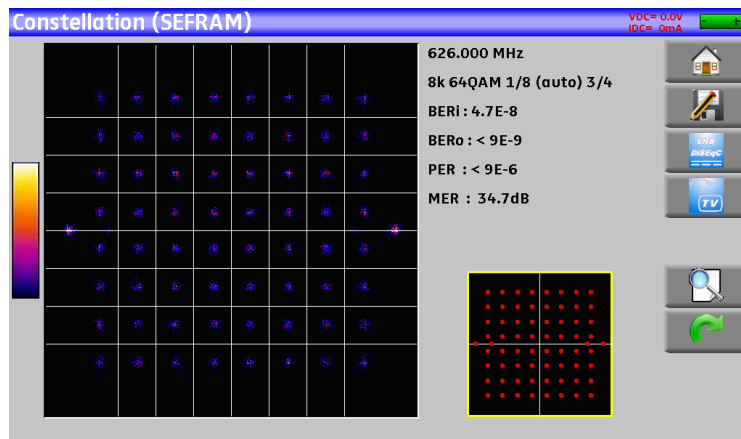


On this page, you can “zoom” on one of these quadrants by pressing 

You can change the display of the quadrant by pressing 

On this page, there is a template (with ideal constellation spots).

On this template, there is a yellow frame that shows where to zoom on the constellation.

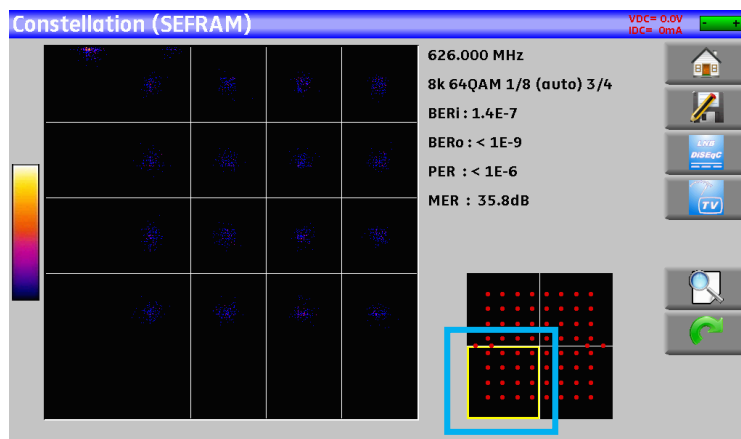

The information displayed on the right of the **Constellation** diagram is:

- current frequency
- modulation
- constellation
- symbol rate
- error rate and MER

16 Echo Guard interval




Available only for DVBT/H or DVB-T2 standards.

Pressing




Echo interval de garde


allows you to access to **Echo Guard interval measurement**.

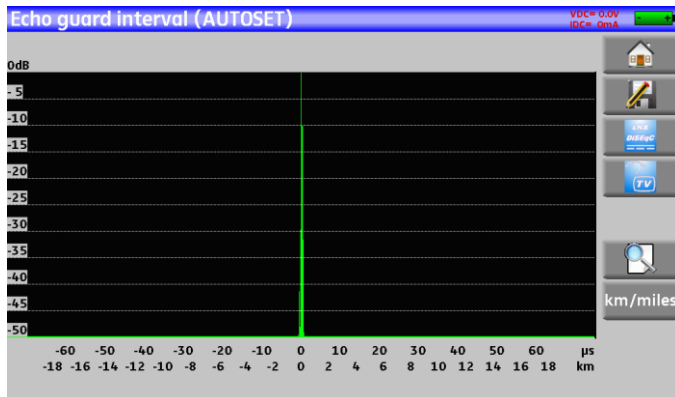

Signal without echo

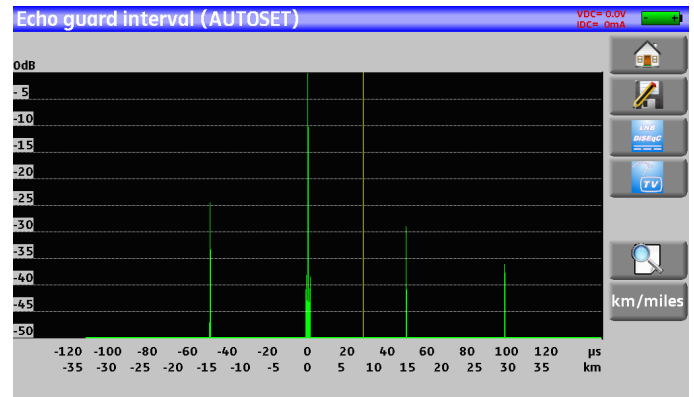

Signal with echoes and pre-echoes

Pressing  changes the horizontal scale (distance).


Horizontal scale can be set in km or miles by pressing



The end of the guard interval is displayed with a yellow line.

Reminder :

Remember: In terrestrial TV broadcasting, the received signal on the antenna comes from several possible ways: the **echoes**.

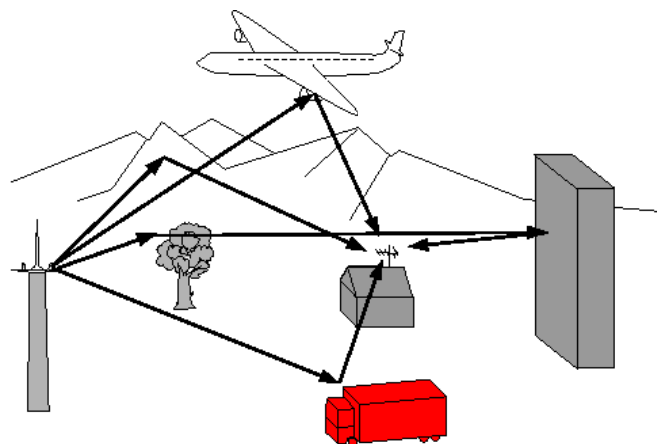


In digital TV DVB-T/H and DVB-T2, these echoes may help or degrade the image according to the time delay between the various signals that reach the antenna.

The broadcasting norms DVB-T and DVB-T2 define a modulation parameter called "**guard interval**" where echoes won't disturb the reception.

The transmission of digital data (**Symbol**) is interrupted during the **guard interval**.


A delayed (or advanced) symbol of any **shorter** duration than the guard interval will not disturb the reception.

A delayed (or advanced) symbol of any **longer** duration than the guard interval will disturb the reception.

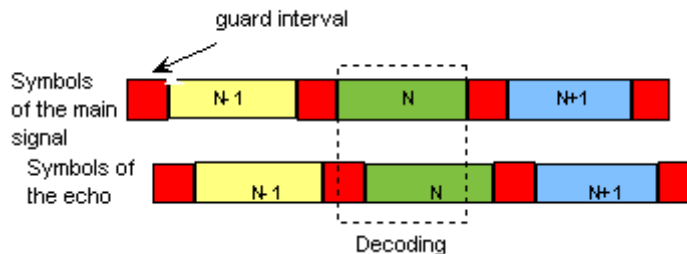

You have to reduce the level of reception of the echoes by orienting the antenna or by selecting a more directive antenna.

The **Echo** function of the appliance enables you to display possible **echoes** that disturb the received signal.

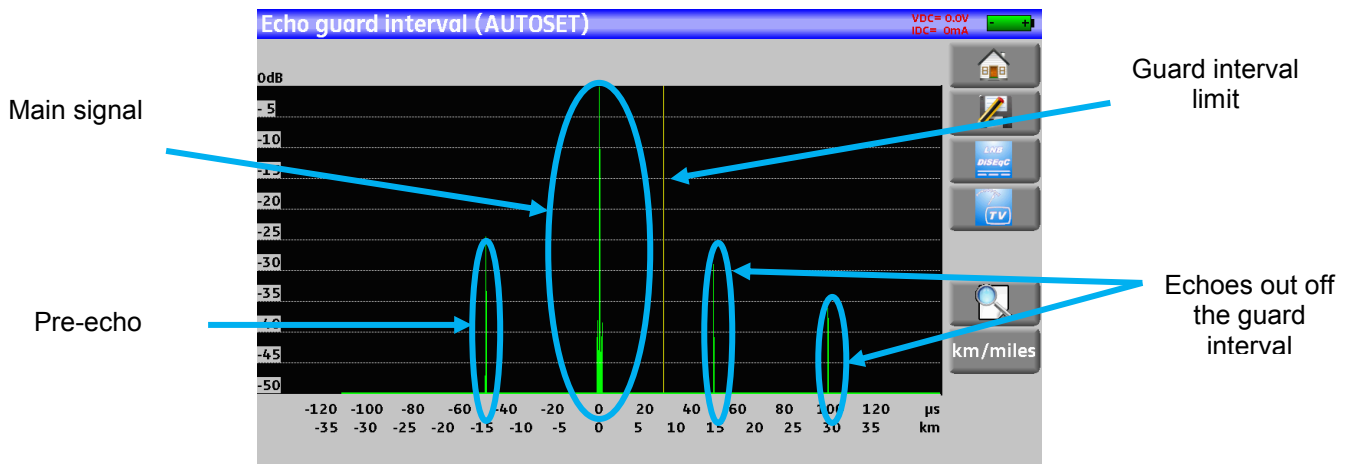

Relative amplitude in dB and delay in μs (distance in km) from the main signal (0 pulse) can be measured.

The yellow line represents the end of the guard interval.

Echoes and pre-echoes (pulses) above the yellow line disturb the signal and must be reduced as much as possible.


The echoes (pulses) beyond this line disturb the reception and must be as weak as possible.



Attention: an echo pulse within the guard interval with high amplitude will disturb the signal quality.

17 Measurement map

To access the **MEASUREMENT MAP** function, press Home then Measurement map:

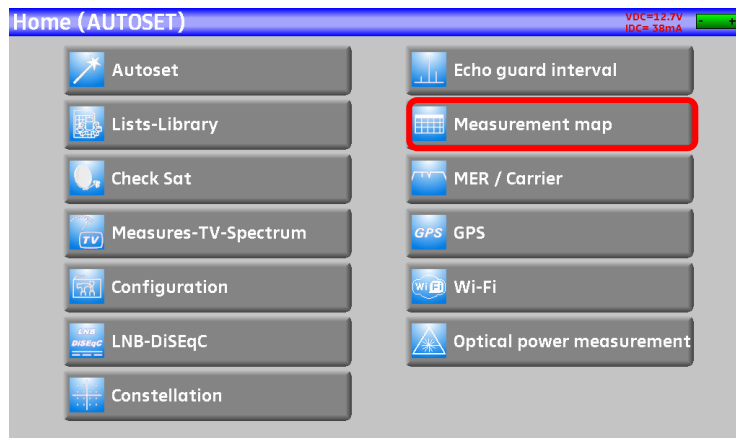


It is an automatic level and error rate measurement of the setups in the measurement list with labeling of the levels beyond tolerance.




Measurement
result for
channel 38
under DVB-T/H

Measurement map (SEFRAM)								VDC= 0.0V IDC= 0mA	
freq.	std	RF	C/N	BERi	BERo	PER	MER		
E38	DVB-T/H	59.0	46.8	<9E-8	<2E-8	<2E-5	35.9		
E44	DVB-T/H	58.2	46.0	2.6E-7	<2E-8	<2E-5	29.9		
E59	DVB-T/H	0.0	> 0.0				--.		
E40	DVB-T/H	0.0	> 0.0				--.		
E49	DVB-T/H	0.0	> 0.0				--.		
E46	DVB-T/H	0.0	> 0.0				--.		
88.000	FM	0.0	> 0.0						
104.800	FM	0.0	> 0.0						
97.100	FM	0.0	> 0.0						
								3 / 9 -> 0 mn	

You can save these measures on an USB stick
Pressing the key  opens a CSV file
The name of the file comes from the launching time of the recording
The save starts after browsing of all setups
This is when the date and time are recorded

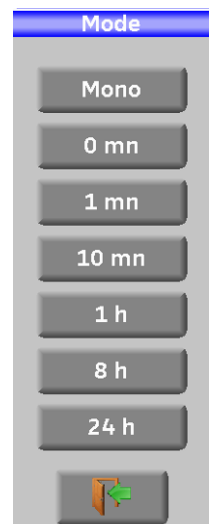The « mode » key allows you to select the duration between two measurements in the list
You can choose: mono (only one measurement made), 0mn (the measurement starts again as soon as it is finished), 1mn (the measurement starts every minute), 10mn (the measurement starts every 10 minutes), 1h (the measurement starts every hour), 8h (the measurement starts every 8 hours), 24h (the measurement starts every 24 hours)



	<p>BERi, BERo et PER are generic terms (frequently used)</p> <p>BERi = BER in = inner BER first BER treated by the demodulator (BER channel, CBER, LDPC)</p> <p>BERo = BER out = outer BER last BER treated by the demodulator (BER Viterbi, VBER, BCH)</p> <p>PER = packet error rate non-proofread packet, lost packet, wrong packet (UNC, PER)</p>
	<p>Important:</p> <p>A bargraph under the Measurement map allows you to track the evolution of the scan.</p> <p>The background color of this bargraph shows you that a complete scan has been made (for a save, for example):</p> <ul style="list-style-type: none"> - red: the measurement map has not been totally scanned yet - green: the measurement map has been totally scanned
	<p>In case of mixed measurement map (terrestrial+satellite), the satellite remote power supply has priority (the terrestrial remote power supply is ignored).</p>

17.1 Values beyond tolerance

The digital values are colored according to the **Thresholds** before decision

- **red** for values less than **Threshold min**
- **orange** for values more than **Threshold max**

Measurement map (SEFRAM)								VDC= 0.0V IDC= 0mA	
freq.	std	RF	C/N	BERi	BERo	PER	MER		
E38	DVB-T/H	59.0	46.8	<9E-8	<2E-8	<2E-5	34.8		
E44	DVB-T/H	58.2	46.0	4.6E-7	<2E-8	<2E-5	30.2		
E59	DVB-T/H	58.8	46.6	6.5E-8	<2E-8	<2E-5	32.7		
E40	DVB-T/H	59.8	47.6	1.9E-7	<2E-8	<2E-5	32.5		
E49	DVB-T/H	56.8	44.6	Sync?	Sync?	Sync?	--.		
E46	DVB-T/H	56.8	44.6	Sync?	Sync?	Sync?	--.		
88.000	FM	10.8	>18.4						
104.800	FM	0.0	> 7.6						
97.100	FM	17.5	>25.1						

2 / 9 -> 0 mn

17.2 Graphics

To switch to graphic mode, press Graph.

Measurement map (SEFRAM)								VDC= 0.0V IDC= 0mA	
freq.	std	RF	C/N	BERi	BERo	PER	MER		
E38	DVB-T/H	59.0	46.8	<9E-8	<2E-8	<2E-5	35.9		
E44	DVB-T/H	58.2	46.0	2.6E-7	<2E-8	<2E-5	29.9		
E59	DVB-T/H	0.0	> 0.0				--.-		
E40	DVB-T/H	0.0	> 0.0				--.-		
E49	DVB-T/H	0.0	> 0.0				--.-		
E46	DVB-T/H	0.0	> 0.0				--.-		
88.000	FM	0.0	> 0.0						
104.800	FM	0.0	> 0.0						
97.100	FM	0.0	> 0.0						

3/9 -> 0 mn

In graphic mode, you can see levels.


The measurement is made like for the measurement map.

The graph is:


- **red** for values less than **Threshold min**
- **orange** for values higher than **Threshold max**
- **green** for values **between both thresholds**

You can measurement the discrepancy between the levels of two setups thanks to the Ref and Curs dots that you can « move » inside the graph, to the left or to the right, with the four keys under the graph.

In this case, the Curs and Ref dots are cyan dots links by a line. The reference value between these two dots is called Tilt.

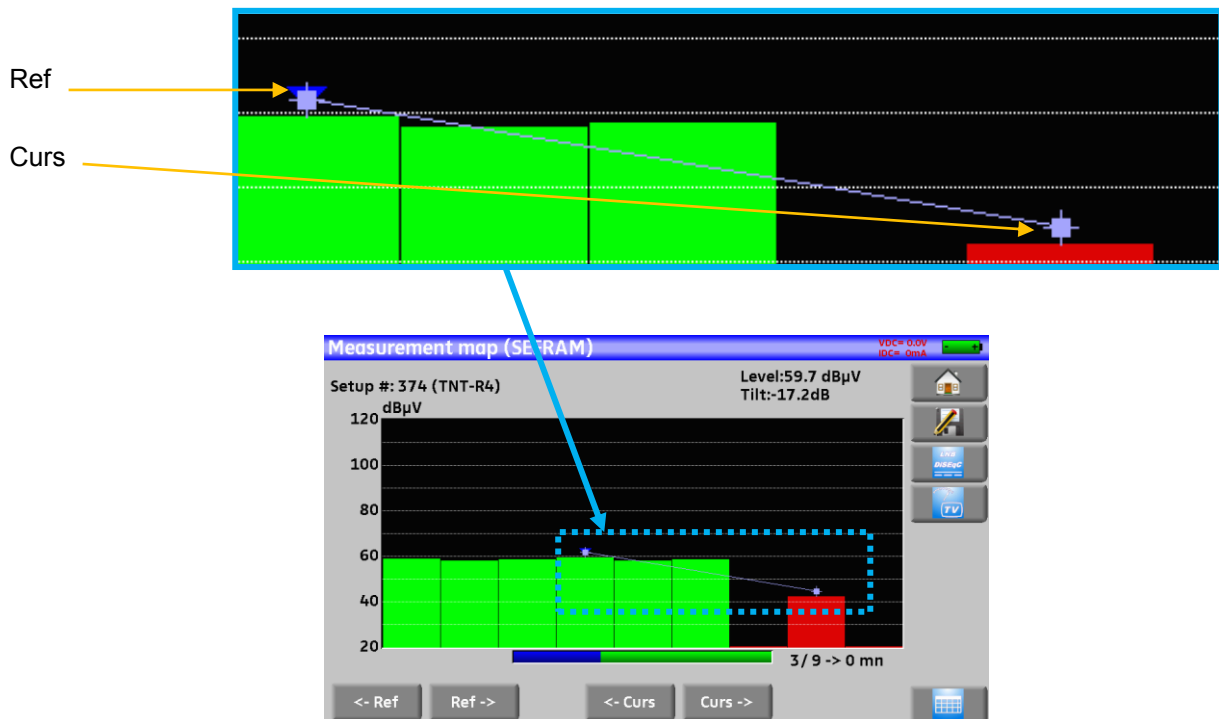


You may know the name of the setup by pressing directly on the graphic bar you want:

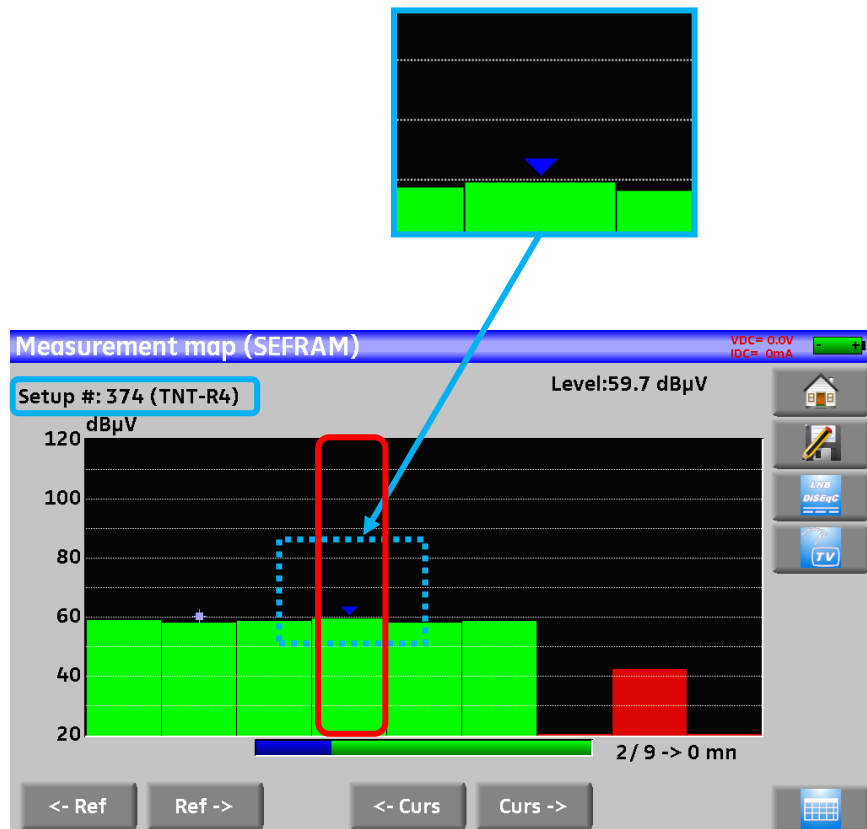


18 MER/Carrier (not available for 7871)

This function is available only for DVB-T/H and DVB-T2 standards.


Pressing  allows you to measure and display MER/ Carrier.

The instrument will display MER per carrier and the MER of the whole signal

For a perfect signal, the MER will be displayed:

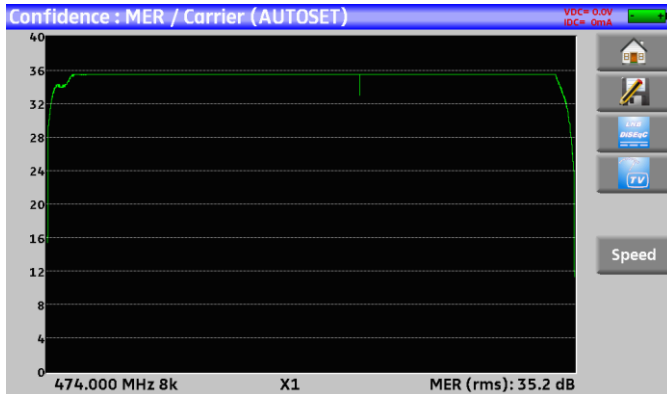


Perfect signal

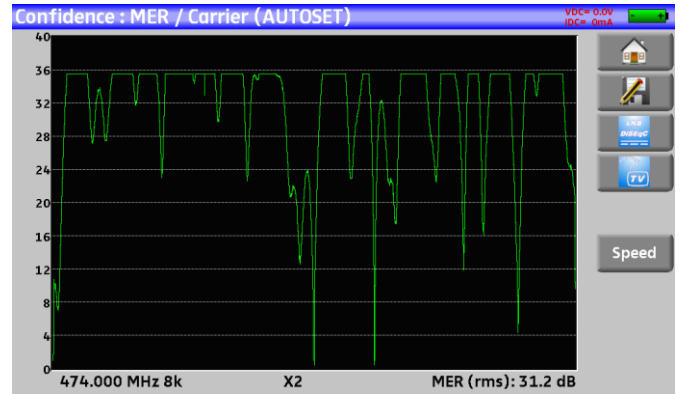


Highly disturbed signal

The MER of each carrier is displayed, and each « hole » represents a potential problem on the signal or a spurious.

A real signal is fluctuating a little bit. This must be taken into account during analysis:

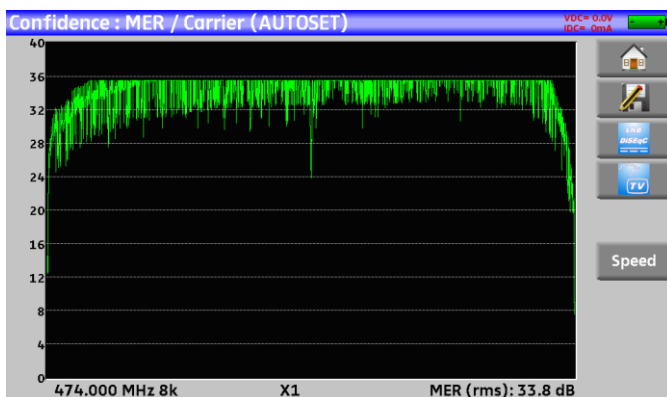

Low level disturbance

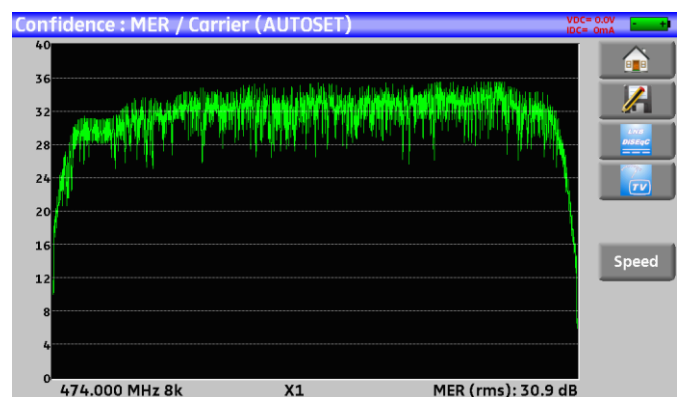

High level disturbance


In this page the Vitesse (speed) key defines the sampling of displayed carriers and MER:



- : all carriers are sampled and used
- : one over two
- : one over four
- : one over eight
- : one over 16
- : max speed : 624 carriers are measured


19 Configuration

For configuration, go to the Home page, then Configuration

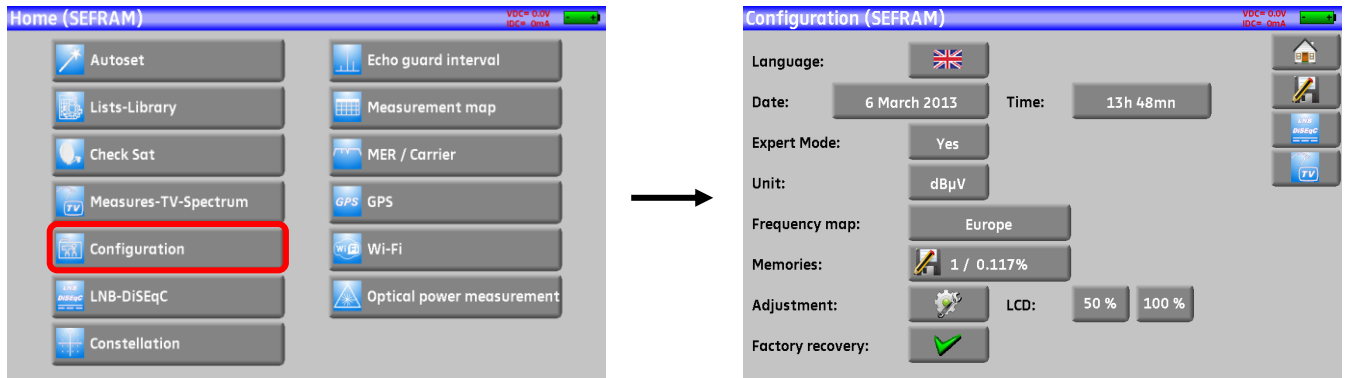


19.1 Language

You can select your language by pressing the « flag » (below). Press the flag corresponding to your language:

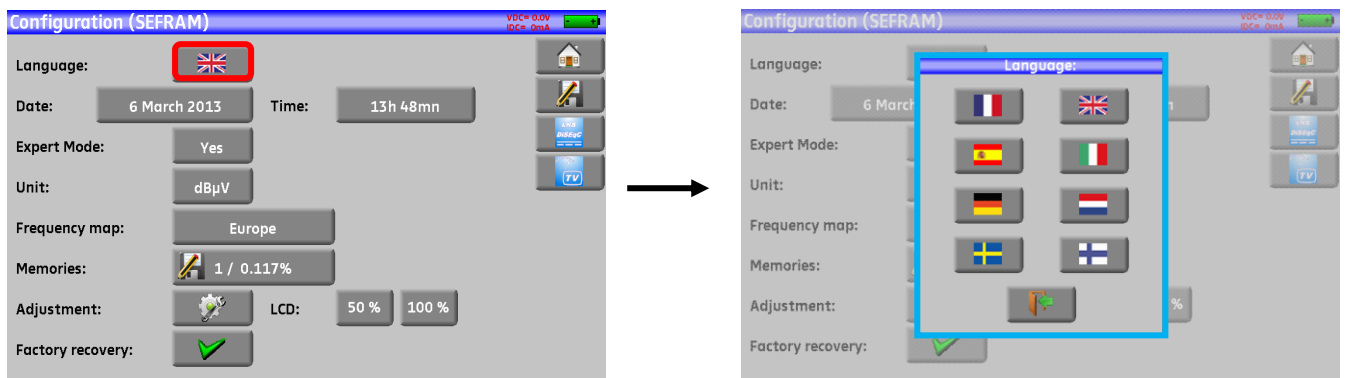


19.2 Expert mode (not available on 7871 and 7872)

This key leads you to the expert mode on the Spectrum page (see chapter [Spectrum analyzer](#)).

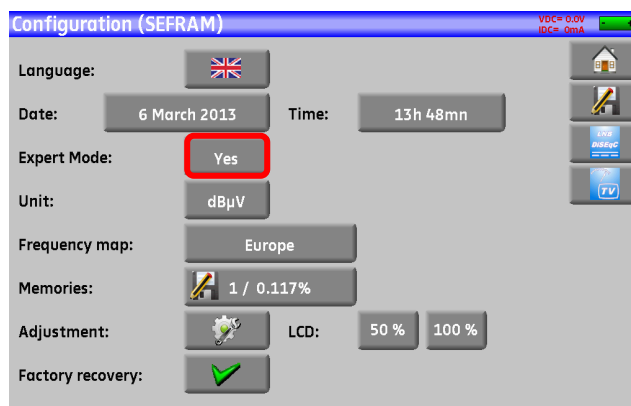

19.3 Measurement unit


This key allows you to select the measurement unit of the appliance:

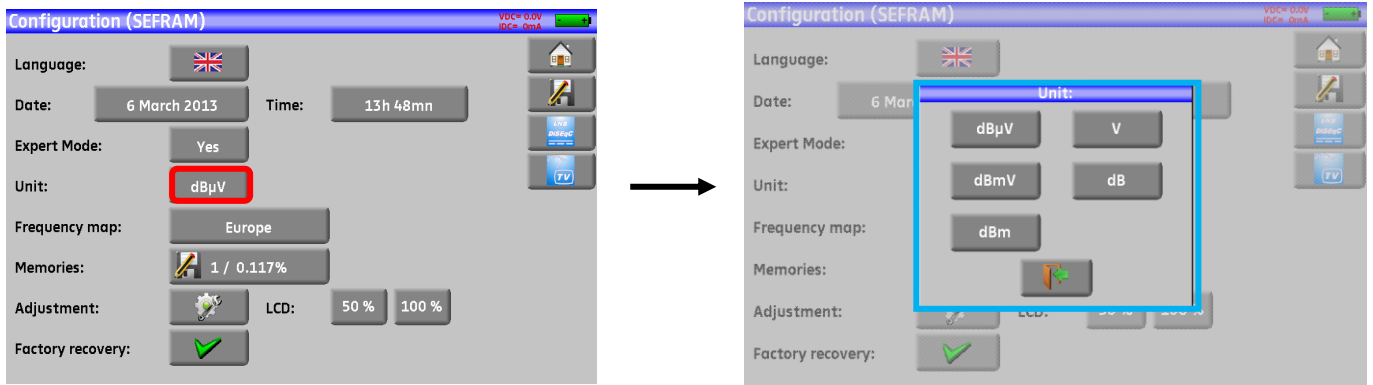

- **dBμV:** 0 dBμV corresponds to 1 μV
- **dBmV:** 0 dBmV corresponds to 1 mV
- **dBm:** 0 dBm corresponds to 274 mV: 1 mW with a 75 Ω impedance.
- **V:** measure in V, mV and μV according to the level.

19.4 Frequency map


This key allows you to select the terrestrial frequency map of the appliance:

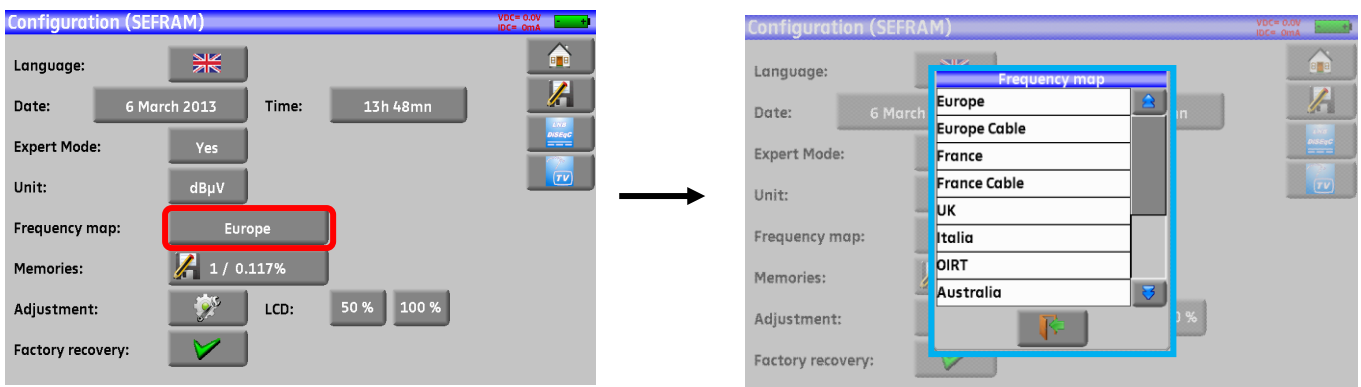

19.5 Saves


To save a picture or any other feature, see chapter [Save](#)

The number of saved files and their memory size are displayed.

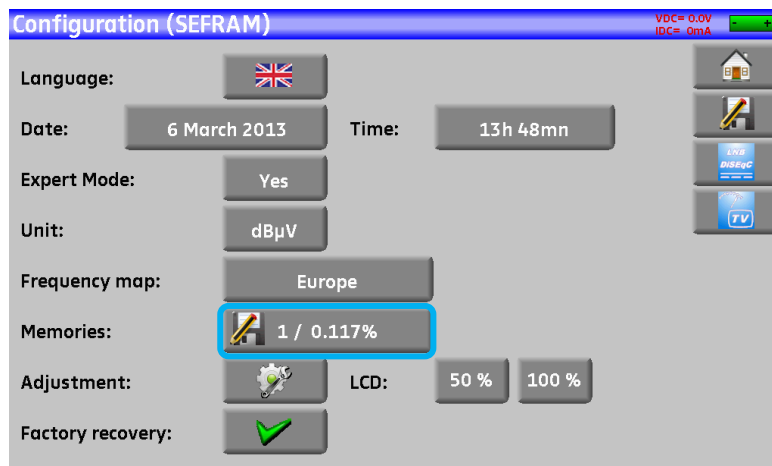


When pressing this key, a pull-down menu lists the previously saved files.

The first column contains the order number of the file; the second column contains the name of the file; the last column contains the type of file: Measure, Spectrum, Measurement map...

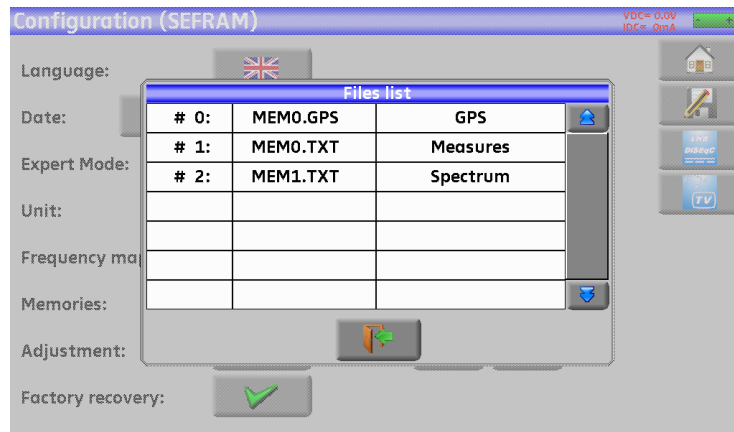


By pressing a line of the table, you open a window:

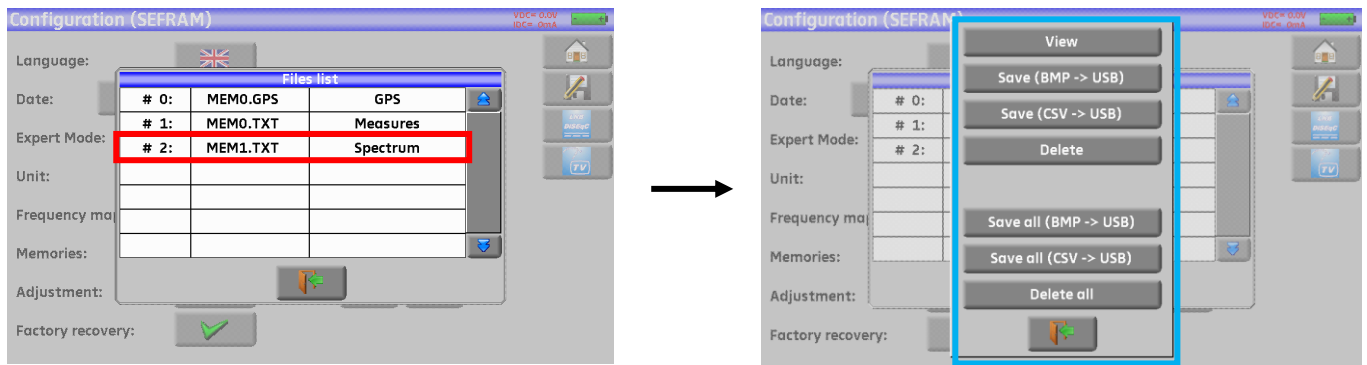

19.5.1 Visu


This key allows the display of the content of the file:

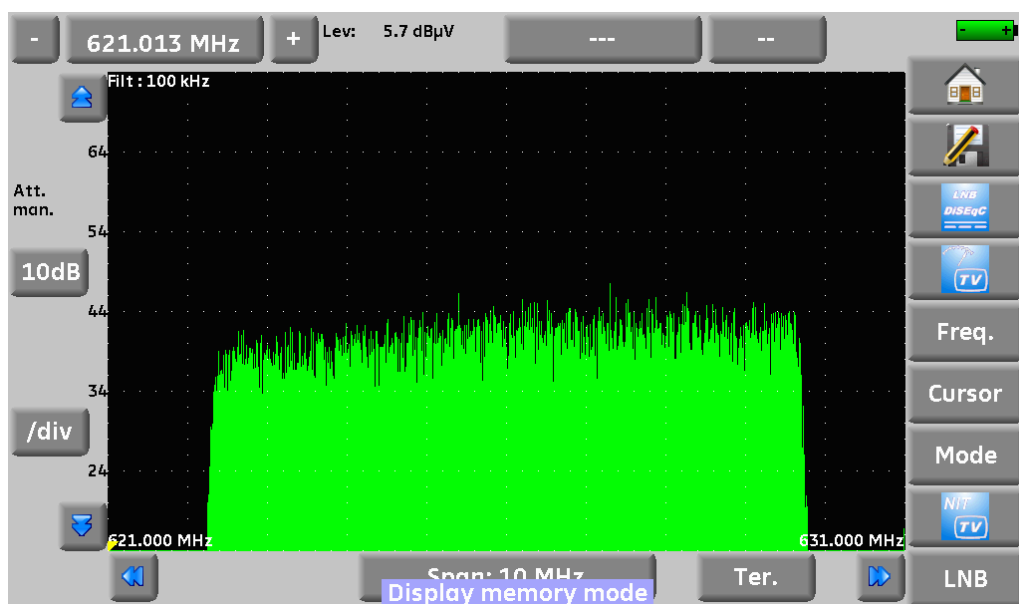

19.5.2 Save


- **Save (BMP -> USB)** allows you to export the file to the USB stick under BMP format (non-compressed graph); it is useful to transfer graphs to a report in a PC computer.

Here is the BMP file of the previously displayed DVB-T/H channel, edited on PC to have the spectrum full screen.

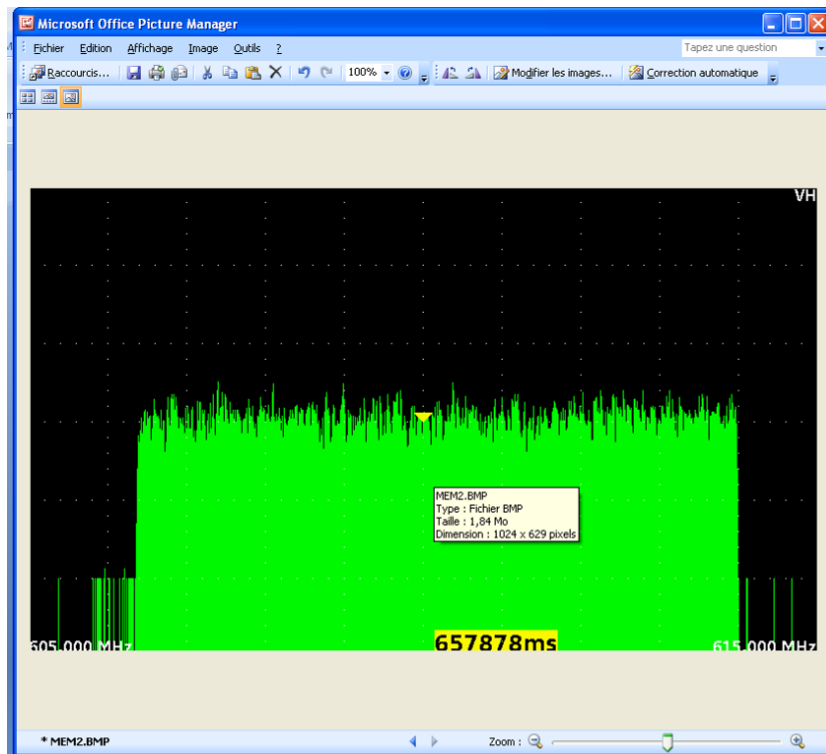

- **Save (CSV -> USB)** allows you to export the file to the USB stick under CSV format (text file by columns separated with semicolons); it is useful to analyze values in a spreadsheet.


Here is the spectrum hereabove with a curve under EXCEL™.

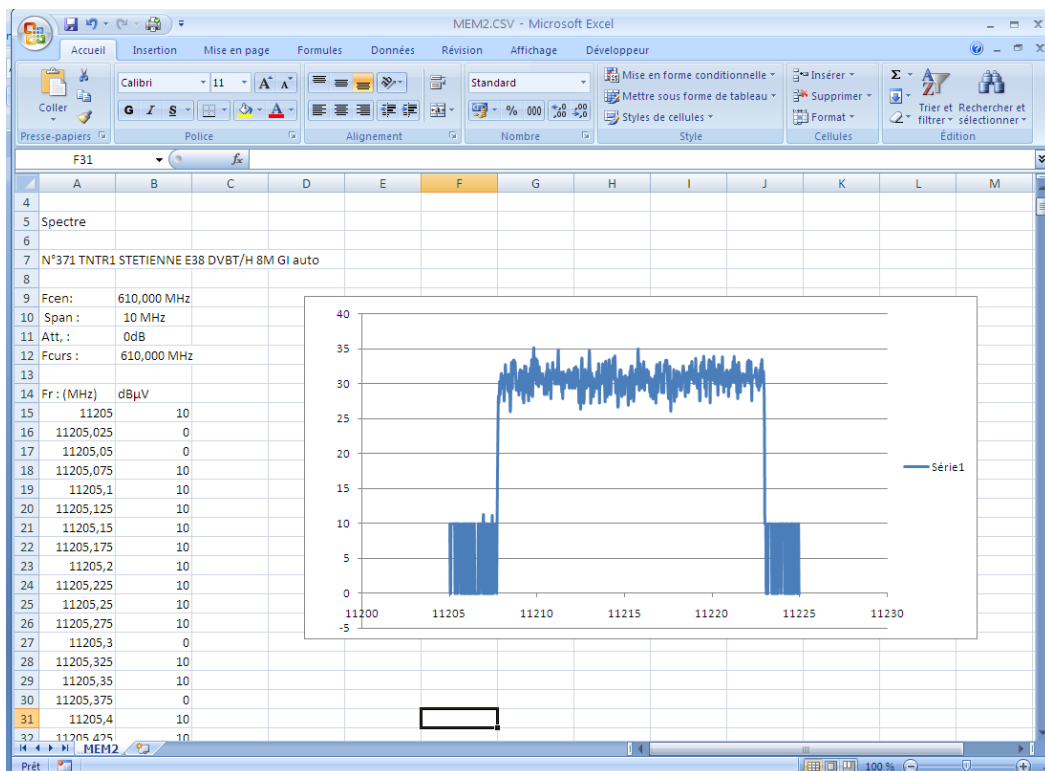

- **Save all (BMP -> USB)** records all files from the appliance under BMP format into separated registers:
 - LEVEL for the level measurements
 - MAP for the measurement maps
 - SPECTRUM for the spectrum measurements
 - BER-MER for the error rate measurements
 - CONST for the constellations
 - ECHO for the echoes.
- **Save all (CSV -> USB)** also records all files from the appliance into separated registers, but under CSV format.

19.5.3 Delete

- **Delete** erases the selected file, with confirmation
- **Delete all** cleans the whole memory, with confirmation

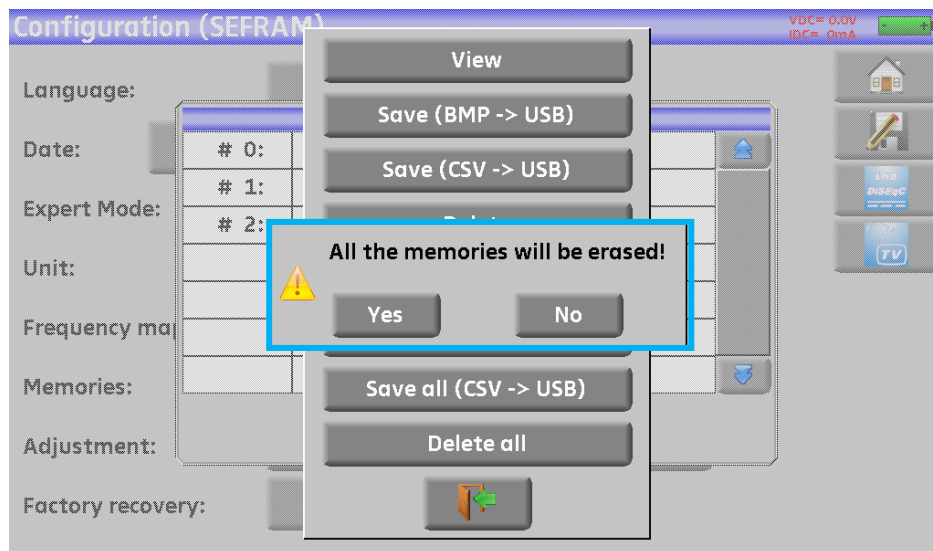

19.6 Adjustment

To access the Adjustment page, press



19.6.1 Beep

This key allows you to change the volume of the sound after pressing keys and under the Check Sat mode. You change by pressing the percentage you want:

0% (= no sound) to 100% (=maximum level).



19.6.2 Password

With the 787X, you can create a password that will be required at each start-up.

It is a security feature in case someone stole your material.



The screenshot shows the password setup interface with four input fields and a validation field. Arrows point from each field to a list of instructions on the right.

Field Label	Field Content	Instruction
Old password: (default:0000)	****	Type your previous password (default 0000)
New password:	****	Type your new password
Confirm new password:	****	Type your new password a second time
Validation:	✓	Validate the new password

At the bottom, there is a button with a green arrow pointing right.


Quit, then select Yes in front of Password.

At each start-up, a buttons shall show up on the welcoming page; press it and enter your new password:

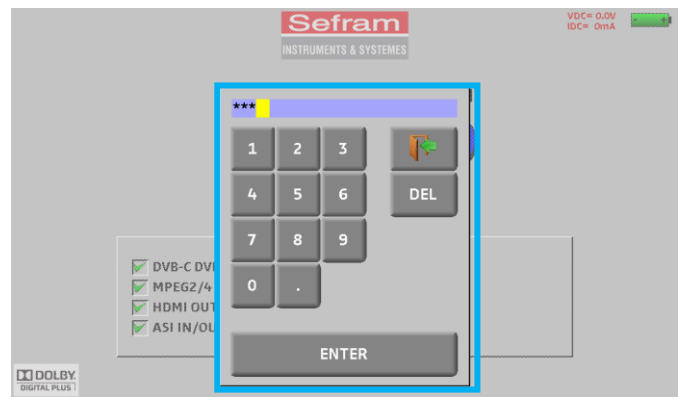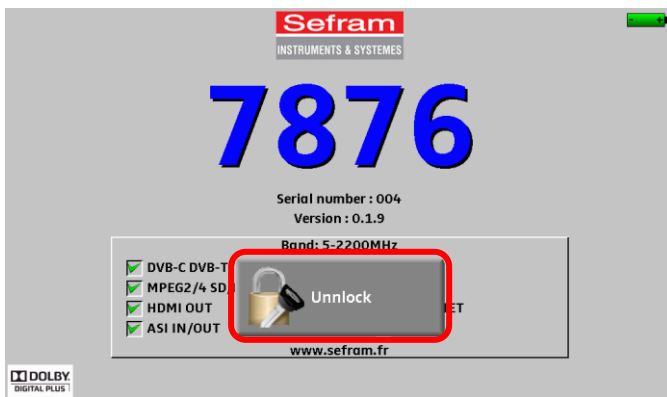

If the code is right, the appliance will start (there is no limit to the number of trials).

It is mandatory to register your instrument and the password to recover a lost password from SEFRAM (please use the template supplied on the CD-ROM)

	Attention : if you have lost your password please contact the technical support support@sefram.fr
---	--


19.6.3 Background

This key allows you to change the background of graphs between **black**, **white** and **grey** (spectrum, constellation...)

This function is useful to spare ink when printing reports with a printer.

19.6.4 Active USB port

Change it by pressing the key in front of Active USB port:

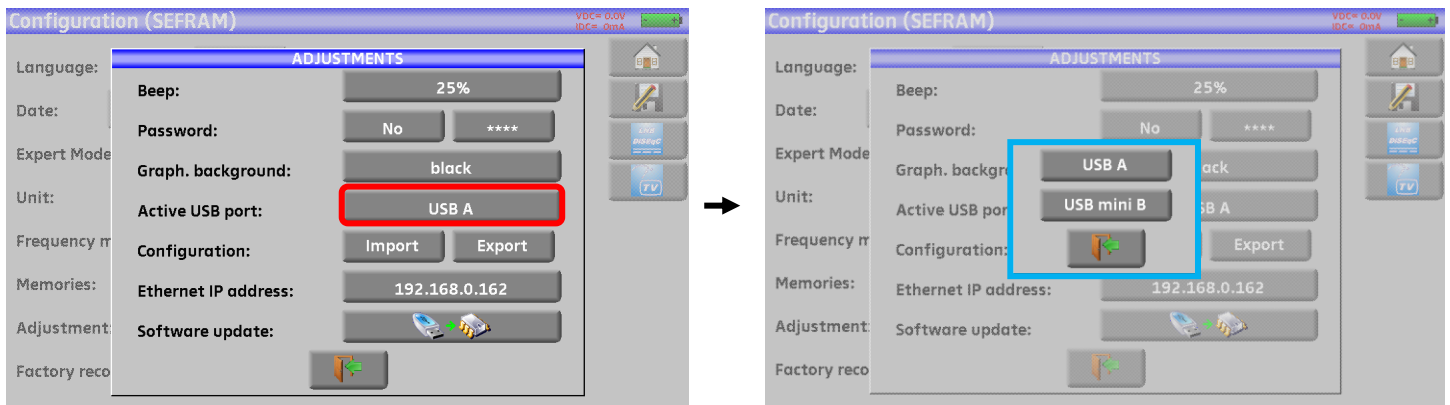


USB A: link to an USB stick (for updating, change of configuration or file output) or to a PC mouse.

USB mini B: link to a computer thanks to a suitable cable; see chapter [Connection of the appliance to a PC](#).

19.6.5 Configuration

You can update all or a part of the configuration of the appliance thanks to a spreadsheet and a USB stick.

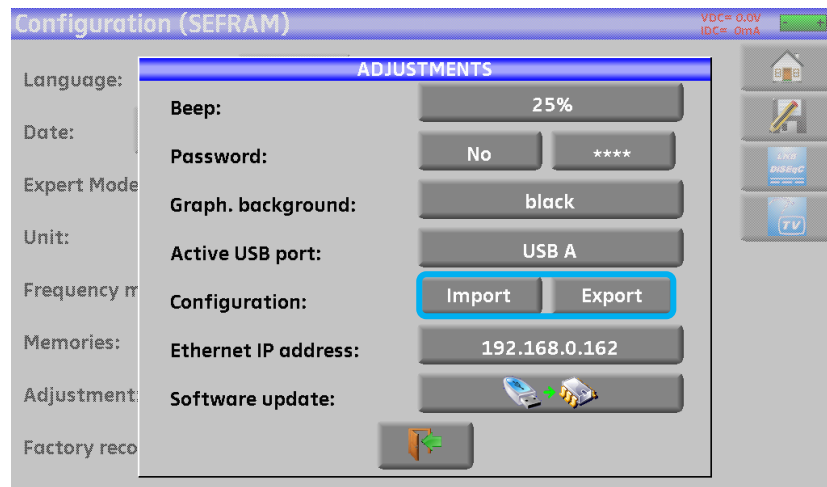

The configuration of the appliance results from files of three different types:

- One satellite file for Check Sat (see [Check Sat](#))

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T
1					Transpondeur n° 1 / Transponder #1				Transpondeur n° 2 / Transponder #2				Transpondeur n° 3 / Transponder #3				Transpondeur n° 4 / Transponder #4			
2		Nom du satellite	Position orbitale	Orientation	Fréquence	Polarisation	Standard	Débit symbole	Fréquence	Polarisation	Standard	Débit symbole	Fréquence	Polarisation	Standard	Débit symbole	Fréquence	Polarisation	Standard	Débit symbole
3	0	TURKSAT 2	42.0	E	11996	V	DVB-S	26000	12652	H	DVB-S	22500	11919	V	DVB-S	24444	11804	V	DVB-S	24444
4	1	ASTRA 2	28.2	E	10803	H	DVB-S	22000	10714	H	DVB-S	22000	10847	V	DVB-S	22000	12441	V	DVB-S	27500
5	2	ASTRA 3	23.5	E	10803	H	DVB-S	22000	12726	V	DVB-S	27500	11836	H	DVB-S	29900	11914	H	DVB-S	27500
6	3	ASTRA 1	19.2	E	11720	H	DVB-S	27500	12515	H	DVB-S	22000	10979	V	DVB-S	22000	12363	V	DVB-S	27500
7	4	EUTEL W2	16.0	E	11011	V	DVB-S	27500	11094	V	DVB-S	27900	11554	V	DVB-S	30000	12650	H	DVB-S	15000
8	5	HOT BIRD	13.0	E	10723	H	DVB-S	29900	12731	H	DVB-S	27500	10719	V	DVB-S	27500	12713	V	DVB-S	27500
9	6	INTL 10 02	1.0	W	12563	H	DVB-S	27500	12719	V	DVB-S	18400	12735	V	DVB-S	8800	12687	H	DVB-S	27500
10	7	ATLANTIC 3	5.0	W	12711	H	DVB-S	30000	12543	H	DVB-S	27500	11591	V	DVB-S	20000	12615	H	DVB-S	8789
11	8	ATLANTIC 2	8.0	W	11057	H	DVB-S	27500	11387	H	DVB-S	24740	12566	V	DVB-S	27500	12649	V	DVB-S	27500
12	9	HISPASAT	30.0	W	11577	V	DVB-S	27500	11931	H	DVB-S	27500	11731	H	DVB-S	28126	12456	V	DVB-S	30000

- One setup file including up to 1000 setups (see [Setup library](#))

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
	Nom du programme Setup name	Nom du site Place name	Fréquence Frequency	N° de canal Channel #	Plan de fréquences Frequencies map	Polarisation Polarization	Bande LNB LNB band	Standard	Mode audio Audio mode	Constellation	Largeur de bande Bandwidth	Débit symbole Symbol rate	Intervalle de garde Guard interval	Inversion du spectre Spectrum inversion
1	0	DIGITAL+	ASTRA 1	10729.000		V		DVB-S2				22000		
2	1	ARD	ASTRA 1	10743.000		H		DVB-S				22000		
3	2	SKY D	ASTRA 1	10773.000		H		DVB-S2				22000		
4	3	DIGITAL+	ASTRA 1	10788.000		V		DVB-S				22000		
5	4	DIGITAL+	ASTRA 1	10817.000		V		DVB-S2				22000		
6	5	ANIXE HD	ASTRA 1	10832.000		H		DVB-S2				22000		
7	6	DIGITAL+	ASTRA 1	10847.000		V		DVB-S				22000		
8	7	TVP HD	ASTRA 1	10861.000		H		DVB-S				22000		
9	8	DIGITAL+	ASTRA 1	10876.000		V		DVB-S				22000		
10	9	UPC	ASTRA 1	10920.000		H		DVB-S				22000		
11	10	DIGITAL+	ASTRA 1	10979.000		V		DVB-S				22000		
12	11	SKY D	ASTRA 1	11023.000		H		DVB-S2				22000		
13	12	DIGITAL+	ASTRA 1	11038.000		V		DVB-S				22000		
14	13	DIGITAL+	ASTRA 1	11097.000		V		DVB-S				22000		
15	14	DIGITAL+	ASTRA 1	11156.000		V		DVB-S				22000		
16	15	ORANGE	ASTRA 1	11170.000		H		DVB-S2				22000		
17	16	ORF	ASTRA 1	11302.000		H		DVB-S2				22000		
18	17	DIGITAL+	ASTRA 1	11317.000		V		DVB-S				22000		
19	18	DASERSTE	ASTRA 1	11361.000		H		DVB-S2				22000		
20	19	DIGITAL+	ASTRA 1	11435.000		V		DVB-S2				22000		
21	20	HD+	ASTRA 1	11464.000		H		DVB-S2				22000		
22	21	CANALSAT	ASTRA 1	11479.000		V		DVB-S				22000		
23	22	GLOBECAS	ASTRA 1	11508.000		V		DVB-S				22000		
24	23	GLOBECAS	ASTRA 1	11538.000		V		DVB-S				22000		
25	24	CANALSAT	ASTRA 1	11567.000		V		DVB-S2				22000		
26	25	ASTRA	ASTRA 1	11597.000		V		DVB-S				22000		
27	26	DIGITAL+	ASTRA 1	11626.000		V		DVB-S2				22000		
28	27	UPC	ASTRA 1	11670.000		H		DVB-S				22000		

- Twenty files made of measurement lists, 50 lines each (see [Measurement lists](#))

A	B	C	D	E	F	G	H	I
1	Nom de la liste / List name	ASTRA1+HOT						
2	Fréquence OL1 / LO1 frequency	9750						
3	Fréquence OL2 / LO2 frequency	10600						
4	Sélection OL / LO setup	DiSEqC						
5	Sélection polarisation / Polarization setup	DiSEqC						
6	Positionneur / Positioner							
7								
8		Numéro de programme Setup number	Switch committed Committed switch	Position Switch committed Committed switch position	Switch uncommitted Uncommitted switch	Position switch uncommitted Uncommitted switch position	Activation SatCR SatCR enabled	Numéro de slot Slot number
9	0							
10	1	1	DiSEqC	Pos A				
11	2	2	DiSEqC	Pos A				
12	3	3	DiSEqC	Pos A				
13	4	4	DiSEqC	Pos A				
14	5	5	DiSEqC	Pos A				
15	6	6	DiSEqC	Pos A				
16	7	7	DiSEqC	Pos A				
17	8	8	DiSEqC	Pos A				
18	9	9	DiSEqC	Pos A				
19	10	10	DiSEqC	Pos A				
20	11	11	DiSEqC	Pos A				
21	12							
22	13	18	DiSEqC	Pos B				
23	14	19	DiSEqC	Pos B				
24	15	20	DiSEqC	Pos B				
25	16	21	DiSEqC	Pos B				
26	17	22	DiSEqC	Pos B				
27	18	23	DiSEqC	Pos B				
28	19	24	DiSEqC	Pos B				
29	20	25	DiSEqC	Pos B				

These files match the tabs of the Sat.xls files (for Check Sat). CSTConf.xls files are available on the SEFRAM's website http://www.sefram.com/wwwfr/F_D_SOFTWARE.asp

Since the appliance is not directly compatible with these files, it is necessary to save each tab as a CSV file (text file by columns separated with semicolons):

- One file **Sat.csv** for Check Sat
- One file **CSTProg.csv** for setups
- Various files **CSTLst00.csv**, **CSTLst01.csv**, **CSTLst02.csv**, ... one for each measurement list.

A CVS macro-command proceeds to these saves directly with a shortcut Ctrl + Maj + C.


Another INI macro-command allows you to insert a list of setups into the selected cell from .ini files available on SEFRAM's website.


You can copy these files to the root of an USB stick. Then, the USB stick must be connected to the appliance.


You finish by validating the transfer with the VALIDATION key on the **Config.<-> USB** line.


During the transfer, the previous configuration will be saved into a Conf repertory:

- One file **Sat.csv** for Check Sat
- One file **TProg.csv** for setups
- Twenty files **CSTLst00.csv**, **CSTLst01.csv**, **CSTLst02.csv**...

	If no CSV file is present on the USB stick, only the older configuration of the appliance will be saved.
---	--

	You don't have to copy all files to the USB stick; i.e. if only the memory list #5 has been changed, you only have to copy CSTLst05.csv.
---	---

	You can open older CSV files with a spreadsheet application. You can then copy and paste values with the corresponding XLS file.
---	--

	You can move the older CSV files from the Conf directory to the root of the USB stick to transfer the configuration of an appliance to another.
---	---

19.6.6 Import INI files

There is also another INI macro-command to insert data from an .ini file to the selected cell with a shortcut: Ctrl + Maj + I.

When launching the macro-command, a window from your navigator opens up and lets you select the file to import. You only have to click on the file you want to insert it immediately into the setup library.

What is a « *.INI » setup file?

A « *.ini » file contains the parameters of a place (terrestrial or satellite). The data from such file can be directly imported to the setup library file.

You can download the files for importing setups from the satellites with reception in Europe (Ku band) on the website <http://fr.kingofsat.net/>, in the directory « Annuaire des satellites » (<http://fr.kingofsat.net/satellites.php>). These files are regularly updated: it is advisable that you periodically visit this site to get the newest data.

How to proceed?

Click on the following link: <http://fr.kingofsat.net/satellites.php> to access the website.

For more accurate frequencies, it is advisable to check here

Satellite directory - KingOfSat

☒ Generate .ini files with frequencies in kHz (allow more complete scans for low SRs, compatibility depending on software used)



Orbital position	News	.ini	Total Ku	Total C	Free To Air only	TV	Radios	Data	Satellite	Longitude Now	Declination Now - Max	Total	Free To Air only	Last updated
75.0°E			92	0	38	86	6	0	ABS-1	74.99°E	0.02° 0.04°	92	38	2010-09-17 22:46
70.5°E			0	0	0	0	0	0	Eutelsat W5	70.6°E	-0.05° 0.05°	-	-	2010-08-31 21:15
68.5°E			76	260	175	226	94	16	Intelsat 7 (IS-7)	68.73°E	0.00° 0.01°	-	-	2010-08-31 21:15
									Intelsat 10 (IS-10)	68.5°E	0.00° 0.00°	336	175	2010-10-05 13:54
66.0°E			0	0	0	0	0	0	Intelsat 702	66.04°E	-0.01° 0.02°	-	-	2010-08-31 21:15
64.2°E			0	28	15	28	0	0	Intelsat 906	64.2°E	0.01° 0.01°	28	15	2010-09-12 19:44
62.0°E			0	3	2	2	1	0	Intelsat 902	62.05°E	0.00° 0.01°	3	2	2010-09-24 21:41
60.0°E			3	0	3	3	0	0	Intelsat 904	60.1°E	0.01° 0.01°	3	3	2010-08-31 21:15
57.0°E			1	72	53	34	35	4	NSS 12	57.05°E	0.03° 0.05°	73	53	2010-09-17 22:47
53.0°E			62	0	43	43	17	2	Express AM22	53.03°E	-0.04° 0.04°	62	43	2010-10-02 22:49
49.0°E			0	52	44	30	22	0	Yamal 202	48.99°E	-0.04° 0.04°	52	44	2010-09-13 01:05
48.2°E			0	0	0	0	0	0	Eutelsat W48	48.33°E	1.08° 1.43°	-	-	2010-08-31 21:15
45.0°E			98	0	25	85	12	1	Intelsat 12 (IS-12)	45.02°E	0.00° 0.00°	98	25	2010-10-03 23:26
42.0°E			531	0	448	307	148	76	Turksat 2A	42.02°E	-0.05° 0.05°	224	177	2010-10-05 13:27
									Turksat 3A	42.02°E	0.02° 0.02°	307	271	2010-10-06 10:08
40.0°E			28	29	46	31	25	1	Express AM1	40.06°E	0.32° 0.38°	57	46	2010-10-05 20:29
39.0°E			330	0	122	246	68	16	Hellas Sat 2	39.01°E	-0.01° 0.02°	330	122	2010-10-04 15:38
38.0°E			0	17	17	17	0	0	Paksat 1	38.11°E	0.03° 0.03°	17	17	2010-09-25 19:39
36.0°E			278	0	66	206	56	16	Eutelsat W4	36.11°E	-0.03° 0.07°	9	8	2010-08-31 21:15
									Eutelsat W7	35.93°E	-0.03° 0.06°	269	58	2010-10-05 22:53
33.0°E			33	0	25	15	6	12	Eurobird 3	33.19°E	-0.01° 0.05°	33	25	2010-10-04 15:26
31.5°E			23	0	22	19	3	1	Astra 2C	31.75°E	0.01° 0.03°	-	-	2010-08-31 21:15
									Astra 1G	31.63°E	0.06° 0.07°	23	22	2010-10-05 20:28
30.5°E			19	12	29	30	1	0	Arabsat 5A	30.63°E	-0.01° 0.04°	31	29	2010-09-30 21:43
28.2°E			974	0	528	787	139	48	Eurobird 1	28.51°E	-0.02° 0.07°	430	291	2010-10-05 12:42
									Astra 2A	28.33°E	0.01° 0.04°	204	56	2010-10-04 17:02
									Astra 2B	28.25°E	-0.03° 0.04°	171	50	2010-10-05 20:15
									Astra 2D	28.25°E	-0.02° 0.05°	169	131	2010-10-01 23:08
									Turksat 1C <i>Moving 0.2°W/day</i>	28.19°E	2.12° 2.33°	-	-	2010-09-25 16:35
26.0°E			478	0	405	365	100	13	Badr 4	26.02°E	0.01° 0.06°	268	266	2010-10-05 12:06
									Badr 5	26.02°E	0.00° 0.00°	51	13	2010-10-05 12:06
									Badr 6	25.98°E	-0.05° 0.06°	159	126	2010-09-11 09:33
25.5°E			80	0	44	71	8	1	Eurobird 2	25.57°E	-0.01° 0.07°	80	44	2010-10-05 21:07
23.5°E			480	0	170	307	152	21	Astra 3A	23.64°E	-0.04° 0.05°	310	111	2010-10-03 14:34
									Astra 3B	23.54°E	0.05° 0.06°	170	59	2010-10-05 21:49

http://en.kingofsat.net/sat-arabsat5a.php

i.e. to download the « *.ini » file of the Astra 23,5°E satellite, click here.

Then, click on « Enregistrer ».

Select the destination directory, then click on « Enregistrer ».

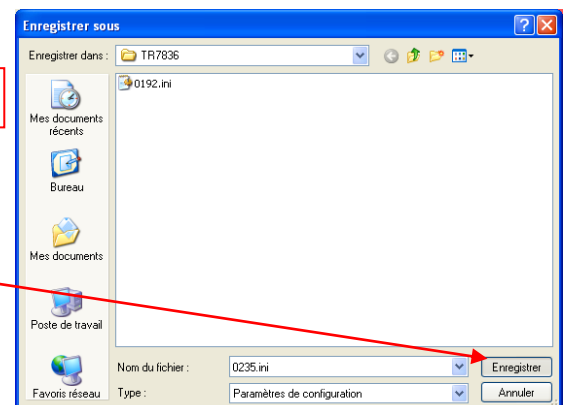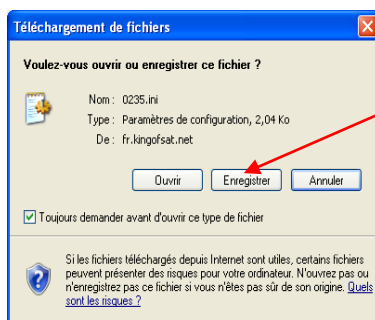


19.6.7 Update

See chapter [Software update](#) for more details.

19.7 LCD


This key allows you to settle the brightness of the screen. You have two possibilities: 50% and 100% (max. brightness).

50% brightness will spare the battery life of the appliance.

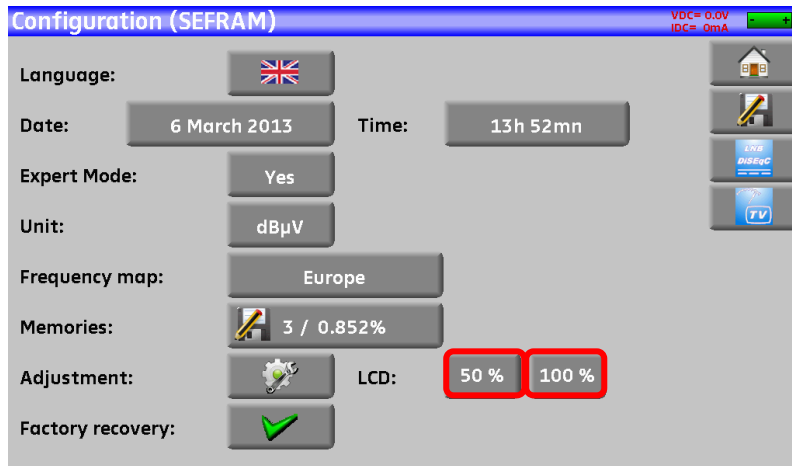

19.8 Factory recovery

A complete set-up of the appliance under its FACTORY configuration, with confirmation.

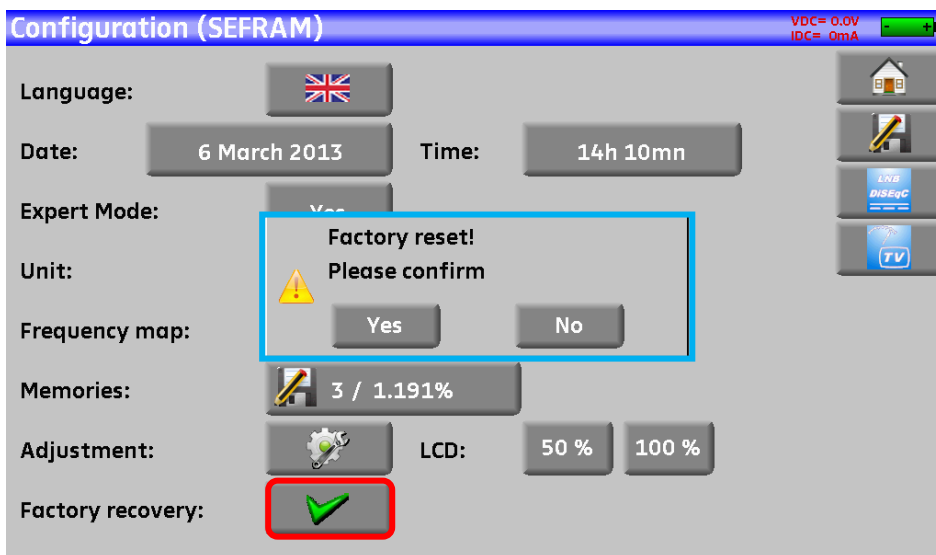

Attention: In case of factory recovery, you **lose**:

- the setup library
- the measurement lists.




20 Software update




Attention: Take care that the remaining battery life is sufficient (> 30%), else plug the appliance on the mains with the provided adapter.

You can easily update the software to get new functionalities. The update requires an USB stick.

To achieve the update:

- Download the update file **787X_VX.X zip file** on our website (www.sefram.fr)
- Insert a USB stick on your PC
- Unzip the file onto the root of the memory stick
- Pull the USB stick off from your computer
- Turn your appliance on
- Go to the Home page,  press Configuration  then press Adjustment 
- Check that the active USB port is the USB port A and that nothing is connected on the USB port mini B.
- Insert the USB stick into the connector of the appliance.

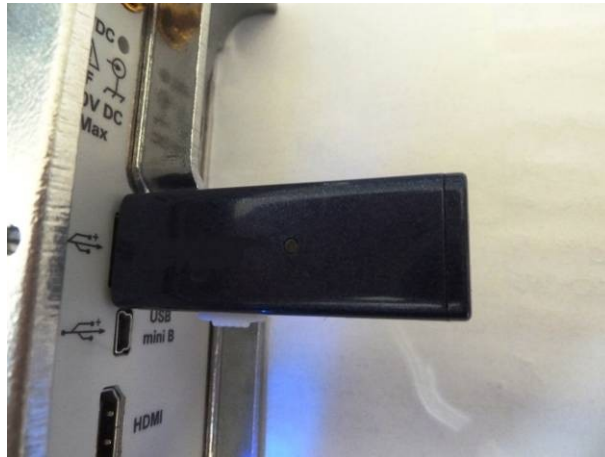

Select Update:




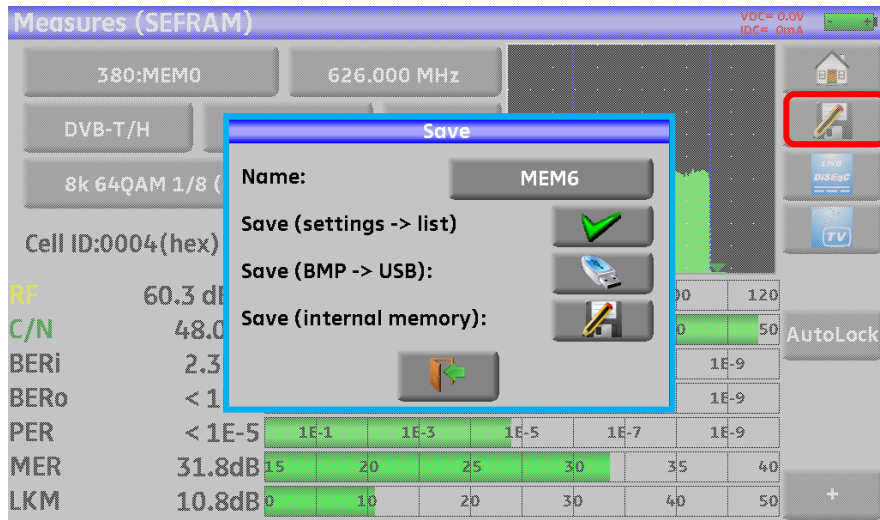
Attention: Do not turn the appliance off while updating

The updating process lasts ca. 10 minutes. At the end of the update, the appliance asks you to restart the appliance. The software is then loaded into your appliance.

Error messages may show up: **Do not take them into account.**

21 Save

Pressing  opens a window (here, on the Measurement page):



In this window, you can save the current measurement parameters from the active list, make a screen shot to a USB stick under BMP format or make a save into internal memory.

You can rename the save file (see chapter [Man-machine interface](#)).

The default name of the save is MEM(X+1) (X is the number of saves in the appliance).

You will be suggested a save into internal memory only in the **Spectrum**, **Measurements**, **Constellation**, **Guard interval**, **MER/Carrier** and **Measurement map** pages.



After transfer, you will be able to use the saved measures to create measurement reports on your computer (see paragraph [Saves](#) for more details).



When you stop the appliance, it may need a few seconds to stop completely because of the save to the USB stick.

22 Connection of the appliance to a PC

The appliance has a **USB** interface and an **ETHERNET** interface that make it possible to connect directly to a PC.

22.1 Required configuration

These drivers are compatible with the following operating systems: Windows Vista TM, Windows XP TM, Windows Seven TM.

For any other operating system, please contact the technical support SEFRAM. Your PC should also have a free USB port.

22.2 USB mini B interface

To use the mini B USB:

Configure your appliance under USB mini B by pressing Home





, Configuration



Configuration

Select the active USB port: USB mini B

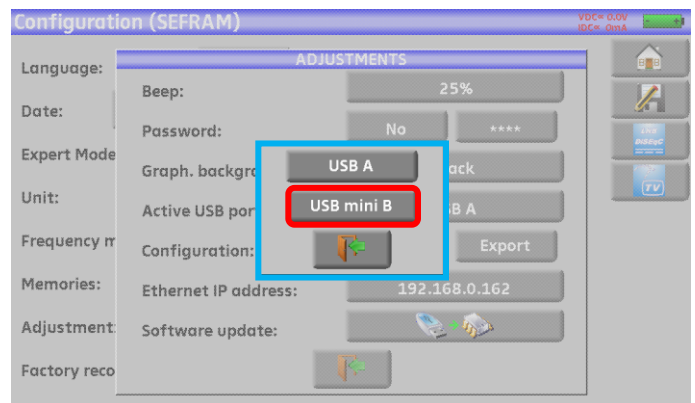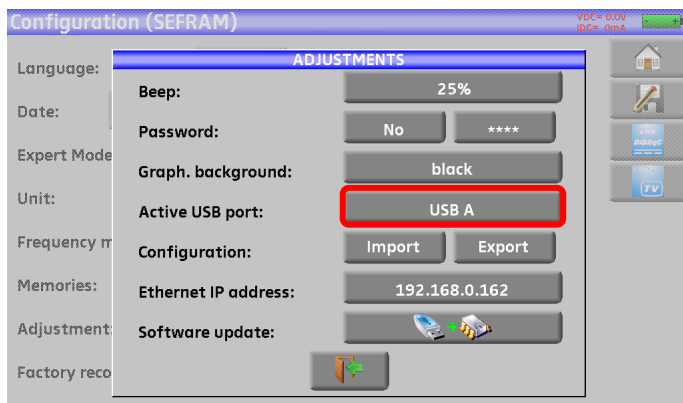

You can use the mini B USB port linked to a computer with a suitable cable. The computer will recognize the appliance as a USB stick. No driver is necessary.



22.3 Ethernet interface




For this kind of connection, no driver installation is required.

Connect the appliance to the PC with a crossover ethernet cable (available in option, ref. 298504246 by SEFRAM).

- Configuration of the connection:


Ethernet connection of your appliance to the PC

To change the IP address of your appliance, press  Configuration and then Adjustment 

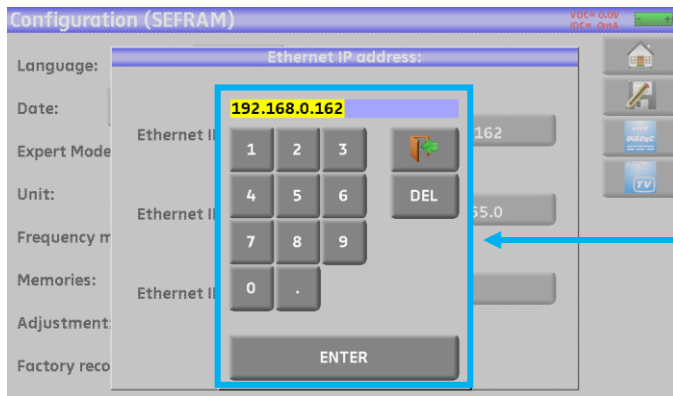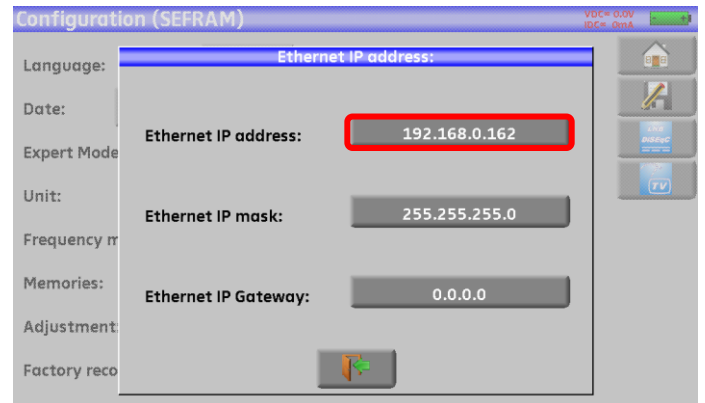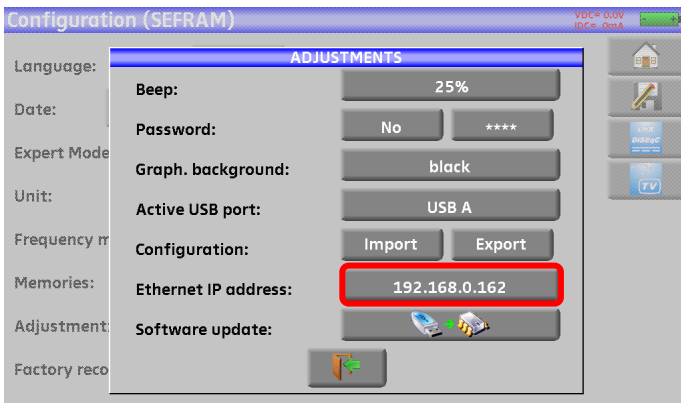

With the virtual digital keypad, type the IP address you want, then validate with ENTER


The PC software in communication with the appliance must have the same IP address as the appliance, just like in the example below:

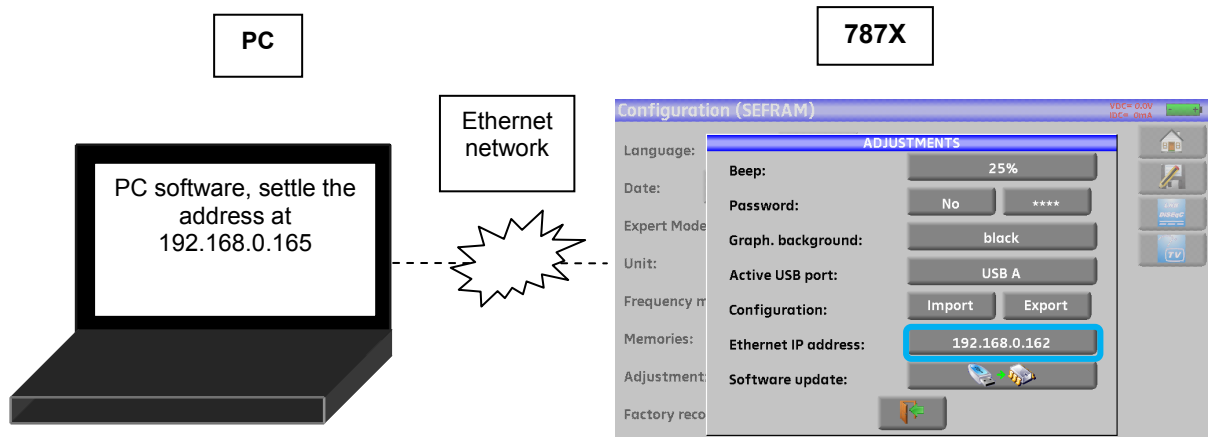



Attention: If the PC has already been connected to Ethernet (network, modem...), it is necessary to reboot the PC before connecting your appliance.

For the **Ethernet** connection of your appliance to a computer network, see the following scheme:



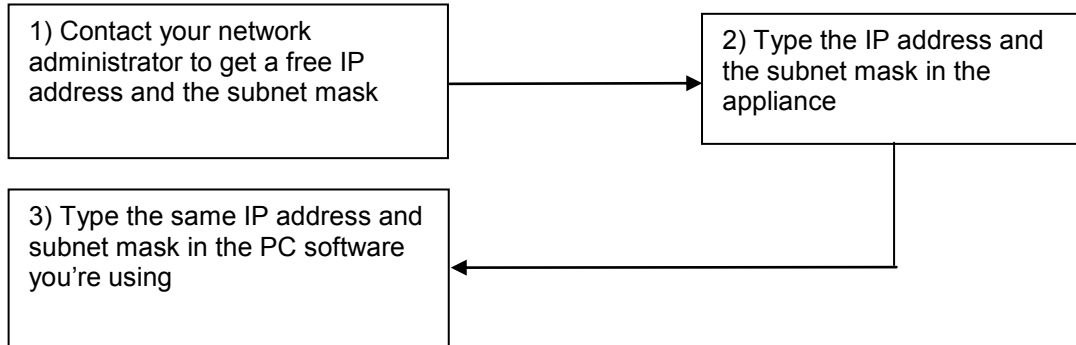


23 Multistream capability (7876 only)

The Multistream is used by specific broadcasters in DVB-S2 (several multiplex in a unique transponder).

Example : **Atlantic Bird3 5°W** uses Multistream for some transponders
(Frequency: 12648MHz Vertical, DVB-S2 29500, ISI: 1/2, Gold code: 121212)

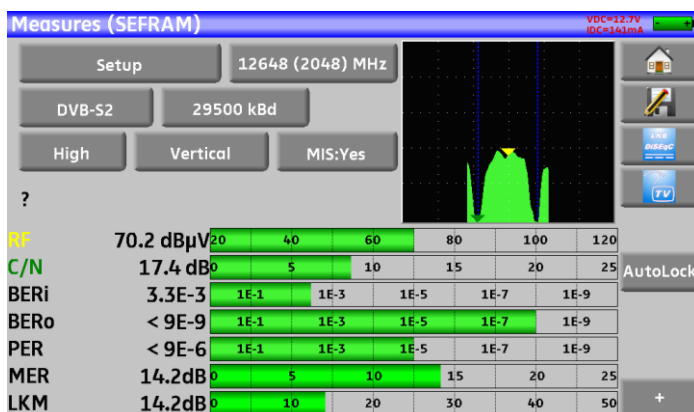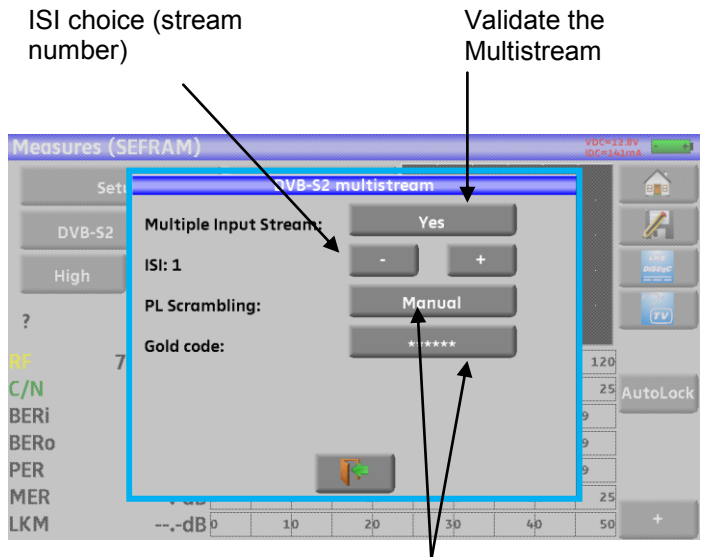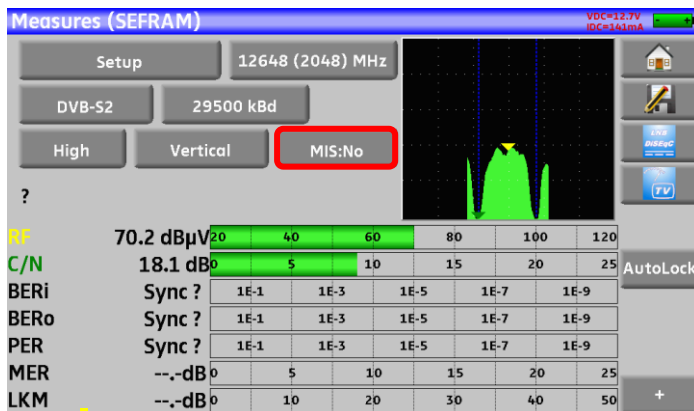

To use Multistream function, press MIS in the Measures screen :



Coding of the streams:


- NO: no coding
- MANUAL : a code is needed
- AUTO: all 3 codes entered will be tested

24 GPS option (7876 only)

To access the GPS function, press Home  then 

24.1 VIEW function

The appliance starts searching several satellites to find its own position with accuracy:

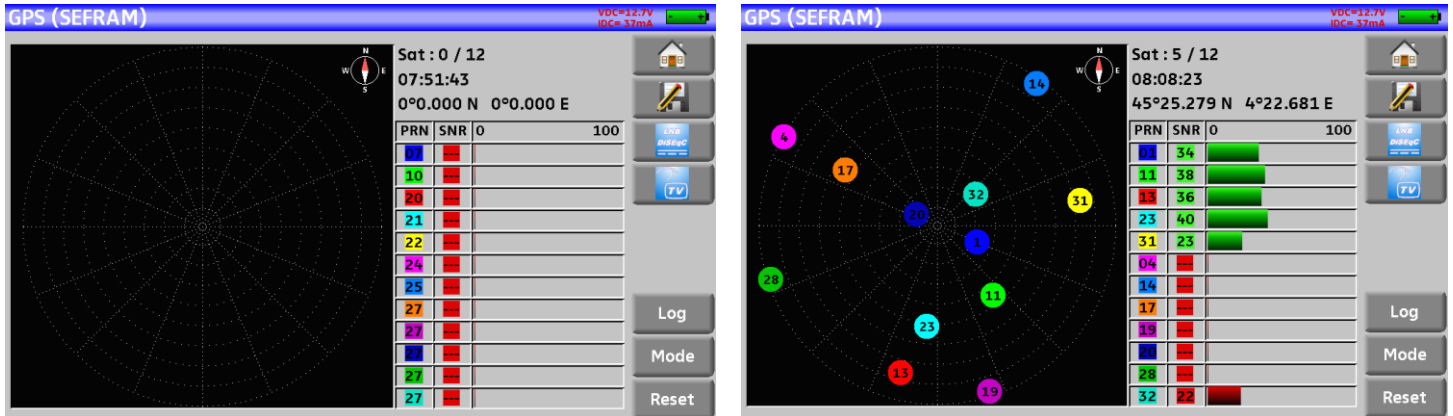


When satellites have been found, they appear on the pattern; non-locked satellites blink. The data on the right are:

- the number of locked satellites on the total possible satellites
- the UTC time
- the latitude and longitude of your place
- a table including the PRN (Pseudorandom Noise), the identification label of the satellites, the SNR (Signal/Noise Ratio), which means the reception percentage of the satellite (0% = no signal) and the graphical representation of the SNR.

24.2 LOG function

This function allows you to register the number of locked satellites as a function of time.

The key below selects the acquisition time (10 mn, 1 h, 8 h, 24 h or 7 days)

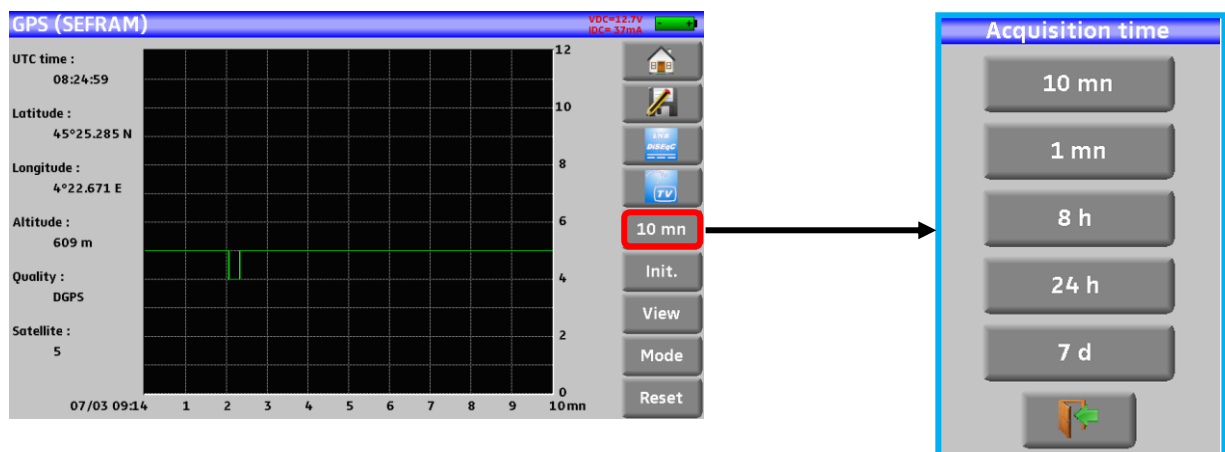

The « Init » key initializes the record and the « reset » key resets then satellite search.

24.3 MODE function

This function gives details and statuts of the GPS. It will display:

- UTC time
- coordinates (latitude, longitude, altitude) of the GPS module
- satellites used by the GPS module
- level measurement (or measurement map)

User can select :


- Type of measurement (level, measurement map, BER/MER)
- Acquisition type :
 - Manual (a single acquisition)
 - Timer (from 1s to 3600s repetitive acquisition)
 - Distance (acquisition triggered by distance, from 10 to 10000m)
 - Scale used for graphical display (from 10 to 30000m)
- Recording measurements and files

Operation:


In a first step, the GPS looks for several satellite to get a correct positioning.

The “Status GPS” area displays coordinates supplied by the GPS.

The “Measures” area displays the results of measurements

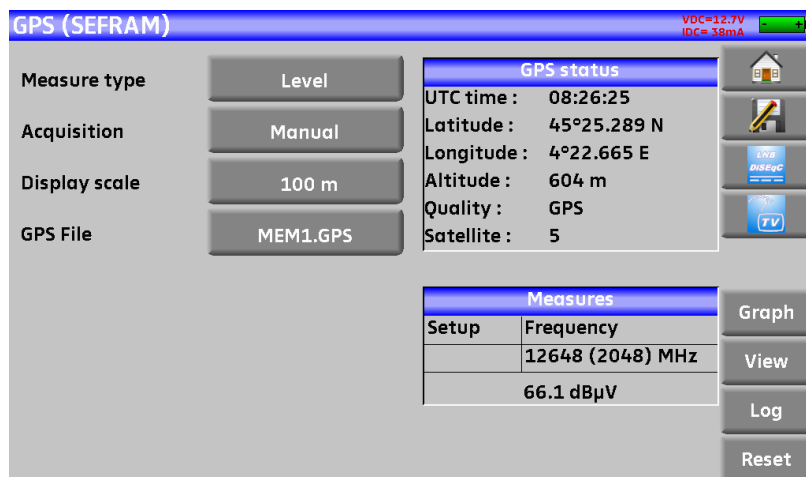

From Mode function, you can access to the graphical display of results by pressing « Graph »

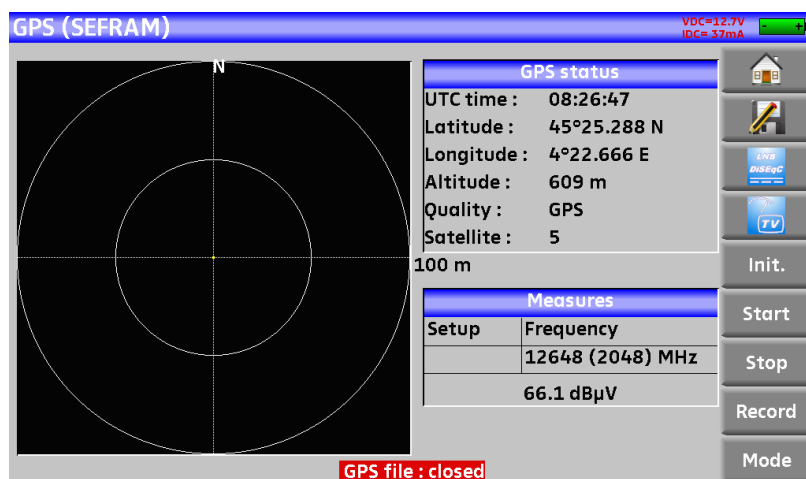

Init : resets the GPS display, the centre becomes the current position

Start : opens the GPS file to start recording

Stop : closes the GPS file


Record : records a point (position/measure) in the GPS file

The graphical zone represents the display of the current co-ordinates from the original position (initialised by a press on the "Init" key)

The current position is displayed by a YELLOW cross.

The other crosses, representing the recorded points, are displayed in color:

- RED, for Level Measurement outside the thresholds of the current Standard
- GREEN, for Level Measurement between the thresholds of the current Standard
- BLUE, in Measurement Map as an associated measurement

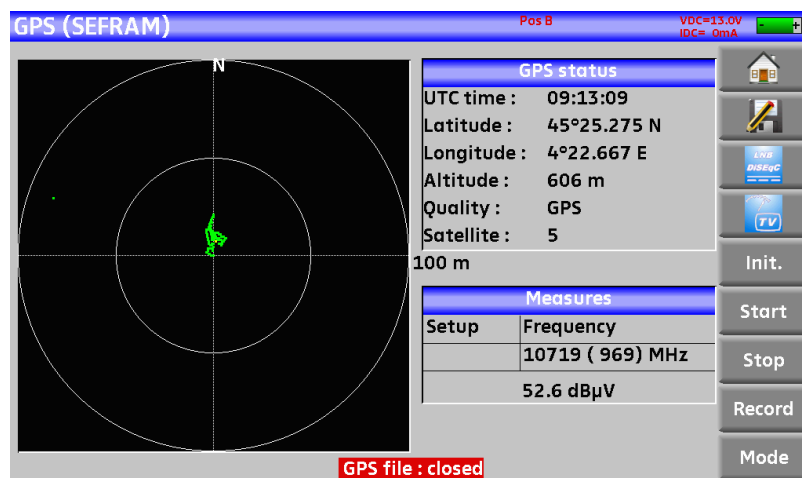

Caution :

- 'Init' does not close the current GPS file, it only resets display
- in Timer or Distance acquisition mode, the 'Record' key is always active so you can force a record (by pressing the key)

24.4 Recording a file

- set up the parameters as described above
- enter the name of the GPS file; you cannot add dots to a previously created file: a message would be displayed
- wait for the end of the research of the GPS satellites; when a stable position is displayed, you can start recording dots
- close the GPS file after acquisition

The data recorded in the file is:

- the name of the file, with date and time

- the measured setup(s) (frequency, standard, thresholds)

and for each dot:

- date
- time
- latitude
- longitude
- number of detected satellites
- level for each setup

Attention:

- if the GPS positioning is interrupted, the recording remains pending
- the file remains valid event if you have not closed it (i.e. power shortage)
- the measurement may take time: a timer is displayed while recording a dot
- if the measurement time is longer than the programmed timing (Timer mode), the recording period will result from the required time for the measurement
- when the number of recorded dots reaches the maximum value (see Specifications), the file is automatically closed.


24.5 XFER2000 transfer software

You can upload to your PC the GPS files recorded on your appliance thanks to the “XFER2000” software, to the EXCEL™ spreadsheet application:

- ➔ copy XFER2000.XLS into your work directory
- ➔ open XFER2000.XLS with EXCEL™. The macro-software “XFER2000” starts automatically
- ➔ connect your appliance to your computer through the USB port or Ethernet
- ➔ configure the address
- ➔ select a file in the list of recorded files
- ➔ click > XFER <


An EXCEL™ sheet is added to the existing ones and filled with the data from the selected GPS file.

Control pannel XFER2000:

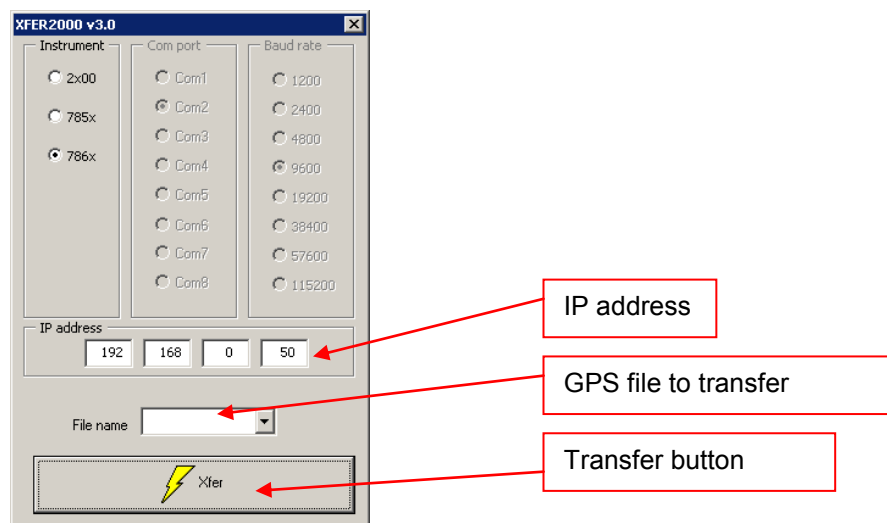

Attention:

- a new EXCEL™ sheet is added to the existing ones each time you click on XFER; do not exceed the maximum number of sheets of your spreadsheet application
- a “XFER2000” button is added to the main bar of EXCEL™ the first time you use XFER2000; click on this button to transfer new files.

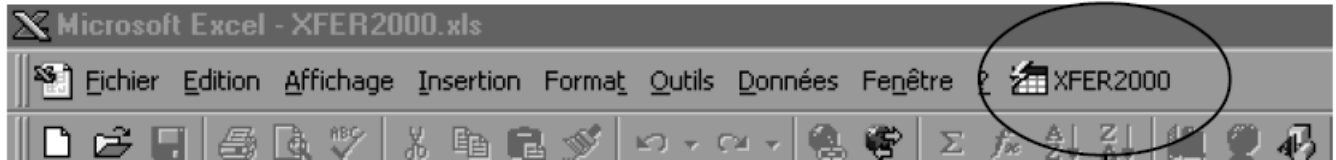

new tool button

EXCEL sheet filled with the GPS file:

	A	B	C	D	E	F	G
1	File name		MEM1.GPS				
2	Date		04/06/2002				
3	Time		17:17:00				
4	Original Latitude		45°25,286	North			
5	Original Longitude		4°22,669	East			
6	Place name						
7	Frequency band		5-865MHz				
8	Unity		d3μV				
9							
10					Set up	3	
11					Name	CANAL 3	
12					Frequency	163,125	
13					Standard	QAM	
14					High threshold	20,0	
15					Low threshold	20,0	
16							
17	Date	Time	Latitude	Longitude	Satellite	Measure	Meas
18	06/04/2002	17:17:41	45°25,286	4°22,669	7	23,4	
19	06/04/2002	17:17:41	45°25,286	4°22,669	7	23,4	
20	06/04/2002	17:17:42	45°25,286	4°22,669	7	23,4	
21	06/04/2002	17:17:42	45°25,286	4°22,669	7	23,4	
22	06/04/2002	17:17:43	45°25,286	4°22,669	7	23,4	
23	06/04/2002	17:17:43	45°25,286	4°22,669	7	23,4	
24	06/04/2002	17:17:44	45°25,286	4°22,669	7	23,4	
25	06/04/2002	17:17:44	45°25,286	4°22,669	7	23,4	
26	06/04/2002	17:17:44	45°25,286	4°22,669	7	23,4	
27	06/04/2002	17:17:45	45°25,286	4°22,669	7	23,4	
28	06/04/2002	17:17:45	45°25,286	4°22,669	7	23,4	
29	06/04/2002	17:17:46	45°25,286	4°22,669	7	23,4	
30							
31							
32							
33							
34							
35							

Example of print of the EXCEL™ sheet of a GPS file: Positions and Measurement map:

24.6 GIS mapping software


File name MEM5.GPS
Date 04/06/2002
Time 17:28:00
Original Latitude 45°25,286 North
Original Longitude 4°22,668 East
Place name
Frequency band 5-865MHz
Unity dBuV

Set up	0	1	2	3	4	5	6	7	8	9
Name	CANAL 0	CANAL 1	CANAL 2	CANAL 3	CANAL 4	CANAL 5	CANAL 6	CANAL 7	CANAL 8	CANAL 9
Frequency	139,125	147,125	155,125	163,125	171,125	179,125	187,125	195,125	203,125	211,125
Standard	BG	DAM	COFDM	Porteuse	Porteuse	Porteuse	FM	FM	BG	BG
High threshold	20,0	20,0	20,0	47,0	47,0	47,0	20,0	20,0	20,0	20,0
Low threshold	20,0	20,0	20,0	20,0	20,0	20,0	20,0	20,0	20,0	20,0




Date	Time	Latitude	Longitude	Satellite	Measure	Measure	Measure	Measure	Measure	Measure	Measure	Measure	Measure	Measure
06/04/2002	17:28:50	45°25,286	4°22,668	6	13,3	23,3	21,3	3,6	3,6	3,6	2,2	2,2	13,1	14,0
06/04/2002	17:28:52	45°25,286	4°22,668	6	12,3	7,4	20,8	3,6	3,5	3,6	2,2	2,2	12,3	14,0
06/04/2002	17:28:56	45°25,286	4°22,668	6	12,5	14,4	14,9	3,7	3,6	3,6	2,2	2,2	14,1	14,1
06/04/2002	17:28:58	45°25,286	4°22,668	6	13,3	13,3	21,9	3,7	3,6	3,6	2,2	2,3	13,1	12,9
06/04/2002	17:29:00	45°25,286	4°22,668	6	13,3	13,3	18,1	3,7	3,6	3,6	2,2	2,2	14,1	13,6
06/04/2002	17:29:05	45°25,286	4°22,668	6	12,3	22,5	21,6	3,7	3,6	3,6	2,2	2,3	13,3	13,1
06/04/2002	17:29:07	45°25,286	4°22,668	6	11,6	23,0	19,6	3,7	3,6	3,6	2,2	2,2	13,5	15,7
06/04/2002	17:29:13	45°25,286	4°22,668	6	13,2	23,2	20,0	3,7	3,7	3,6	2,2	2,3	13,5	12,4
06/04/2002	17:29:16	45°25,286	4°22,667	6	12,9	15,1	15,4	3,7	3,7	3,7	2,2	2,3	13,9	13,7

XFER2000 imports data, whose format is compatible with most GIS mapping software (Geographical Information Software).


In the EXCEL™ spreadsheet application, you can register data under EXCEL™ or Text format for exportation to your mapping software.



XFER2000

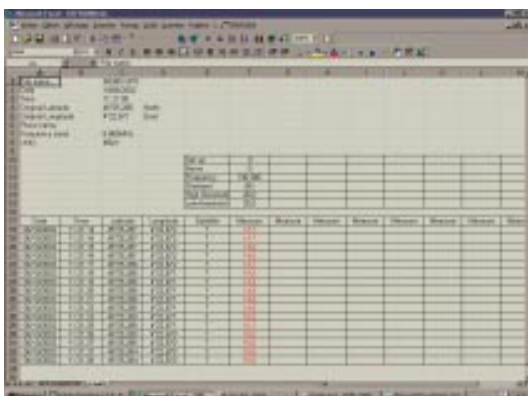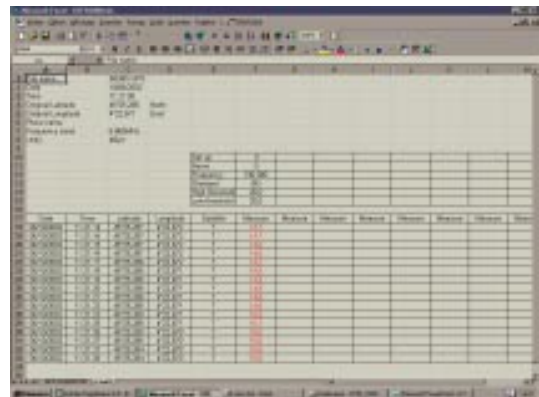

GIS SOFTWARE

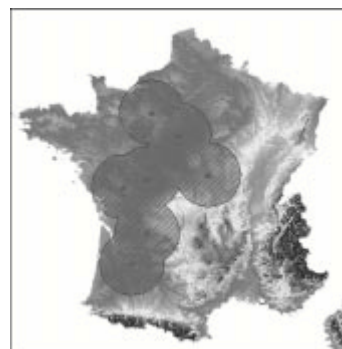

25 Optical Power Measurement option (not available for 7871)

This option will be described in a future revision of the manual

26 WIFI option (not available for 7871)

This option will be described in a future revision of the manual

27 HDMI Connection (not available for 7871)

The appliance includes a HDMI "output" connector;




Attention: When a HDMI cable is linked to the appliance, the touchscreen is inactive and the screen shuts off.

It is advisable to plug a mouse to the USB-A port of the appliance (the USB-A port must be active; see chapter [Active USB port](#)) to keep on working on the appliance.

This function allows you to visualize the screen of the appliance on a television (or any screen with a HDMI input); you can still manage the functions of the appliance (with the mouse); you can do measurements, display spectra or TV; the sound of TV is also transmitted to the television through HDMI.

Example of connection:

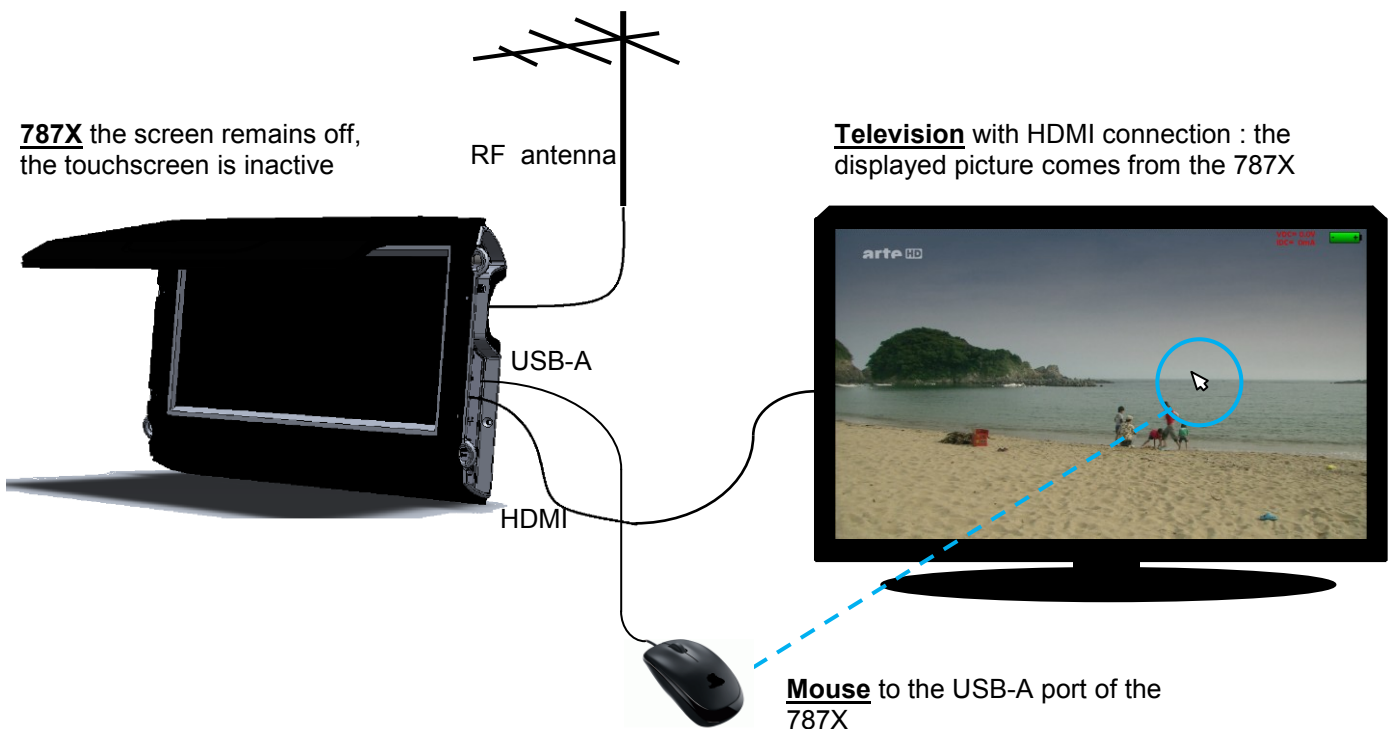


28 Displayed messages


The appliance may display messages while working.

28.1 Alert messages


Low battery: the appliance is about to shut off in a few minutes.

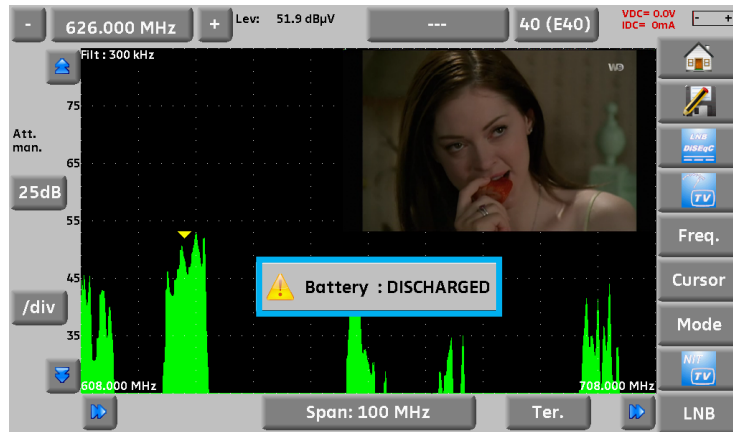

Confirmation request for an important action.

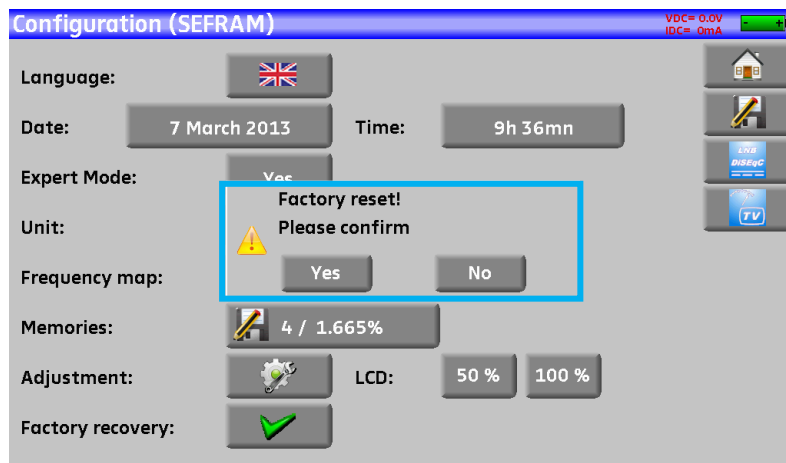

Remote power supply issue: cable under tension or excess intensity above maximum.

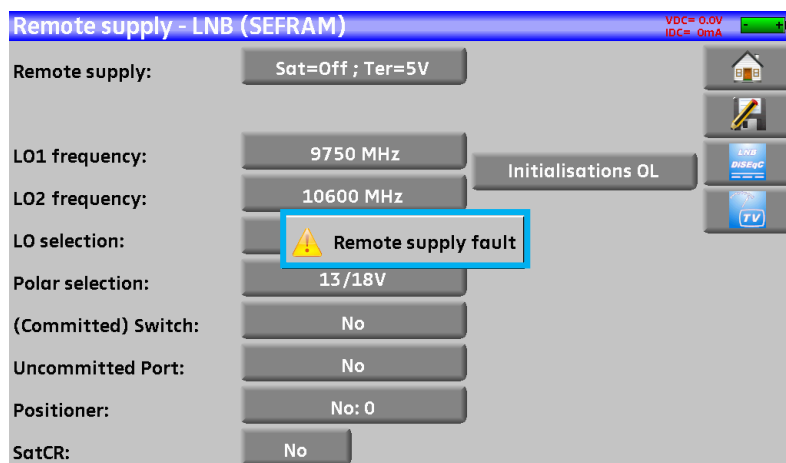

Messages of the same kind may show up; the pop up window is an alert; the corresponding message explains the issue.

28.2 Error messages

A message may show up at the bottom of the screen immediately after updating the software. Do not take it into account as far as it does not show up at a second start-up.

Else, or for any other problem, contact the **SEFRAM** technical support:

- **e-mail** : *support@sefram.fr*
- **telephone**: **+33 4 77 59 36 97**

29 Maintenance

This appliance requires some maintenance to meet its requirements and maintain its general characteristics.

	Consequences	Recommended periodicity of controls	Recommended use limit
BATTERY	Reduction of the battery life		200 charge / discharge cycles or 2 years
STRAPS	Breakdown	At each use Check the holding of the straps	
Back Light SCREEN	Reduction of visibility		2 years
Measurement setting / check	Erroneous measures	Once a year	18 months
CONNECTIONS	Erroneous measures	At any measurement	

This "advice" does not engage the responsibility of SEFRAM I.S.

It guarantees the best possible use of the characteristics and the preservation of the product.

Routine maintenance:

The basic maintenance is simply cleaning the outside of the appliance. Any other operation requires a trained personal.

Unplug the appliance before any intervention.

Do not let water flow inside the appliance: risk of electric shock.

Regularly clean the appliance under the following conditions:

- use soapy water
- never use any product containing petrol, benzene, alcohols that would attack silkscreen printings
- wipe out with a soft lint-free cloth
- use a solvent-free antistatic product to clean the screen.

For the carter:


- clean it with a clean dry cloth
- no solvent allowed.

INFORMATION ABOUT THE LCD COLOR SCREEN WITH ACTIVE MATRIX

Your SEFRAM field strength meter is equipped with a LCD color screen with active matrix.

This screen is provided by renowned manufacturers. In the current technical conditions of manufacture, they cannot guarantee 100% good functioning pixels in the display zone. They specify a number of possible defective pixels at the surface of the screen.

The SEFRAM quality service has preconditioned the mounting of the screen on your instrument to the respect of the acceptance conditions of the manufacturers.

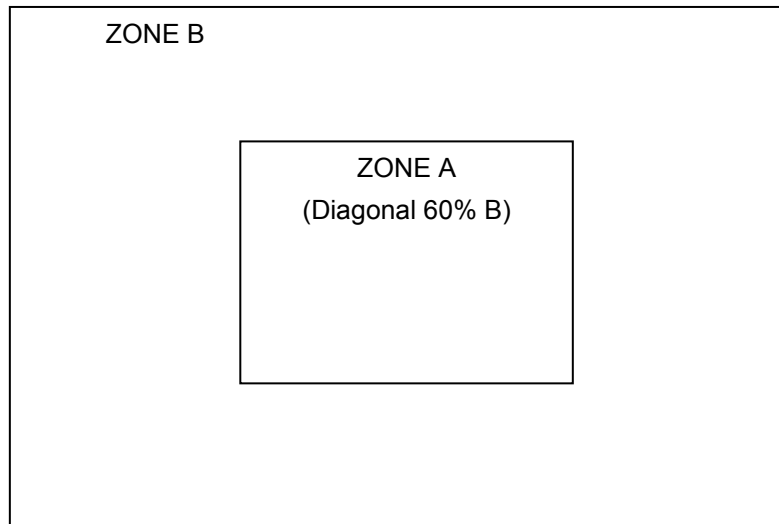

Acceptance criteria:

Zone A (central zone): total less than 5 defective pixels, less than 3 contiguous pixels

Zone B (total surface of the screen): less than 9 defective pixels on the whole surface of the screen, with respect of the conditions prevailing in zone A.

Is considered as defective any pixel on screen that does not light up or lights up in a different color as expected.

The contractual guarantee on your field strength measurer can be exerted only if these criteria are not met, as well at delivery as during the period of guarantee.

30 Technical specifications

30.1 Common specifications

Technical specifications		Terrestrial band	
Frequency range			
Range	5-900 MHz (45-900 for 7871)		
Resolution	Measure: 50 kHz, display 1 kHz		
Level measurements			
Dynamic range	20-120 dBμV (30-120 dBμV pour 5-45MHz)		
Noise floor level	10 dBμV typical		
Units	dBμV, dBmV, dBm, V		
Accuracy	±2dB +/- 0.05dB/°C		
Resolution	0,1dB		
Measurement Filter	Automatic according to standard: 100KHz - 300 kHz - 1MHz		
Standards	BG, DK, I, L, MN, FM, carrier, DVB-C, DVB-T/H, DVB-T2		
Measurements	RF, C/N		
Digital Measurements	DVB-T/H	DVB-T2	DVB-C (except 7871)
Bit Error rate (BER)	CBER (before Viterbi BERi) VBER (after Viterbi BERo) UNC (lost packets PER) Noise margin	LDPC (BERi) BCH (BERo) FER (frame error PER) Noise margin	BER (before Reed Solomon BERo) UNC (lost packets PER) Noise margin
Modulation error rate (MER)	5 - 35dB	5 - 35dB	20 - 40dB
MER per carrier	yes except 7871,7872	yes except 7871,7872	-
Symbol rate	-	-	1 to 7.224 Ms/s (J.83A)
Bandwidth	6MHz, 7 MHz, 8 MHz	5MHz, 6MHz, 7 MHz, 8 MHz	-
Mode	-	SISO, MISO, PLP single or multiple	-
FFT type	2k et 8k, auto et manuel	1k, 2k, 4k, 8k, 16k et 32k + extended bandwidth, auto	-
Constellation	QPSK, 16 et 64QAM, auto	QPSK, 16, 64 et 256QAM auto	16, 32, 64, 128 et 256QAM
Viterbi rate	1/2, 2/3, 3/4, 5/6, 7/8 (auto)	1/2, 3/5, 2/3, 3/4, 4/5, 5/6 (auto)	-
Guard interval	auto and manual	auto	-
Inversion of spectrum	auto	auto	auto
HP/LP	yes	-	-
PLP choice	-	yes	-
Standards	ETS 301-701	ETS 302-755	ITU J83-Annexe A
Pre-echoes /Echoes / Impulse response			
Dynamic range	30 dB, 75km (en 8k)	50 dB, -75km +75km (en 8k)	-
Units	μs, km, miles	μs, km, miles	-
Affichage Constellation rapide			
	yes	yes	yes
Fast spectrum analysis			
Ultra fast mode	350 ms typ. (3 times/s)		
Expert mode (7875-7876)	yes, with all information displayed on spectrum		
Filters (according to the span)	100kHz, 300kHz, 1 MHz		
Attenuator	Automatic or manual (0 to 50 dB with 10 dB steps)		
Dynamic range (display)	60 dB (10 dB/div)		
NIT and OSD TV	yes		
Span	5MHz to full span in 1, 2, 5sequences		

Technical specifications		Satellite band
Frequency range		
Range	900-2200 MHz	
Resolution	Measure : 1MHz, display 1MHz	
Level measurements		
Dynamic range	30-110 dBμV	
Noise floor level	20 dBμV typical	
Units	dBμV, dBmV, dBm, V	
Accuracy	±2dB +/- 0.05dB/°C	
Resolution	0,1dB	
Filters	Automatic according to standard: 1MHz - 3MHz - 10MHz	
Standards	PAL, SECAM, NTSC, DVB-S, DVB-S2, DSS	
Measurements	RF, C/N	
Digital measurements	DVB-S, DSS	DVB-S2
Bit Error rate (BER)	CBER (before Viterbi BERi) VBER (after Viterbi BERo) UNC (lost packets PER) Link margin	LDPC (BERi) BCH (BERo) PER Link margin
Modulation Error rate (MER)	0-20dB	
Symbol rate	1 to 45Ms/s	1 to 45Ms/s
Constellation	QPSK	QPSK, 8PSK, 16APSK, 32APSK
Viterbi rate	1/2, 2/3, 3/4, 5/6, 6/7, 7/8 (auto)	2/5, 1/2, 3/5, 2/3, 3/4, 5/6, 8/9, 9/10 (auto)
Inverted spectrum	auto	auto
Standards	ETS 300-421	ETS 302-307
Constellation diagram		
Constellation diagram display	yes	yes
Fast spectrum analysis		
Ultra Fast mode	350 ms typ. (3 times/s)	
Expert mode (7875-7876)	yes, with all information displayed on spectrum	
Filters (according to span)	1MHz, 3MHz, 10MHz	
Attenuator	Automatic or manual (0 to 50 dB with 10 dB steps)	
Dynamic range (display)	60 dB (10 dB/div)	
NIT and OSD TV	yes	
Check sat mode		
	Fast search with NIT, for sigle or dual LNC 30 satellites typical, with Europe table loaded 4 transponders per satellite, user's defined	

Remote supply	Terrestrial	Satellite
Voltage	5V/13V/18 V/24V, 500 mA max (300mA for 24V)	13/18 V, 500 mA max
DiSEqC	-	DiSEqC 1.2, control of dish motor, committed & uncommitted switches
Mini DiSEqC (22kHz)	-	22 kHz, ToneBurst
SatCR	-	Extension of DiSEqC protocol can control up to 8 slots max.
Measurement map		
Capacity	Scrolling of 50 setups maximum	
Display	graphical (bargraph), tilt measurement	
Storage		
Memory	Internal in non-volatile memory, or external USB stick (not supplied)	
Data saved	sites, measures (level, BER/MER, measurements map, Spectrum,...)	
Capacity	512 Kb (1000 files max or folders)	
TV picture and sound		
Free to Air digital programs	SD (standard definition) and HD (high definition H.264)	
Sound	MPEG-1, MPEG-2, AAC, HE AAC, Dolby® Digital, Dolby® Digital Plus	
Encrypted programs (*) except 7871	yes	yes
RF input		
Input	75 Ohms, F and BNC (with adaptors supplied)	
Max. permitted voltage	80 V DC, 80 Vrms.. /50Hz	
Auxiliary input / output		
Interfaces	USB A, USB mini B, Ethernet 10baseT (RJ45)	
DC supply	5.5 mm jack, 15 V max, 5 A max	
ASI TS input / output (7875-7876)	yes, I/O on BNC plugs	
HDMI ouput	yes	
WiFi antenna input	Factory option (not available for 7871)	
GPS antenna input	Option for 7876 (contact us)	

General specifications	
Display	LCD TFT 10 inch color touch screen, capacitive technology, 16/9, high luminosity backlight 1000 cd/m², 1280x800 dots
External supply	Main adaptor 110/230 VAC, with 5,5mm jack, 15 V 6 A
Battery	LiOn 70W (not removable by user)
Autonomy	4 hours typical, depending of use
Charging time	1,5 hour for 80% of capacity
Operating temperature	-5°C to 45°C
Storage temperature	-10°C to 60°C
EMC and safety	NF-EN 61362-1 / NF-EN 61326-3 / NF-EN 61010-1
Dimensions	280 x 230x 85 mm
Weight	2,9 kg (including battery and protective pouch)

Supplied with: main adaptor, user's manual (CD-ROM), F/F and F/BNC adaptor, protective pouch (mounted) with belt and clip, transportation bag.

(*): the display of encrypted programs is possible for supported encryption, with a valid subscription. Contact our technical department for more information.

30.2 Accessories

Supplied with: main adaptor, user's manual (CD-ROM), F/F and F/BNC adaptor, protective pouch (mounted) with belt and clip, transportation bag.

Optional accessories:

• Car cigar lighter adaptor:	P/N 978361000
• F/F adaptor:	P/N 213200012
• F/BNC adaptor:	P/N 213200011
• BNC/TV female adaptor:	P/N 213200010
• USB type A to mini B cable:	P/N 978551100
• ETHERNET cable (crossed) :	P/N 298504246
• WiFi factory option (not available for 7871):	P/N 978752000
• Carrying bag :	P/N 978751000
• Optical Power Measurement (OPM) (not for 7871):	P/N 978754000
• HDMI cable (not for 7871):	P/N 978759100

To check for price and availability, please contact our sales department:

By phone :+33 4 77 59 36 81

Or by E-mail : sales@sefram.fr

30.3 V, dB μ V, dBmV et dBm conversion

dB μ V (dBmV) is a logarithmic ratio between a measured voltage U_d and a reference voltage U_r .

The reference voltage is $U_r = 1 \mu V$ (1 mV)

$$N = 20 \log (U_d/U_r)$$

dBm is a logarithmic ratio between a measured power P_d and a reference power P_r .

The reference power is $P_r = 1 \text{ mW}$ into 75 ohms.

$$N = 10 \log (P_d/P_r) \text{ with } P_d = U_d^2 / 75$$

$U_d = 1 \mu V$	$N = 0 \text{ dB}\mu V$	$N = -60 \text{ dBmV}$	$N = -108.75 \text{ dBm}$
$U_d = 1 \text{ mV}$	$N = 60 \text{ dB}\mu V$	$N = 0 \text{ dBmV}$	$N = -48.75 \text{ dBm}$
$U_d = 1 \text{ V}$	$N = 120 \text{ dB}\mu V$	$N = 60 \text{ dBmV}$	$N = 11.25 \text{ dBm}$

30.4 Typical values for measurements

Values given are indicatives, minimum and maximum for good signal quality

Measurements	Level, power (dBμV)		C/N (dB)	BER	MER (dB)	modulation
	mini	maxi				
Terrestrial						
Analogue TV	57	74	> 45	-	-	-
FM	50	66	> 38	-	-	-
DVB-T/H	35	70	> 26	VBER < 2^E-4	> 26	8K, 64QAM, 1/32, 2/3
DVB-T2	35	70	> 22	FER < 2^E-7	> 22	32K, 256QAM, 1/8, 2/3
DVB-C	57	74	> 31	BER < 2^E-4	> 31	64QAM
Satellite						
Analogue TV	47	77	> 15	-	-	-
DVB-S, DSS	47	77	> 11	VBER < 2^E-4	> 11	QPSK, 3/4
DVB-S2	47	77	> 8	PER < 1^E-7	> 8	8PSK, 2/3

31 CE Declaration

DECLARATION OF CE CONFORMITY

according to EEC directives and NF EN 45014 norm

DECLARATION DE CONFORMITE CE

suivant directives CEE et norme NF EN 45014



SEFRAM INSTRUMENTS & SYSTEMES
32, rue Edouard MARTEL
42009 SAINT-ETIENNE Cedex 2 (FRANCE)

Declares, that the below mentioned product complies with :

Déclare que le produit désigné ci-après est conforme à :

The European low voltage directive 2006/95/EEC :

La directive Européenne basse tension 2006/95/CE

NF EN 61010-1 Safety requirements for electrical equipment for measurement, control and laboratory use. Règles de sécurité pour les appareils électriques de mesurage, de régulation et de laboratoire.

The European EMC directive 2004/108/EEC :

Emission standard EN 61326-1.

Immunity standard EN 61326-1.

La directive Européenne CEM 2004/108/CE :

En émission selon NF EN 61326-1.

En immunité selon NF EN 61326-1.

Product name Désignation : Field Strength Meter Mesureur de champ

Model Type : 7871 - 7872 - 7875 - 7876

Compliance was demonstrated in listed laboratory and record in test report number

La conformité a été démontrée dans un laboratoire reconnu et enregistrée dans le rapport numéro **RC 787x**

SAINT-ETIENNE the :

March 4, 2013

Name/Position :

CLERJON/Quality Manager

SEFRAM
32, rue Edouard MARTEL
BP 55
F42009 SAINT-ETIENNE Cedex 2
France

Phone : +33 (0)4 77 59 01 01

Fax : +33 (0)4 77 57 23 23

Sales department e-mail : sales@sefram.fr

Technical support e-mail : support@sefram.fr

Website : www.sefram.fr